

EPOXY STONE FLOOR CLEANING INSTRUCTIONS

INTERIOR

We recommend vacuuming the epoxy stone every week depending on the traffic on your floor. If you have pets or have heavy traffic, you can damp mop the floor as needed. You may use vacuums with a brush head, but do not use the beater bar on your epoxy stone floor.

When spills occur, simply extract the spill with a wet/dry vac. Next pour hot tap water onto the spill areas and vacuum it thoroughly with a wet/dry vac. Repeat until water becomes clear or spill is removed. If necessary, use a scrub brush to get in between the rocks. Greasy spills and dairy spills can be cleaned with ammonia water or cleaners similar to Clorox Clean Up. Always remove the cleaner with hot tap water and a vacuum. Never use powders or other oil-based cleaners (such as orangeoil based cleaners) on the epoxy stone floor.

The epoxy stone can be steam cleaned and resealed when needed. Heavy traffic on your floor may necessitate steam cleaning and resealing periodically.

EXTERIOR

The epoxy stone can be sprayed down with a garden hose or a leaf blower. You can also use all of the same techniques we recommend for interior floors on your exterior epoxy stone. We recommend thorough cleaning and resealing exterior applications of epoxy stone every 2-3 years to maintain UV protection for longest life.

If using a pressure washer to clean your epoxy stone you shouldn't use one stronger than 2000 PSI. Also keep sprayer tip a minimum of 12 inches from the surface.

Northwest Epoxy Stone & Coatings P.O. Box 2497 • Coeur d' Alene, ID 83816

Phone: 208.667.0573