



- A** +48V:  
UP TURNS THE ANSER ON (PHANTOM  
POWER REQUIRED); DOWN FOR NORMAL  
OPERATION
- B** PRESENCE BOOST:  
UP INCREASES HIGH FREQUENCY;  
DOWN IS A FLAT FREQUENCY RESPONSE.
- C** BASS ROLL OFF:  
UP REDUCES LOW FREQUENCY; DOWN  
IS A FLAT FREQUENCY RESPONSE.