

Questions?

Visit www.nandahome.com or email service@nandahome.com

LIMITED WARRANTY TO ORIGINAL PURCHASER

Nanda LLC ("Nanda") warrants this Nanda-branded hardware product against defects in materials and workmanship under normal use for a period of ninety (90) days from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, at its option, Nanda will either (1) repair the hardware defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product, provided that the product is returned to Nanda promptly during the Warranty Period. Nanda may request that you replace defective parts with new or refurbished user-installable parts that Nanda provides in fulfillment of its warranty obligation. A replacement product or part, including a user-installable part that has been installed in accordance with the instructions provided by Nanda, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Nanda's property.

EXCLUSIONS AND LIMITATIONS

This Limited Warranty applies only to the product Clocky® manufactured by or for Nanda that can be identified by the "Nanda" name, trademark or logo affixed to the product.

This warranty does not apply: (a) to damage caused by accident, abuse, misuse, tampering with or alteration to the product or any conditions whatsoever that are beyond the control of Nanda (b) to damage caused by operating the product outside the permitted or intended uses described by Nanda; or (c) if the product has been opened. Service or repair of this product by anyone other than Nanda voids the warranty.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE. NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON NANDA.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW, NANDA IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE, LOSS OF REVENUE; LOSS OF ACTUAL OR ANTICIPATED PROFITS; LOSS OF THE USE OF MONEY; LOSS OF BUSINESS; OR LOSS OF OPPORTUNITY; NOR SHALL RECOVERY OF ANY KIND AGAINST NANDA BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY NANDA AND CAUSING THE ALLEGED DAMAGE.

WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY NANDA NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF NANDA. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

CONSUMER PROTECTION LAWS

This warranty gives you specific legal rights, and you may also have other rights which vary under local laws. Any implied warranties required by law shall be limited in duration to the Warranty Period. These implied warranties will continue in force only during the Warranty Period. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The above limitations will not apply in case of personal injury where and to the extent that applicable law requires such liability.

OBTAINING WARRANTY SERVICE

Please access and review the online resources before requesting warranty service. If the product is still not functioning properly after making use of the resources, please contact Nanda for warranty service by emailing service@nandahome.com, or calling toll-free 866.494.0494.


Nanda may send the product to a Nanda repair service location for service by (i) sending you prepaid way bills (and if you no longer have the original packaging, Nanda may send you packaging material) to enable you to ship the product to Nanda's repair service location for service, or (ii) by sending you new or refurbished customer-installable replacement product or parts to enable you to service or exchange your own product ("DIY Service"). Upon receipt of the replacement product or part, the original product or part becomes the property of Nanda and you agree to follow instructions, including, if required, arranging the return of original product or part to Nanda in a timely manner. When providing DIY Service requiring the return of the original product or part, Nanda may require a credit card authorization as security for the retail price of the replacement product or part and applicable shipping costs. If you follow instructions, Nanda will cancel the credit card authorization, so you will not be charged for the product or part and shipping costs. If you fail to return the replaced product or part as instructed, Nanda will charge the credit card for the authorized amount. Service options are subject to change at any time.



This is a guide for the newest addition to your family, Clocky®, the alarm clock that runs away and hides to get you out of bed. To reduce the risk of injury, prevent loss of warranty, and/or damage to this product, follow these instructions as you welcome Clocky into your home.

Quick start

Install batteries Turn Clocky around and unscrew the battery door using a small screwdriver. Insert 4 Alkaline AAA batteries. Follow the labels printed inside the battery compartment to install the batteries in the right direction.

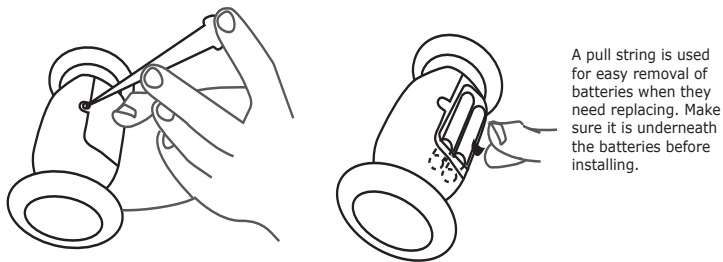

A pull string is used for easy removal of batteries when they need replacing. Make sure it is underneath the batteries before installing.

Select 12 or 24 hour mode To switch between 12 and 24 hour mode, press and hold the 't' button for 3 seconds. To distinguish between AM and PM in 12 hour mode, note the presence or absence of the PM sign.


Set Time Press the 't' button once. The current time screen will begin flashing. Use the 'h' and 'm' buttons to increment hour and minutes until the correct time is reached. To increment hours and minutes faster, press and hold the 'h' or 'm' buttons. To leave set time mode, press the 't' button again or wait until the current time screen stops flashing.

Set Alarm Time Press the 'a' button once. The alarm time screen will begin flashing. Use the 'h' and 'm' buttons to increment hour and minutes until the alarm time is reached. To increment hours and minutes faster, press and hold the 'h' or 'm' buttons. To leave set alarm mode, press the 'a' button again or wait until the alarm time screen stops flashing.

Set Snooze Time Press the 'a' button twice rapidly. The snooze time is set to a 1 minute default. Press the 'm' button to choose your desired number of snooze minutes 0-9. If 0 is chosen, the snooze button will be disabled. To leave this mode, press the 'a' button again or just wait for the current time screen to resume.

Turn Alarm On Press the alarm bell button located on the clock face. A corresponding icon will show up on the screen to indicate that the alarm state is on.

Turn Wheels On Press the wheels button located on the clock face. A corresponding icon will show up on the screen to indicate that the wheels are on.

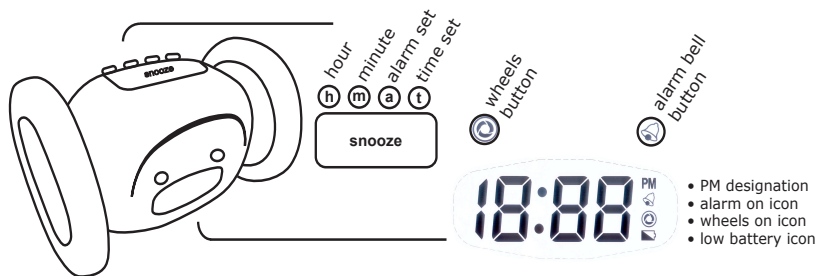

The next time the alarm sounds, you can snooze one time. If you do not turn off the alarm in this time, Clocky will start beeping and run away. If 0 was chosen as the snooze time, Clocky will move away as soon as the alarm sounds.

Snooze Press the snooze button to stop the alarm for the number of minutes you designated in the snooze time screen. You can only snooze once before Clocky runs away. After Clocky runs away, you may snooze again.

Turn Alarm Off Press the alarm bell button again. This turns off the alarm, removes the alarm bell icon from the screen, and stops the wheels if they are moving. Please note that the wheels will never turn on when the alarm is in the off state.

Turn Wheels Off Press the wheels button again only if you want Clocky to stay put the next time the alarm rings. The wheels icon will disappear from the screen.

Operation

- Clocky will always start out moving forward. Place him near the edge of your nightstand facing forward.
- He can jump from a nightstand up to 3 feet high. Don't put him higher than this!
- He can run on wood and most carpeting. We don't recommend using him on shag or other thick carpeting. For a softer landing on wood floors, you could use a rug.
- Clocky will move around for about 50 seconds in a few different directions before he finds a spot to rest. Clocky's backlight will flash whenever he beeps or moves.
- Sometimes when Clocky hits a wall, he'll get dizzy and spin around.
- After moving, he will continue beeping for 9 minutes or until you turn off his alarm.
- His language sounds like a combination of regular alarm beeps and mixed up ones.
- Find Clocky and put him back on your nightstand. Don't leave him on the floor!
- To view the time display at night, press any button to activate a 3 second backlight.
- The low battery icon and the clock will flash early enough to warn you when the batteries need replacing. Battery life varies depending on usage.

Troubleshooting

- If the alarm does not sound when you think it should, check to make sure that
 1. the alarm time and current time have the same AM or PM designation
 2. the alarm bell button has been pressed on and corresponding icon is on screen
- If the clock is flashing with the low battery icon, your batteries need replacing.

Warnings!

- Clocky is not a toy. Children under 6 should be supervised when he is in use.
- Clocky is an indoor device only.
- Clocky should sit on a nightstand NO HIGHER THAN 3 FEET.
- Only the wheels should hit the ground when he jumps. Remove objects on the floor that might come into contact with his body.
- If the room where Clocky lives contains a balcony or access to downward steps, a physical barrier should be used to prevent the hazard of him running off of the balcony or onto the stairs.
- Do not hold Clocky's wheels or manually turn them when they are in motion.
- Do not throw Clocky or drop him yourself. Let him roll off of a table by himself.
- If you need to stop the wheels immediately for any reason, press snooze.
- Do not chew the wheel's tires. If your pet has chewed the tires, contact us to find out about obtaining replacement parts before using again.
- Do not place near liquids or in back of a glass of water that may be knocked down.
- Do not open the product, tamper and/or remove internal components.
- Do not operate if the product is damaged. Do not try to fix if broken.

