

Select and View Assets in a Floor Plan

To view telecom assets in the Telecom Console's floor plan, check one or more asset types from the checkboxes located above the drawing. When you open a floor plan, Equipment is checked by default:

Asset Type: Equipment Jacks Faceplates Patch Panels Rooms

The Action Feature will be enabled only for a single asset type

Note: You must have only one asset type checked in order to select an action from the Action drop-down list. See [View Telecom Connections in the Floor Plan](#) for procedures and examples related to these actions.

To practice the procedures below, use the console's filter to open the floor plan for SRL 03, which has a lot of asset sample data.

View Assets

To view all assets of a particular type in the floor plan, check the asset type above the floor plan. If desired, you can check more than one asset type.

To view data for a single asset, check only one asset type above the floor plan. Then select the asset of interest in the plan. The selected asset appears in the console's left panel.

To clear all selections and start over, uncheck all asset types above the floor plan. If you have selected a particular asset in the plan, clear the asset's Equipment Code from the Smart Search field to restore the full asset list in the console's left panel.

Floor Plan Tools

Tooltips identify three icons to the left of the Action drop-down list:

Maximize drawing	Click to show the floor plan in the entire console. Click Minimize drawing to restore the left panel and return the floor plan to its original size.
Reset Highlight	Refreshes the floor plan and removes all highlights.
Tools drop-down list	To highlight rooms with available jacks, select the first item in the drop-down list. You can also highlight rooms with available data jacks for computers, or available voice jacks for telephones.

See also

[View Telecom Connections in the Floor Plan](#)

[Filter Data](#)