



**EC520M  
Touch Screen  
Manual**

**1718 Stone Ave., Bldg. F  
San Jose, CA 95125  
408-924-0808  
[www.washlinksystems.com](http://www.washlinksystems.com)**

# Operation:

To process a car do the following:

- 1 Press the Start Button (unless conveyor is running, if so the Start Button will change to the Stop Button)
- 2 Press the correct Package Button (in Standard Mode) or Process Car Button (in Stacker Mode)
- 3 Chose Option Buttons (if any necessary)

\*\*\*For Wet Down or to change operating modes press Other\*\*\*


## Standard Main Screen

Start/Stop Button  
Note: will change to show hydraulic low level, collision alert, E-Stop or not in operating hours

Package Buttons (16 available)  
Can be re-labeled in Programming mode

Extra Roller Button

Roller Cancel Button  
(used when in Auto roller up mode)

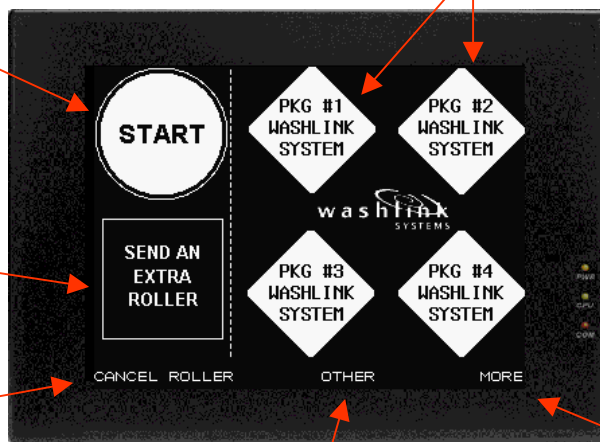

PWR Light  
CPU Light  
COM Light  
All should be on during normal operation

More Button  
To toggle to next page of wash packages

Other Button  
To get to wet down screen, Stacker mode and Programming Mode


## Stacker Main Screen

Start/Stop Button  
Note: will change to show hydraulic low level, collision alert, E-Stop or not in operating hours

Process Car Button  
Shows wash package for Current car to process

Extra Roller Button

Roller Cancel Button  
(used when in Auto roller up mode)

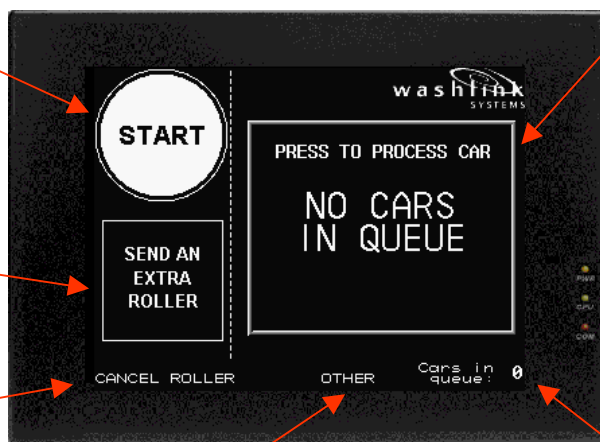

PWR Light  
CPU Light  
COM Light  
All should be on during normal operation

Other Button  
To get to wet down screen, Standard mode and Programming Mode

Cars in Queue  
Shows current number of cars in queue  
When pressed will allow removal of next car or all cars from the queue

# Operation:

## Option Screen

### Start/Stop Button

Note: will change to show hydraulic low level, collision alert, E-Stop or not in operating hours

### Option Buttons

Pressing toggles between No or Yes for the option  
To be on the current car  
Can be re-labeled in Programming Mode



### Clear Button

clears current car package  
Count Down Timer  
Time until screen switches back to main screen

### PWR Light

### CPU Light

### COM Light

All should be on during normal operation

### More Options

To toggle to next page of options



Clear Car from Queue Screen

Extra Roller Sent Screen

Wet Down/Program Screen

Wet Down Sent Screen

## Change between Standard & Stacker Mode

Standard Operation Main Screen    Stacker Operation Main Screen

- 1 Press "Other" on Main Screen (fig 1&2)
- 2 Press "\*\*\*\*\*" (Password Window) (fig 3)
- 3 Enter Password "12345" (fig 4)
- 4 Press "ENT" to Enter (fig 4)
- 5 Press "Standard" or "Stacker" (fig 5) to finish

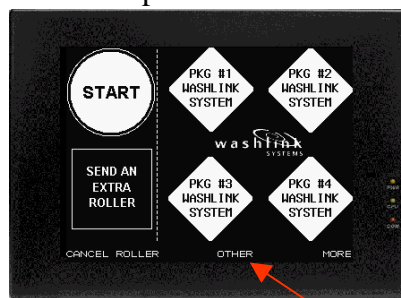


Fig 1



Fig 2

Other Button

### Password Screen

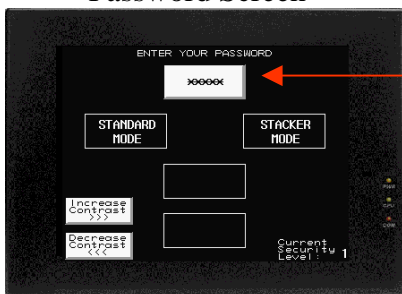


Fig 3

Password Window

### Enter Password Screen

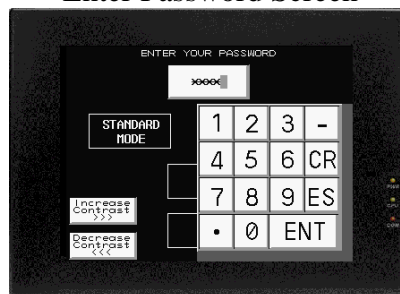


Fig 4

### Standard/Stacker Screen

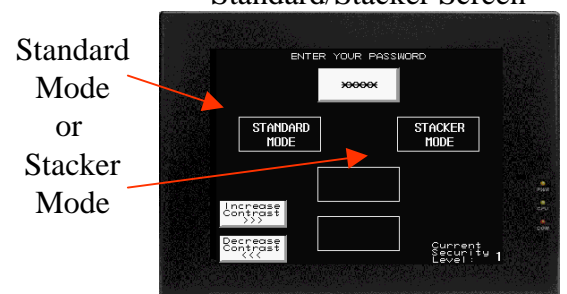


Fig 5

Standard Mode or Stacker Mode

# Programming:

## Change Package & Option Name Screen

- 1 Press "Other" on Bottom of Main Screen (fig 1 & fig 2)
- 2 Press "Stacker" or "Standard" on Bottom of Other Screen (fig 3)
- 3 Press "\*\*\*\*\*" Password Window (fig 4)
- 4 Enter "95125" Password (fig 5)
- 5 Press "ENT" Enter (fig 5)
- 6 Press "Change Label" (fig 6)
- 7 Press the box of the package or option name to change, or scroll to other screen
  - Each Package name has 3 lines. (fig 7)
  - First line 6 characters. Second line 8 characters. Third line 6 characters.
  - Each Option name has 2 lines. (fig 8)
  - First line 8 characters. Second line 8 characters.
- 8 Type in new information and press Enter after each line (fig 9)
- Note: If enter not pressed information will be lost!**
- 9 When finished, press Standard or Stacker (fig 7 & fig 8)
- 10 Repeat for each Label to be changed

Standard Operation Main Screen

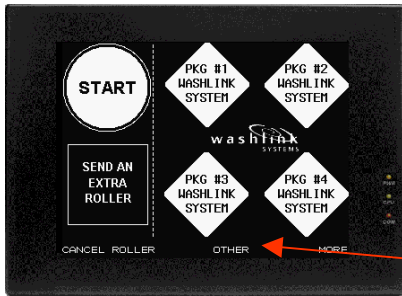


Fig 1

Stacker Operation Main Screen



Fig 2

Other Screen



Fig 3

Other Button

Standard or Stacker Button

Password Screen

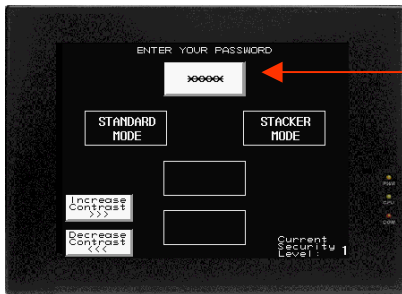


Fig 4

Enter Password Screen

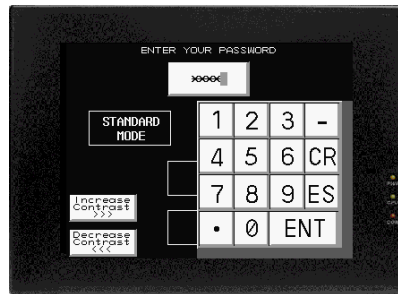


Fig 5

Password Window

Change Label Button

Mode & Change Screen

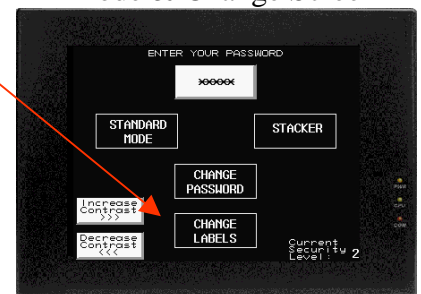


Fig 6

Package Label Screen

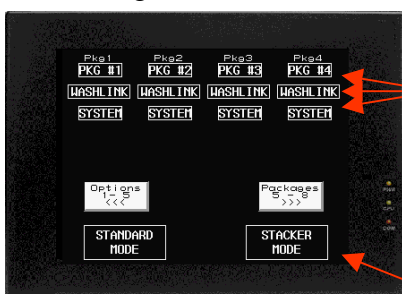


Fig 7

Option Label Screen

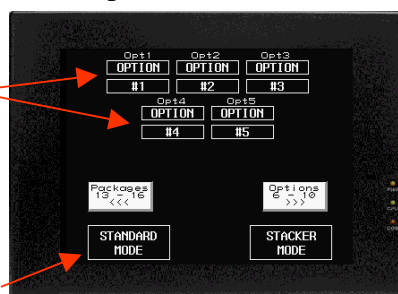


Fig 8

Labels

Standard or Stacker Button

Label Keyboard Screen

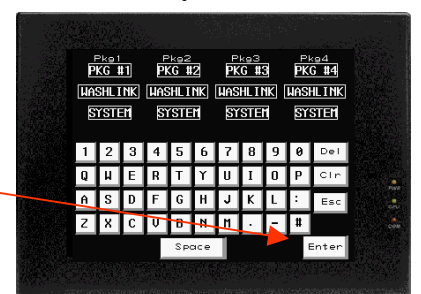



Fig 9

Enter Button

# Installation:

Maple Touch Screen  
Female DB9 Connector


Siemens S7-200 PLC  
Male DB9 Connector

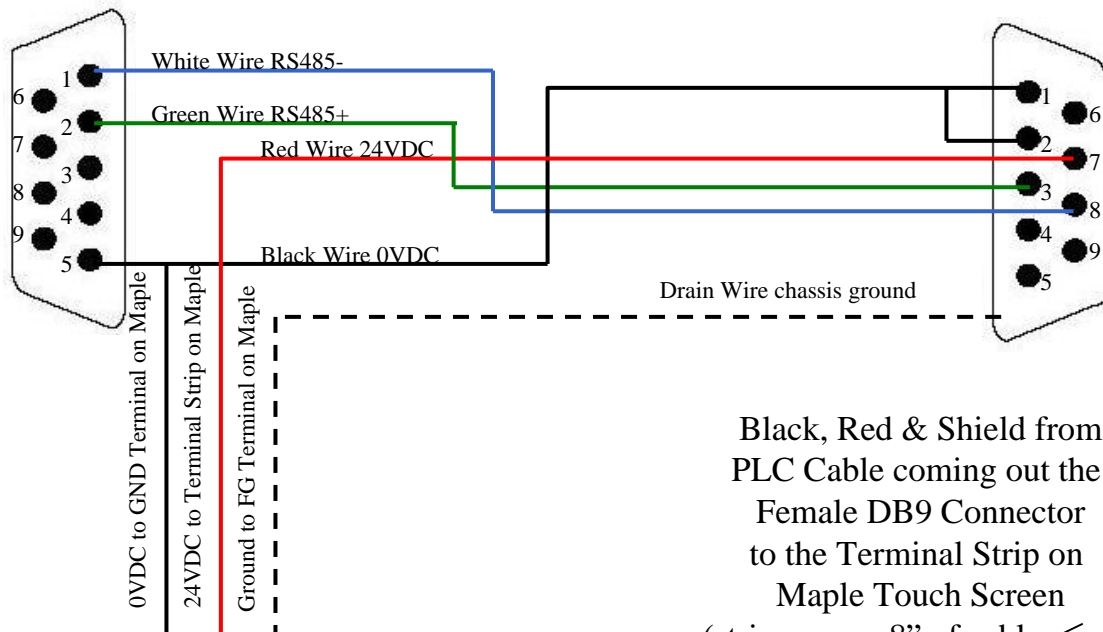


Black, Red & Shield from PLC Cable coming out the Female DB9 Connector to the Terminal Strip on Maple Touch Screen (strip approx 8" of cable cover)



Connections in Female DB9 connector on Touch Screen

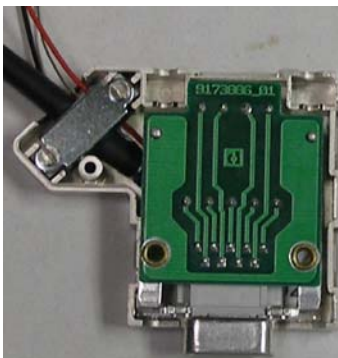

Cable & power wires clamped inside of Female DB9 connector on Touch Screen (note: direction of connector)

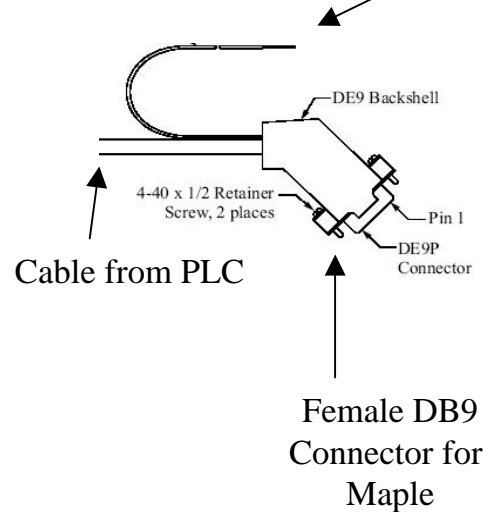

Power wires from Female DB9 connector to terminal strip on Touch Screen