$\mathsf{ZION}_{\mathsf{G4\,Bi\text{-}Pin\,4"\,Path\,Light}}$





DESCRIPTION

The Zion 4" Path Light comes complete with a fully adjustable reflector top. It is available in a standard 22" fixed stem or a 17" to 28" adjustable stem.

ZION PATH LIGHT

Use	Path, Area, and Garden Accent Lighting Brass, Copper, or Brass w/ Black Cerakote®		
Finish			
Includes	ABS Mounting Stake, LightingShrink Professional Crimp, and Heat Shrink Cable Connector		
Order With	Beacon G4 Bi-Pin,	FIXED	ADJUSTABLE
Lamp	2W, 2700K	ZION-PL-4-G4-CU-F	ZION-PL-4-G4-CU-A
		ZION-PL-4-G4-BR-F	ZION-PL-4-G4-BR-A
		ZION-PL-4-G4-BR-BLK-F	ZION-PL-4-G4-BR-BLK-A
Order Without	Fits G4 Bi-Pin	FIXED	ADJUSTABLE
Lamp		ZION-PL-4-G4-CU-F-NL	ZION-PL-4-G4-CU-A-NL
		ZION-PL-4-G4-BR-F-NL	ZION-PL-4-G4-BR-A-NL
		ZION-PL-4-G4-BR-BLK-F-NL	ZION-PL-4-G4-BR-BLK-A-N





ZION-PL-4-G4-CU-F

SOFT SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

- 1. Connect the power cable from the fixture body to the landscape cable.
- 2. Lay the power cable into the slotted relief on the stake.
- 3. Press the fixture and stake into the ground.
- 4. Use a level to ensure the top of the stake is level with the ground.

HARD SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

- 1. Unscrew the fixture body from the stake.
- 2. Dig a hole approximately 4" wide by 10" deep and gently tap the stake into the ground with a rubber mallet.
- 3. Use a level to ensure the top of the stake is level with the ground.
- 4. Reinstall the fixture body onto the stake and lay the power cable into the slotted relief on the stake.
- 5. Connect the power cable from the fixture body to the landscape cable.

ADJUSTING THE FIXTURE

- 1. Turn the threaded ring counter clockwise to loosen the lid.
- 2. Find the right light pattern by moving the lid up and down on the stem.
- 3. Turn the threaded ring clockwise to lock the lid into the desired position.
- 4. For adjustable stem models, adjust the stem length by loosening the set screw, adjusting the stem height, and tightening the set screw to hold it in place.

INSTALLING THE LAMP

- 1. Unscrew the threaded ring toward the stem.
- 2. Unscrew the lid from the stem.
- 3. Install the Beacon G4 Bi-Pin into the socket.
- 4. Screw the lid onto the stem.
- 5. Adjust the threaded ring until you achieve the light pattern you want.

Brilliance Metal Works 86