 


TENT SET UP INSTRUCTIONS

#237 8'X13'

TWO ROOM CABIN TENT

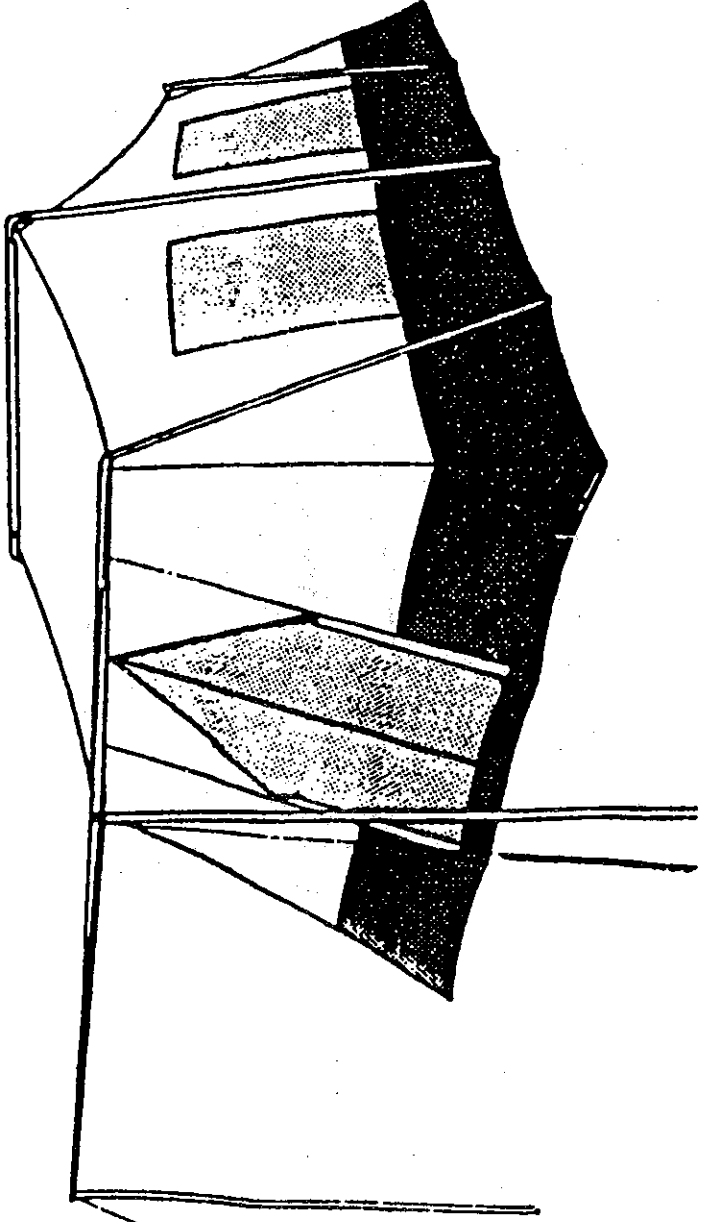

1. SELECT A NICE, CLEAN, SMOOTH CAMP SIGHT. SHARP STONES OR STICKS MAY PUNCTURE THE FLOOR OF YOUR TENT. FACE THE DOOR OF THE TENT IN THE DESIRED DIRECTION. STAKE ONE FRONT CORNER OF THE TENT FLOOR. THEN PULL THE OPPOSITE FRONT CORNER TAUGHT BUT NOT OVERLY TIGHT AND STAKE THAT CORNER. THEN DO THIS TO THE REAR CORNERS. THEN ALL STAKES MAY BE DRIVEN THROUGH THE REMAINING STAKE LOOPS.

2. SEPARATE ALL THE METAL TENT POLES INTO LIKE POLES OR INTO COLOR CODED POLE GROUPS. SOME POLES MAY BE IDENTIFIED BY THE ALPHABET CHARACTER AFFIXED ON THE POLES. THE CENTER UPRIGHT POLES WILL BE ADJUSTABLE AND MATE INTO EACH OTHER. THE AWNING POLES WILL USUALLY BE SMALLER DIAMETER AND WILL HAVE A POINTED TIP FOR THE AWNING GROMMET.

3. INSERT ONE RIDGE POLE ASSEMBLY INTO THE CENTER POLE SLEEVE OF THE TENT. THEN REPEAT THIS BY THREADING THE OTHER TWO RIDGE POLE ASSEMBLIES THROUGH THE FRONT AND REAR POLE LOOPS IN THE WHITE ROOF. DO NOT BECOME ALARMED IF THE CORNER WEBBING LOOPS DO NOT REACH TO THE "C" CLIPS MOUNTED ON THE CORNER ELBOWS. THESE ARE MERELY TO SPREAD OUT THE ROOF AND PREVENT THE WIND FROM BLOWING THE CORNER OF THE TENT. IF THE ROOF IS TOO TIGHT, MERELY FASTEN THE CORNER IN THE DIRECTION OF ANY STRONG WIND.

4. AFTER ALL THREE OF THE ROOF RIDGE POLES ARE FIXED, TAKE THE ASSEMBLED TWO CENTER UPRIGHT POLES (WITH THE UPPER SECTIONS TELESCOPED INTO THE LOWER ADJUSTABLE, LARGER POLES—SEE ILLUSTR.) INSERT THE UPPER, SWIDGED OR REDUCED ENDS INTO THE RIDGE ELBOW POLE. THEN PUSH UP THE CENTER OF THE TENT BUT NOT TOO STRAINED. THE TENT SHOULD STAND EASY AT THE POINT. FINAL ADJUSTMENT SHOULD COME LATER.

SEE OPPOSITE PAGE FOR FRAME ASSEMBLY

5. THE FRONT WALL OF THE TENT IS HIGHER THAN THE REAR WALL. TAKE THE TWO LONGEST STRAIGHT POLE SETS AND PLACE THE SWIDGED OR REDUCED ENDS INTO THE ROOF ELBOW POLES. SLIDE THE LOWER ENDS OF THE POLES TOWARD THE FRONT OF THE TENT TO RAISE THE FRONT WALL. REPEAT THIS AT THE REAR WITH THE REMAINING PAIR OF SHORTER SIDE UPRIGHT POLES.

6. NOW THE TENT SHOULD BE STANDING RATHER WELL AND MAY NEED SOME ADJUSTMENT. FIRST CHECK THE FLOOR TO SEE THAT MOST OF THE WRINKLES ARE OUT. YOU MAY HAVE TO ADJUST THE STAKE LOCATIONS. THEN RAISE THE CENTER UPRIGHT POLES TO APPLY PRESSURE (BUT NOT TOO MUCH TO STRAIN THE FABRIC OR STAKE LOOPS OR SLEEVE IN THE ROOF). THEN, ADJUST THE SIDE UPRIGHT POLES BY SLIDING THE LOWER ENDS TO MAKE THE FRONT AND REAR WALLS LOOK WELL. PAY ATTENTION TO THE SAME STRAIN WARNINGS ALREADY MENTIONED. DO NOT APPLY TOO MUCH PRESSURE THAT WILL CAUSE THE SEAMS OR FABRIC TO TEAR!

7. LASTLY, THE FRONT AWNING NEEDS TO BE SET UP AND GUYED OUT. ASSEMBLE THE GUY ROPES AND JOIN THE AWNING POLES UNTO UPPER (WITH POINT) AND LOWER (WITH THE PLASTIC CAP. EACH AWNING POLE SHOULD BE GUYED OUT WITH THE STAKE LOCATED AT A 30-45 DEGREE ANGLE. (NOTE: IN HEAVY RAIN THE AWNING SHOULD BE LOWERED TO AVOID POCKETING LOTS OF WATER WHICH MAY BRING DOWN THE TENT, BEND THE POLES OR CREATE A PERMANENT BAG IN THE AWNING FABRIC).

8. DISMANTLING THE TENT IS THE REVERSE OF THE ABOVE INSTRUCTIONS.

*KEEP FIRE AND INFLAMMABLES AWAY FROM TENT!
*DO NOT LEAVE CAMPFIRES UNATTENDED!

*DO NOT USE COMBUSTIBLE HEATERS OR LANTERNS,
ETC INSIDE AT ANY TIME!

*DO NOT SPRAY TENT WITH INSECTICIDE OR
REPELLENT NOT SPECIFICALLY
RECOMMENDED FOR TENT
FABRICS!

CAUTION!!!

**DO NOT LEAVE YOUR TENT SET UP IN DIRECT
SUNLIGHT LONGER THAN NECESSARY!**

 

THE SUN'S ULTRA VIOLET LIGHT DEGRADES

*IF LEAKING OCCURS AT THE SEWN SEAMS, USE AN
APPROVED SEAM SEALER!


*ALWAYS TAKE DOWN YOUR TENT WHEN NOT IN USE.

FRAME ASSEMBLY

#237 8'x13' TWO ROOM CABIN TENT

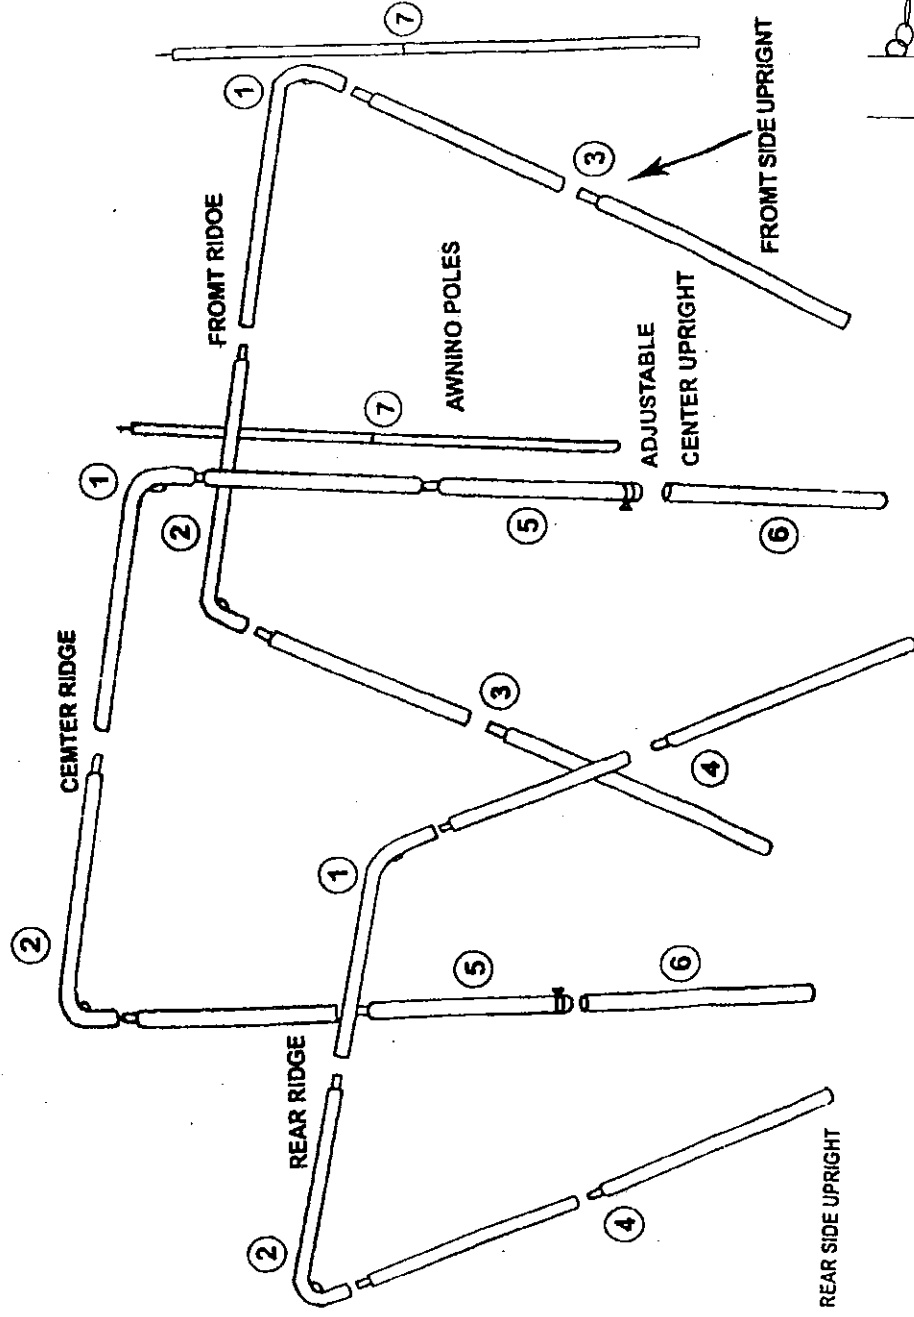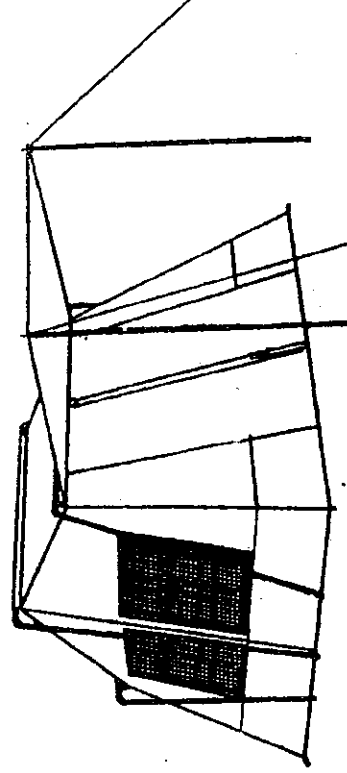

SET - UP INSTRUCTION

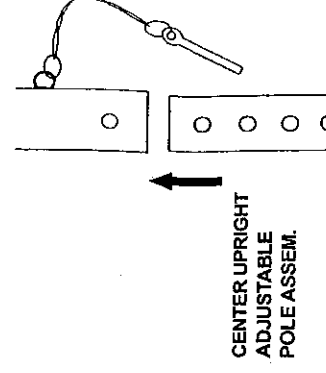

LIMITED WARRANTY

PINNACLE WARRANTS TO THE ORIGINAL PURCHASER THAT OUR PRODUCTS ARE FREE FROM DEFECTS IN MATERIALS OR WORKMANSHIP FOR NINETY (90) DAYS. IF DEFECTS IN WORKMANSHIP SHOULD OCCUR, PLEASE CONTACT OUR SERVICE CENTER.

WE ARE NOT RESPONSIBLE FOR NORMAL WEAR AND TEAR OR DEFECTS CAUSED BY ACCIDENT, ABUSE, ALTERATION, MISUSE, OR IMPROPER CARE. ALSO, NOTE THAT THE PROLONG SUN EXPOSURE WILL DETERIORATE THE SYNTHETIC FABRIC, OVER WHICH WE HAVE NO CONTROL.

IN NO EVENT SHALL PINNACLE INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES!

SOME STATES DO ALLOW LIMITATION OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

***DO NOT LEAVE YOUR TENT SET UP IN DIRECT
SUNLIGHT LONGER THAN NECESSARY!***

**MMI Outdoor
6101 Brewbaker Blvd**