



BABY FOOD PROCESSOR, MODEL BFP-01

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not immerse the motor unit or other electrical parts in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or removing parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate with a damaged cord or plug or after the unit malfunctions, has been dropped or damaged in any manner. If bought within the past two years, return unit and proof of purchase to DEX Products Inc. for examination or repair at 601 Stone Road, Benicia, CA 94510. Phone 800-546-1996 if you have any questions.
7. The use of attachments not recommended or sold by DEX may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Keep hands and utensils away from the cutting blade while processing food to reduce the risk of severe injury to persons or damage to the processor. A spatula may be used but only when the processor is not running. Do not use sharp objects or utensils inside the chopper bowl. Sharp objects will scratch and damage the surface of the mixing bowl.
11. Blades are sharp. Handle carefully.
12. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
13. Be certain safety lid is securely locked in place before operating the unit.
14. Do not attempt to defeat the cover interlock mechanism.
15. This unit has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
16. Do not place on or near a hot gas or electric burner or in a heated oven.
17. Do not use unit for other than intended use.
18. This unit is for household use only.

SAVE THESE INSTRUCTIONS

1) PREPARE TO USE

- Before using your processor for the first time, wash the lid, mixing bowl and blade in warm soapy water.
- DO NOT CLEAN WITH ABRASIVE CLEANERS OR HARD IMPLEMENTS. Rinse and dry all parts thoroughly.
- Do not immerse motor unit in water. Wipe motor unit with moist cloth.

2) TO USE

- Place the blade onto the blade supporting pin.
- Place the ingredients inside the bowl (Do not overfill).
 - a. Place vegetables into mixing bowl, operating a maximum of 10 seconds in pulse.
 - b. Place meat into mixing bowl, operating a maximum of 15 seconds.

Note: Pour a small amount of milk into bowl before activating to facilitate smoother blending.

- Place the lid in the mixing bowl and click into place.
- Place the motor unit on the safety lid / mixing bowl, twisting it slightly until the motor slips into place.
- Plug the cord into 120V AC outlet.
- Press down on the motor unit, and the processor starts up immediately.
- This unit is intended for an operation maximum of 30 seconds on and a minimum 1 minute off cycle, and to not exceed 10 cycles at a session. A break is necessary in order to allow the unit to cool down.
- Unplug the unit, and wait for the blade to stop completely.
- Remove the motor unit, the lid and the blade and feed your baby directly out of the mixing bowl.

CLEANING

Wash the lid, mixing bowl and blade in warm soapy water. **DO NOT CLEAN WITH ABRASIVE CLEANERS OR HARD IMPLEMENTS.** Rinse and dry all parts thoroughly. **DO NOT** immerse the motor base in water. Wipe motor base with damp sponge or cloth. Do not perform any other servicing. Return to DEX if there is a problem and if the unit is not over two years old.

