



# SOUND SOOTHER AUDIO BOX

When the quality of the audio begins to deteriorate, install 3 fresh AAA batteries and the quality of the audio will return to normal.

- When buzzing or no sound, please replace batteries.
- This is not a toy. DO NOT give out to children.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadium) batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.







**WARNING:** Changes or modifications of this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## OPERATING INSTRUCTIONS

- 1. ASSEMBLE** - Place the audio box into the pouch in sound soother's back, so that the controls face outward. Secure in place by fastening the pouch's velcro.
- 2. SELECT TIMER** - Slide the timer switch at bottom of unit to 1 of 3 positions:
  - Demo** Demo mode. Automatically turns off the unit in 15 seconds\* and is intended for display and shipping purposes only.
  - 15min** Plays your favorite sounds and automatically turns off in 15 minutes\*.
  - 60min** Plays your favorite sounds and automatically turns off in 60 minutes\*.

\* timer shut off time may vary slightly
- 3. SELECT SOUND** - Choose 1 of the 4 different soothing sounds available. Slide the switch on the front of the unit to the sound you wish to hear:
  -  **Mom's Heartbeat** - Actual recorded sounds of the womb help remind baby of the calming serenity of mommy's womb.
  -  **Babbling Brook**
  -  **Summer Night**
  -  **Ocean Surf**
- 4. TURN ON/OFF & ADJUST VOLUME** - Press the **ON**/ button to turn the on audio box at the lowest volume level. Press again to increase the volume to medium and once more for high. To decrease the volume, press the **OFF**/ button. This will decrease the volume from high to medium to low and then off.

## CLEANING INSTRUCTIONS

Wipe off with a slightly damp washcloth or sponge. Do not use any cleaning liquids on it. For cleaning instructions of the sound soother plush, please see the sewn in label.