

To Reconnect 4Runner Battery

1. Remove wing nut by hand from red battery's negative (black) post.
2. Place the 4 loose wire loops over the post. Hold firmly in place to avoid sparks. *Note: if you can't find all 4 loose wire, one probably fell down between the radiator and the red battery.*
3. Replace the wing nut on top of the post. Tighten by hand.

None of the other wire on other posts/batteries need adjustment.

