

CARE + MAINTENANCE | FIRE FEATURES

01 REGULAR CLEANING

- Remove any debris, such as leaves and sticks, from the fire feature regularly.
- Clean the fire pit or fire bowl with a mild detergent and water, scrubbing gently to remove any soot or residue.
- Rinse thoroughly and allow it to dry completely before using it again.

02 SAFE USAGE

- Follow the manufacturer's instructions and safety guidelines when operating the fire feature.
- Keep a safe distance between the fire feature and any flammable materials, such as trees, furniture, or structures.
- Use a fire screen or spark guard to prevent sparks from flying out of the fire feature.
- Never leave the fire unattended, and always extinguish it completely before leaving the area.

03 WINTERIZATION

- As winter approaches and temperatures drop below freezing, it's essential to properly winterize your outdoor fire feature to protect it from potential damage.
- Begin by completely extinguishing any remaining fire and allowing the fire feature to cool down.
- If possible, remove any removable parts, such as grates or cooking surfaces, and store them indoors to prevent damage from freezing temperatures.
- For fire pits or fire bowls made of materials like metal or concrete, cover them with a weatherproof cover to protect them from snow, ice, and moisture.
- If you have a gas or propane fire feature, turn off the gas supply and disconnect the fuel source according to the manufacturer's instructions.
- Consider using a fire-resistant pad or insulating bricks underneath the fire feature to provide additional protection from the freezing ground.
- During heavy snowfall, make sure to clear any snow accumulation from the fire feature to prevent excessive weight and potential damage.