

WHAT MAKES
YOU TICK?

-KENNETH COLE NEW YORK

Thank you for your purchase of
a Kenneth Cole New York watch.

Register your watch today at:
www.genevawatchgroup.com

Kenneth Cole New York is manufactured using the highest quality materials and craftsmanship. The incorporation of both traditional and forward thinking design philosophies result in a unique and modern product.

LIMITED LIFETIME WARRANTY

Thank you for choosing a Kenneth Cole New York precision timepiece. This Kenneth Cole New York watch is warranted to you, the owner, for your lifetime against all defects in material or workmanship. Limited lifetime warranty will be honored only by Service Center in the United States, Canada, Caribbean as well as Authorized Duty Free and Military Dealers. Service centers located in other parts of the world will only provide warranty service for the first 2 years. However, the warranty does not apply to normal wear and tear or abuse and excludes battery, case, crystal, strap, malfunction and deterioration resulting from accident, negligence and tampering. Kenneth Cole New York watches are water-resistant. Special gasket and crown protectors have been used in the creation of these timepieces to ensure their resistance to water. In the event of a defect or malfunction, it will be repaired or replaced at our option. PLEASE DO NOT SEND CASH. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted such as battery, case, crystal and strap. In this event, please see Watch Repair section in the back of this booklet.

BATTERY LIFE

The battery in your Kenneth Cole New York Watch should last approximately 1 year. Please replace the battery as soon as possible to prevent any issues with the watch performance. For battery replacement, we recommend that you contact an AUTHORIZED KENNETH COLE NEW YORK DEALER. The battery type is found on the caseback.

Please Note: If you have purchased a Touch Screen Watch and you experience an unstable or delayed response while using the EL backlight or when pressing the touch sensors, then this indicates the battery will need to be replaced soon. Please contact your Authorized Dealer.

 
CERAMIC CARE INSTRUCTION

Ceramic is a high quality material revered for its inherent characteristics of high shine, feel, and scratch resistance featured in select styles. Over time, the shine may dull due to handling. To restore ceramic to its original luster, clean with warm soapy water and dry with a soft cloth. Buff the ceramic to its original shine with a dry soft cloth. Handle with care as ceramic may chip or break when dropped.

SCREW-DOWN CROWN

Some watch models are equipped with a screw-down crown. Make sure to un-screw the crown before pulling out the crown for setting, then screw the crown back in tightly after setting to avoid any water entry.

TO USE THE BACKLIGHT

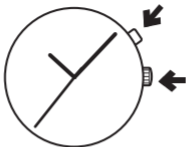

Some watch models are equipped with an electroluminescence (EL) backlight. To turn on the backlight, press the backlight button.

If there is no separate backlight button, press the crown to activate the backlight.

WATER RESISTANCE

- Before using watch in or near water, be sure that crown is pushed in completely.
- If watch is underwater or wet, do not use pushers, rotating bezels or crowns.
- If watch becomes wet, wipe it dry as soon as possible.
- If watch comes in contact with salt water, rinse case and bracelet immediately and thoroughly under tap water and wipe dry with a soft cloth.
- Do not take your watch into a Hot Tub or Sauna. Extreme heat and pressure may cause your watch to lose its water resistance.
- Water resistance is not permanent. In the course of time, as your case becomes worn, the water resistance of the watch may decrease.

WATER RESISTANCE	SUITABLE ATMOSPHERE
3 ATM/ 30 METERS/ 100 FEET/ 30 METERS H2O	Suitable for washing hands and light splashing
5 ATM/ 50 METERS/ 165 FEET/ 50 METERS H2O	Suitable for light swimming, e.g. bathing in a pool or low tide waters, but not suitable for diving
10 ATM/ 100 METERS/ 330 FEET/ 100 METERS H2O	Suitable for most water sports, e.g. swimming, surfing and snorkeling, but not suitable for deep water diving

TWO HAND MODEL



(K62/132)

TO SET THE TIME:


1. Push button from case back to set time.

NOTE: Holding down the button from case back will allow quick advance.

TWO-HAND / THREE-HAND MODELS



 (VD78)

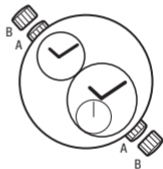


(5Y20, IL45)


TO SET THE TIME:

1. Pull crown out to first click position B.
2. Turn crown to set time.
3. Push crown back to position A.

 TWO OR THREE-HAND DATE MODELS

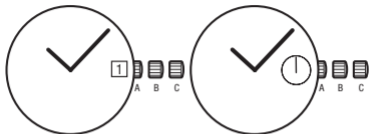

(GP11)

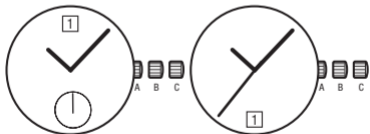 

(GP10)

(2115,2415,2315)

1. Date Window

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

 
TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise or counter-clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

ONE-EYE MULTI-FUNCTION MODEL

1. Second Hand
2. Date Hand

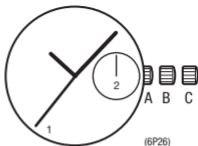

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown counter-clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

ONE-EYE MULTI-FUNCTION MODEL

1. Second Hand
2. Date Window
3. Day Dial



TO SET THE DAY (OF THE WEEK):

1. Pull crown out to second click position B.
2. Turn crown clockwise to set day.
3. Push crown back to position A.

NOTE: Do not set the day between 9:00 P.M. and 1:00 A.M. Otherwise, the day may not change properly on the following day. If it is necessary to set the day during that time period, first change the time to any time outside it, then set the day and then reset to the correct time.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

TO SET THE DATE:

 
1. Pull crown out to first click position B.

2. Turn crown counter-clockwise to set date.
3. Push crown back to position A.


NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TWO-EYE MULTI-FUNCTION MODELS


1. Second Hand
2. Day Hand
3. Date Hand

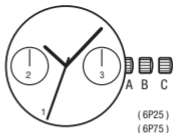

 1. Second Hand
2. Date Hand
3. 24 Hour Hand

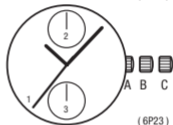

 1. Second Hand
2. Date Hand
3. 24 Hour Hand

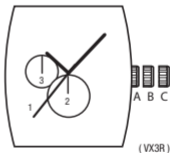

TO SET THE DAY (OF THE WEEK):

1. Pull crown out to second click position C.
2. Turn crown clockwise to set day.
3. Push crown back to position A.

NOTE: The Day Hand will move together with the Hour Hand and Minute Hand. Keep turning the crown until the desired day has been reached.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

 
TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown counter-clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TWO-EYE MULTI-FUNCTION MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. 24 Hour Hand /
Second Time Zone Hand
5. Date Window
6. Month Hand

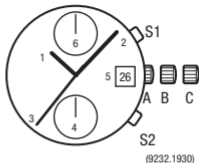

S1. Month Set Button

S2. 24 Hour Hand / Second Time Zone Hand Set Button

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown clockwise to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand / Second Time Zone Hand and Date Hand will also be set during time setting.

TO SET THE 24 HOUR HAND / SECOND TIME ZONE HAND (QUICK CHANGE FUNCTION):

1. Set crown at position A.
2. Press S2 button to set the 24 Hour Hand / Second Time Zone Hand. Each press will advance the hand by 1 unit.

NOTE: When using S2 button to set the 24 Hour Hand / Second Time Zone Hand, the Minute Hand must be set to between 55th minute and 05th minute at any hour.

TO SET THE DATE (QUICK CHANGE FUNCTION):

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE: Do not use quick change function to set date between 9:00 P.M. and 00:30 A.M. Otherwise, the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

 
TO SET THE MONTH:

1. Set crown at position A.
2. Press S1 button to set the Month Hand. Each press will advance the hand by 1 unit.


NOTE: Do not set month on the 31st of a month.

THREE-EYE MULTI-FUNCTION MODELS WITH LARGE SECOND

1. Second Hand
2. 24 Hour Hand
3. Day Hand
4. Date Hand

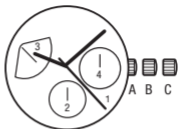


(VX3S)

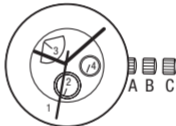 

(VX3T)


WITH SMALL SECOND

 1. Hour Hand
2. Minute Hand
3. Small Second Hand
4. Day Hand
5. Date Hand

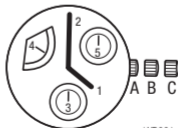


(VD86)

 1. Hour Hand
2. Minute Hand
3. Second Hand
4. 24 Hour Hand
5. Day Hand
6. Date Hand

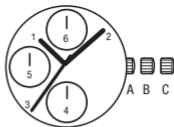

(6P27)

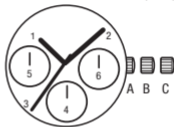 

(6P29)

TO SET THE DAY (OF THE WEEK):

1. Pull crown out to second click position C.
2. Turn crown clockwise to set day.
3. Push crown back to position A.

NOTE: The Day Hand will move together with the Hour Hand and Minute Hand. Keep turning the crown until the desired day has been reached.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO SET THE DATE:

 
1. Pull crown out to first click position B.
2. Turn crown either clockwise or counter-clockwise to set date.
3. Push crown back to position A.

NOTE: The direction of crown turning for date setting varies on different watch models.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

THREE-EYE MULTI-FUNCTION MODEL

- 1.Hour Hand
- 2.Minute Hand
- 3.Second Hand
- 4.24 Hour Hand /
Second Time Zone Hand
- 5.Day Hand
- 6.Date Window
- 7.Month Hand

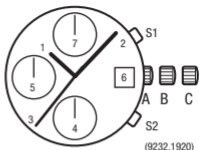

S1 – Month Set Button

S2 – 24 Hour Hand / Second Time Zone Hand Set Button

TO SET THE DAY (OF THE WEEK)

1. Pull crown out to second click position C.
2. Turn crown clockwise to set day.
3. Push crown back to position A.

NOTE: The Day Hand will move together with the Hour Hand and Minute Hand. Keep turning the crown until the desired day has been reached.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown clockwise to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand / Second Time Zone Hand, Day Hand and Date Window will also be set during time setting.

TO SET THE 24 HOUR HAND / SECOND TIME ZONE HAND (QUICK CHANGE FUNCTION):

1. Set crown at position A.
2. Press S2 button to set the 24 Hour Hand / Second Time Zone Hand. Each press will advance the hand by 1 unit.

NOTE : When using S2 button to set the 24 Hour Hand / Second Time Zone Hand, the Minute Hand must be set to between 55th minute and 05th minute at any hour.

TO SET THE DATE (QUICK CHANGE FUNCTION):

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE : Do not use quick change function to set date between 9:00 P.M. and 00:30 A.M. Otherwise, the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

 
TO SET THE MONTH:

1. Set crown at position A.
2. Press S1 button to set the Month Hand. Each press will advance the hand by 1 unit.

NOTE: Do not set month on the 31st of a month.

THREE-EYE MULTI-FUNCTION MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. 24 Hour Hand
5. Day Hand
6. Date Hand

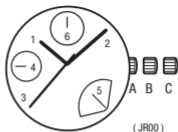

TO SET THE DAY (OF THE WEEK):

1. Pull crown out to second position C.
2. Turn crown clockwise to set day.
3. Push crown back to position A.

NOTE: Do not set the day between 11:00 P.M. and 3:00 A.M. Otherwise, the day may not change properly on the following day. If it is necessary to set the day during that time period, first change the time to any time outside it, then set the day and then reset to the correct time.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

 
TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown either clockwise or counter-clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.


TWO-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. Chronograph Second Hand
5. Chronograph Minute Hand
6. Date Window (Optional)

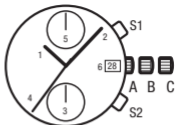

(OS11)

 1. Hour Hand
2. Minute Hand
3. 24 Hour Hand
4. Chronograph Second Hand
5. Chronograph Minute Hand
6. Date Window

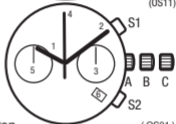

(OS21)

S1 – Chronograph start/stop button

S2 – Chronograph reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the chronograph is in use, press the button in the following order to reset it, and then check if the chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped :	S2

In case one or several chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to second click position C.
2. Press S1 button to set the Chronograph Second Hand. Holding down the button will allow quick advance.
3. Push crown back to position A.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown counter-clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

 
TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

TWO-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. Chronograph Second Hand
5. Chronograph Minute Hand
6. Date Window

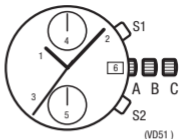

S1 – Chronograph Start/Stop Button

S2 – Chronograph Split/Split Release/Reset Button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph Second Hand and Chronograph Minute Hand are at the 12 o'clock position.

If the chronograph is in use, press the button in the following order to reset it, and then check if the chronograph hands have returned to 12 o'clock position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several chronograph hands are not at the 12 o'clock position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to second click position C.

2. Press S1 or S2 button to set the Chronograph Second Hand and Chronograph Minute Hand (mechanically coupled). By pressing S1 or S2 button, the hands will move counter-clockwise or clockwise respectively.
3. Push crown back to position A.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

For the measurement of split time,

1. Press S1 button to start counting.
2. While the chronograph is running, press S2 button once to register a lap. The chronograph is still running in the background.

 
 
To display the currently accumulated time, press S2 button again. The chronograph hands will quickly advance to the ongoing measured time.

3. Repeat the last step until all the laps have been registered.
4. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE: The chronograph is able to measure up to 60 minutes.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
or Chronograph
1/20 Second Hand
4. 24 Hour Hand
5. Chronograph Second Hand
6. Chronograph Minute Hand
7. Date Window (Optional)

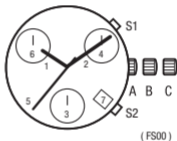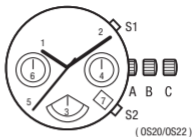

- S1 – Chronograph start/
stop button
- S2 – Chronograph reset
button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph 1/20 Second Hand (for certain models only), Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the chronograph is in use, press the button in the

following order to reset it, and then check if the chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2

In case one or several chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to second click position C.
2. Press S1 button to set the Chronograph Second Hand. Holding down the button will allow quick advance.
3. Press S2 button to set the Chronograph 1/20 Second Hand (for certain models only). Holding down the button will allow quick advance.
4. Push crown back to position A.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise or counter-clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):

 
Press S2 button to switch the watch to chronograph mode,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE: For certain models, the chronograph is able to measure and display time in 1/20 second units up to maximum of 1 hour. The retrograde Chronograph 1/20 Second Hand keeps counting continuously for 60 seconds after starting, and then stops at zero position. When S1 button is pressed to stop the chronograph, the Chronograph 1/20 Second Hand will quickly advance to display the measured time.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. Chronograph
1/10 Second Hand
5. Chronograph
Second Hand
6. Chronograph Minute Hand
7. Date Window

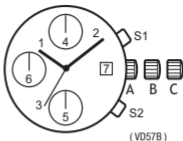

S1- Chronograph start/stop button

S2- Chronograph split/split release/reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph 1/10 Second Hand, Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the Chronograph is in use, press the button in the following order to reset it, and then check if the Chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several Chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to second click position C.
2. Press S1 button to set the Chronograph 1/10 Second Hand. Holding down the button will allow quick advance.
3. Press S2 button to set the Chronograph Second Hand and Chronograph Minute Hand (mechanically coupled). Holding down the button will allow quick advance.
4. Push crown back to position A to set.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown clockwise to set time.
3. Push crown back to position A.

NOTE: Make sure you have correctly set A.M./P.M. before setting the time. When the date changes over, it is A.M. (The date changes over between 9:00 P.M. and 1:00 A.M.)

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly. If it is necessary to set the

date during that time period, first change the time to any time outside it, set the date and then reset the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

 
For the measurement of split time,

1. Press S1 button to start counting.
2. While the Chronograph is running, press S2 button once to register a lap. The Chronograph is still running in the background.
3. To display the currently accumulated time, press S2 button again. The three Chronograph hands will quickly advance to the ongoing measured time.
4. Repeat the last step until all the laps have been registered.
5. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE: Chronograph 1/10 Second Hand moves for the first minute. After one minute, it indicates the measured time when it is stopped.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. 24 Hour Hand
5. Chronograph Second Hand
6. Chronograph Minute Hand
7. Date Window

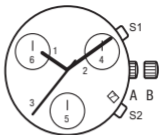

(JS05)

S1- Chronograph start/stop button

S2- Chronograph split/split release/reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the Chronograph is in use, press the button in the following order to reset it, and then check if the Chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several Chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to position C.
2. Press S1 button to set the Chronograph Second Hand and Chronograph Minute Hand in clockwise direction. Holding down the button will allow quick advance.
3. Press S2 button to set the Chronograph Second Hand and Chronograph Minute Hand in counter-clockwise direction. Holding down the button will allow quick advance.
4. Push crown back to position A to set.

TO SET THE TIME:

1. Pull crown out to position B.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly. If it is necessary to set the date during that time period, first change the

time to any time outside it, set the date and then reset the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):

 
For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE : The chronograph is able to measure and display time in second unit up to maximum of 30 minutes. The chronograph will stop automatically after running continuously for 30 minutes.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. 24 Hour Hand
5. Chronograph Second Hand
6. Chronograph Minute Hand
7. Date Window

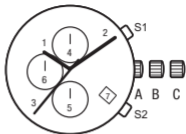

(JS15)

S1- Chronograph start/stop button

S2- Chronograph split/split release/reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the Chronograph is in use, press the button in the following order to reset it, and then check if the Chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several Chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to position C.
2. Press S1 button to set the Chronograph Second Hand and Chronograph Minute Hand in clockwise direction. Holding down the button will allow quick advance.
3. Press S2 button to set the Chronograph Second Hand and Chronograph Minute Hand in counter-clockwise direction. Holding down the button will allow quick advance.
4. Push crown back to position A to set.

TO SET THE TIME:

1. Pull crown out to position C.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside it, set the date and then reset the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):

 
For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE: The Chronograph Minute Counter counts in a cycle of 30 minutes.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. Chronograph 1/5 Second Hand
5. Chronograph Minute Hand
6. 24 Hour Hand
7. Date Window

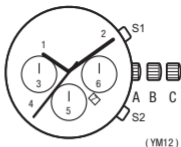

S1 – Chronograph start/stop button

S2 – Chronograph split/split release/reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph 1/5 Second Hand, Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the chronograph is in use, press the button in the following order to reset it, and then check if the chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to second click position C.
2. Press and hold S1 button for approximately 2 seconds, the Chronograph Minute Hand will turn a round to indicate that the Chronograph Minute Hand is opened to set. Press S2 button to set the Chronograph Minute Hand. Holding down the button will allow quick advance.
3. Press and hold S1 button for approximately 2 seconds, the Chronograph 1/5 Second Hand will turn a round to indicate that the Chronograph 1/5 Second Hand is opened to set. Press S2 button to set the Chronograph 1/5 Second Hand. Holding down the button will allow quick advance.
4. Push crown back to position A to set.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown clockwise to set time.
3. Push crown back to position A.

NOTE: Make sure you have correctly set A.M./P.M. before setting the time. When the date changes over, it is A.M. (The date changes over between 9:00 P.M. and 1:00 A.M.)

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

For the measurement of split time,

 
1. Press S1 button to start counting.
2. While the chronograph is running, press S2 button once to register a lap. The chronograph is still running in the background.
3. To display the currently accumulated time, press S2 button again. The three chronograph hands will quickly advance to the ongoing measured time.
4. Repeat the last step until all the laps have been registered.

5. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE : The chronograph is able to measure and display time in 1/5 second unit up to maximum of 59 minutes 59 seconds 80 centisecond. The chronograph will stop automatically after running continuously for 12 hours.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. Chronograph 1/20 Second Hand
5. Chronograph Second Hand
6. Chronograph Minute Hand
7. Chronograph Hour Hand
8. Date Window

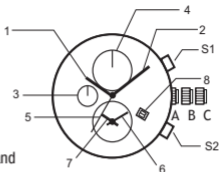

(YM92)

S1 – Chronograph start/stop button

S2 – Chronograph split/split release/reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph 1/20 Second Hand, Chronograph Second Hand, Chronograph Minute Hand and Chronograph Hour Hand are at the zero position.

If the chronograph is in use, press the button in the following order to reset it, and then check if the chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to second click position C.
2. Press and hold S1 button for approximately 2 seconds, the Chronograph 1/20 Second Hand will turn a round to indicate that the Chronograph 1/20 Second Hand is opened to set. Press S2 button to set the Chronograph 1/20 Second Hand. Holding down the button will allow quick advance.
3. Press and hold S1 button for approximately 2 seconds, the Chronograph Second Hand will turn a round to indicate that the Chronograph Second Hand is opened to set. Press S2 button to set the Chronograph Second Hand. Holding down the button will allow quick advance.
4. Press and hold S1 button for approximately 2 seconds, the Chronograph Hour and Minute Hand will turn around to indicate that the Chronograph Hour and Minute Hand is opened to set. Press S2 button to set the Chronograph Hour and Minute Hand. Holding down the button will allow quick advance.
5. Push crown back to position A to set.

NOTE: The hands can be readjusted by press and hold for approximately 2 Seconds in the order of Chronograph 1/20 Second Hand, Chronograph Second Hand, Chronograph Minute Hand and Chronograph Hour Hand.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: Make sure you have correctly set A.M./P.M. before setting the time. When the date changes over, it is A.M. (The date changes over between 9:00 P.M. and 1:00 A.M.)

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

For the measurement of split time,

 
1. Press S1 button to start counting.
2. While the chronograph is running, press S2 button once to register a lap. The chronograph is still running in the background.
3. To display the currently accumulated time, press S2 button again. The three chronograph hands will quickly advance to the ongoing measured time.
4. Repeat the last step until all the laps have been registered.
5. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE: For certain models, the chronograph is able to measure and display time in 1/20 second units up to maximum of 12 minutes. The retrograde Chronograph 1/20 Second Hand keeps counting continuously for 10 minutes after starting, and then stops at zero position. When S1 button is pressed to stop the chronograph, the Chronograph 1/20 Second Hand will quickly advance to display the measured time.


NOTE : The chronograph is able to measure and display time in 1/20 second unit up to maximum of 11 hours 59 minutes 59 seconds. The chronograph will stop automatically after running continuously for 12 hours.

THREE-EYE CHRONOGRAPH MODEL

1. Hour Hand
2. Minute Hand
3. Second Hand
4. 24 Hour Hand
5. Chronograph Second Hand
6. Chronograph Minute Hand
7. Date Window

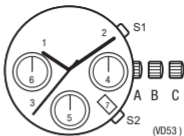

 - S1 – Chronograph Start/
Stop Button
- S2 – Chronograph Split/
Split Release/
Reset Button

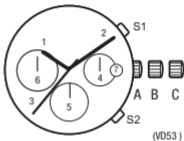

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph Second Hand and Chronograph Minute Hand are at the 12 o'clock position.

If the chronograph is in use, press the button in the following order to reset it, and then check if the chronograph hands have returned to 12 o'clock position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several chronograph hands are not at the 12 o'clock position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to second click position C.
2. Press S1 or S2 button to set the Chronograph Second Hand and Chronograph Minute Hand (mechanically coupled). By pressing S1 or S2 button, the hands will move counter-clockwise or clockwise respectively.
3. Push crown back to position A.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

 
For the measurement of split time,

1. Press S1 button to start counting.
2. While the chronograph is running, press S2 button once to register a lap. The chronograph is still running in the background.
To display the currently accumulated time, press S2 button again. The chronograph hands will quickly advance to the ongoing measured time.
3. Repeat the last step until all the laps have been registered.
4. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE: The chronograph is able to measure up to 60 minutes.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. 24 Hour Hand
5. Chronograph Second Hand
6. Chronograph Minute Hand

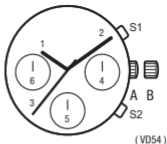

S1- Chronograph start/stop button

S2- Chronograph split/split release/reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the Chronograph is in use, press the button in the following order to reset it, and then check if the Chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several Chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to position B.
2. Press S1 button to set the Chronograph Second Hand and Chronograph Minute Hand in counter-clockwise direction. Holding down the button will allow quick advance.
3. Press S2 button to set the Chronograph Second Hand and Chronograph Minute Hand in clockwise direction. Holding down the button will allow quick advance.
4. Push crown back to position A to set.

TO SET THE TIME:

1. Pull crown out to position B.
2. Turn crown clockwise or counter-clockwise to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.

 
3. To reset to zero, press S1 button to stop counting and then press S2 button.

For the measurement of split time,

1. Press S1 button to start counting.
2. While the Chronograph is running, press S2 button once to register a lap. The Chronograph is still running in the background.
3. To display the currently accumulated time, press S2 button again. The two Chronograph hands will quickly advance to the ongoing measured time.
4. Repeat the last step until all the laps have been registered.
5. To reset to zero, press S1 button to stop counting and then press S2 button.

FOUR-EYR CHRONOGRAPH MODEL

1. Hour Hand
2. Minute Hand
3. Second Hand
4. Chronograph
1/10 Second Hand
5. Chronograph Second Hand
6. Chronograph Minute Hand
7. 24 Hour Hand

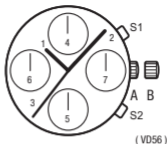

S1 – Chronograph Start/Stop Button

S2 – Chronograph Split/Split Release/Reset Button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph 1/10 Second Hand, Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the chronograph is in use, press the button in the following order to reset it, and then check if the chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2
If the split time is displayed:	S2 → S1 → S2

In case one or several chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull crown out to first click position B.
2. Press S1 button to set the Chronograph 1/10 Second Hand. Holding down the button will allow quick advance.
3. Press S2 button to set the Chronograph Second Hand and Chronograph Minute Hand (mechanically coupled). Holding down the button will allow quick advance.
4. Push crown back to position A to set.

TO SET THE TIME:

1. Pull crown out to first click position B.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.

3. To reset to zero, press S1 button to stop counting and then press S2 button.

 
For the measurement of split time,

1. Press S1 button to start counting.
2. While the chronograph is running, press S2 button once to register a lap. The chronograph is still running in the background.
3. To display the currently accumulated time, press S2 button again. The three chronograph hands will quickly advance to the ongoing measured time.
4. Repeat the last step until all the laps have been registered.
5. To reset to zero, press S1 button to stop counting and then press S2 button.

NOTE: Chronograph 1/10 Second Hand moves for the first minute. After one minute, it indicates the measured time when it is stopped.

DIGITAL WATCH WITH TWO LINES DISPLAY

- S1. Light Button
- S2. Set Button
- S3. Mode Button

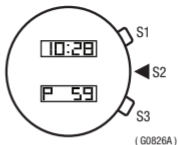

DISPLAY MODES:

The watch has two display modes: NORMAL TIME, CALENDAR.

To change from one display mode to another, press S3 button once.

NOTE: In CALENDAR mode, the watch will automatically return to NORMAL TIME mode if there is no button pressed for approximately 3 seconds.

TO SET THE TIME AND CALENDAR:

1. In NORMAL TIME mode, Press and hold S2 button for 3 seconds to enter SETTING mode, the second digits will blink.
2. Press S3 button to reset the second digits to zero.
3. Press S2 button, the minute digits will blink.
4. Press S3 button to set the minute. Holding down the button will speed up the process.

 
5. Press S2 button, the hour digits will blink.
6. Press S3 button to set the hour. Holding down the button will speed up the process.
7. Follow the same pattern to set the month, date, day (of the week) and 12/24-hour format.
8. When finished making all the settings, press S2 button to confirm and return to NORMAL TIME mode.

NOTE: In SETTING mode, the watch will automatically return to NORMAL TIME mode if there is no button pressed for approximately 10 seconds.

TO USE THE BACKLIGHT:

Press S1 button once to turn on the backlight for approximately 3 seconds.

DIGITAL WATCH WITH VERTICAL TIME DISPLAY

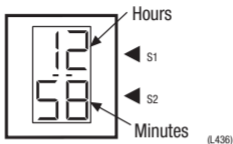

S1 – Mode Button

S2 – Set Button

DISPLAY MODES:

The watch has three display modes: TIME, CALENDAR and SECONDS.

To change from one display mode to another, press S1 button once.

NOTE: In CALENDAR mode, the watch will automatically return to TIME mode if there is no buttons pressed for approximately 3 seconds.

TO SET THE TIME AND CALENDAR:

1. Press S1 button to select TIME mode.
2. Press S2 button twice, the month digits will be displayed.

3. Press S1 button to set the month digits. Holding down the button will speed up the process.
4. Press S2 button, the date digits will be displayed.
5. Press S1 button to set the date digits.
6. Press S2 button, the hour digits, colon and A or P (representing A.M. and P.M. respectively) will be displayed.
7. Press S1 button to set the hour digits.
8. Press S2 button, colon and the minute digits will be displayed.
9. Press S1 button to set the minute digits.
10. Press S2 button, the hour digits, colon and the minute digits will be displayed.
11. When finished making all the settings, press S1 button to confirm. The colon will blink.

DIGITAL WATCH WITH TOUCH SENSOR TECHNOLOGY AND PUSH BUTTON ACTIVATION

- S1. Start/Stop sensor
- S2. Set/reset sensor
- S3. Mode sensor
- S4. Light sensor
- S5. Touch sensor unlock button



TO LOCK AND UNLOCK THE TOUCH SENSORS:

There are 4 touch sensors around the lens of the watch (S1,S2,S3,and S4). To unlock the sensors, press S5 button. The touch sensor indicator (T) will be displayed to indicate the touch sensors are unlocked.

When no sensors are pressed for 10 seconds, the touch sensor lock will automatically be activated (except in CHRONOGRAPH mode and TIMER mode when the chronograph or timer is in use) and the touch sensors will be locked.

DISPLAY MODES:

The watch has five display modes: NORMAL TIME, WORLD TIME (WT), ALARM (AL), CHRONOGRAPH (CR) and TIMER (TR).

To change from one display mode to another, press S3 sensor once.

NOTE: In any setting mode, when there is no sensor pressed for 30 seconds, the watch will automatically save the entered data and exit the setting procedure.

TO SET THE TIME AND CALENDAR:

1. Press S3 sensor to select NORMAL TIME mode.
2. Press and hold S2 sensor, the message "HOLD TO SET" will be displayed for 2 seconds and the local city selection will blink.
Press S1 or S2 sensor to cycle forward or backward through the 32 preset cities/ time zones to select your home city for display in NORMAL TIME.
3. Press S3 sensor, the Daylight Savings Time (DST) setting will blink. Press S1 or S2 sensor to toggle between ON and OFF of the DST setting. Note that setting DST for NORMAL TIME does not automatically apply to the same city in WORLD TIME. You must apply DST to WORLD TIME cities separately.
4. Press S3 sensor, the hour digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
5. Press S3 sensor, the minute digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
6. Press S3 sensor, the second digits will blink. Press S1 or S2 sensor to reset the second digits to zero.
7. Press S3 sensor, the year digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
8. Press S3 sensor, the month digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
9. Press S3 sensor, the date digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
10. Press S3 sensor, the hour format setting will blink. Press S1 or S2 sensor to toggle between 12-hour and 24-hour format. The P.M. indicator may be displayed to indicate the time period 12:00 P.M. – 11:59 P.M. in 12-hour format.

11. Press S3 sensor, the “BEEP” setting will blink. The “BEEP” option will cause the watch to beep anytime a sensor or button is pressed. Press S1 or S2 sensor to toggle between ON and OFF for the beep setting.
12. Press S3 sensor, the hourly chime (CHIME) setting will blink. Press S1 or S2 sensor to toggle between ON and OFF for the hourly chime setting.
13. When finished making all the settings, press and hold S3 sensor for approximately 3 seconds to confirm.

NOTE: The day (of the week) is automatically set in accordance with the date. The date can be set within the range of 1 January 2009 to 31 December 2099.

NOTE: The selected hour format will apply to both NORMAL TIME mode and WORLD TIME mode.

TO SELECT AND DISPLAY THE TIME OF WORLD TIME CITY IN WORLD TIME MODE:

1. Press S3 sensor to select WORLD TIME mode.
2. To make the world time city selection, press S1 or S2 sensor to cycle forward or backward through the 32 preset cities / time zones.
3. Press and hold S1 sensor for approximately 3 seconds to toggle between DST and Standard Time. The DST indicator **DST** will be displayed when Daylight Savings Time is displayed.

NOTE: When you have applied DST for individual cities / time zones, the respective time will be adjusted forward by 1 hour. Please make sure you have correctly applied DST for the selected local city and world time cities with reference to information available on the Internet, or else the watch will not be able to display the time of individual cities / time zones properly.

WORLD TIME CITY CODE REFERENCE TABLE:

	GMT Differential	City Code	City	Other major cities in the same time zone
1	-11	PPG	PAGO PAGO	-----
2	-10	HNL	HONOLULU	PAPEETE
3	-9	ANC	ANCHORAGE	NOME
4	-8	YVR	VANCOUVER	LAS VEGAS, SEATTLE, DAWSON CITY, SAN FRANCISCO
5		LA	LOS ANGELES	
6	-7	DEN	DENVER	EL PASO, EDMONTON
7	-6	ME	MEXICO CITY	HOUSTON, DALLAS/ FORT WORTH, NEW ORLEANS, WINNIPEG
8		CHI	CHICAGO	
9	-5	MIA	MIAMI	MONTREAL, DETROIT, BOSTON, PANAMA CITY, HAVANA, LIMA, BOGOTA
10		NYC	NEW YORK	
11	-4	SAN	SANTIAGO	LA PAZ, PORT OF SPAIN
12	-3	RIO	RIO DE JANEIRO	SAO PAULO, BUENOS AIRES, BRASILIA, MONTEVIDEO
13	+0	LON	LONDON	DUBLIN, LISBON, CASABLANCA, DAKAR, ABIDJAN
14	+1	PAR	PARIS	MILAN, FRANKFURT, AMSTERDAM, VIENNA, AL GIERS, STOCKHOLM, HAMBURG
15		MAD	MADRID	
16		ROM	ROME	
17		BER	BERLIN	

18	+2	IST	ISTANBUL	ATHENS, HELSINKI, BEIRUT, DANASCUS, CAPE TOWN, JERUSALEM
19		CAI	CAIRO	
20	+3	MOW	MOSCOW	KUWAIT, RIYADH, ADEN, ADDIS ABABA, NAIROBI
21	+4	DBI	DUBAI	ABU DHABI, MUSCAT
22	+5	KHI	KARACHI	-----
23	+5.5	DEL	DELHI	MUMBAI, KOLKATA
24	+6	DAC	DACCA	-----
25	+7	BKK	BANGKOK	JAKARTA, PHNOM PENH, HANOI, VIENTIANE
26	+8	SIN	SINGAPORE	KUALA LUMPUR, TAIPEI, PERTH, BEIJING, MANILA, ULAANBAATAR
27		HKG	HONG KONG	
28	+9	TYO	TOKYO	PYONGYANG, SEOUL
29	+10	GUM	GUAM	MELBOURNE, RABAU
30		SYD	SYDNEY	
31	+11	NOU	NOUMEA	PORT VILA
32	+12	WLG	WELLINGTON	CHRISTCHURCH, NADI, NAURU ISLAND


TO SET THE ALARM TIME:

1. Press S3 sensor to select ALARM mode.
2. Press and hold S2 sensor, the message "HOLD TO SET" will be displayed for approximately 2 seconds and the hour digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.

3. Press S3 sensor, the minute digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
4. When finished making all the settings, press and hold S3 sensor for approximately 3 seconds to confirm.

NOTE: The alarm will automatically be activated after being set.

TO TURN ON/OFF THE ALARM:

In ALARM mode, press S1 sensor to toggle between ON and OFF of the alarm. When the alarm is ON, the alarm indicator  will appear.

WHEN AN ALARM GOES OFF:


An alarm tune will be emitted at the designated time when the alarm is activated. To stop the tune, press any sensor or button.

TO USE THE CHRONOGRAPH:

1. Press S3 sensor to select CHRONOGRAPH mode.
2. For the measurement of elapsed time in CHRONOGRAPH mode, press S1 sensor to start counting.
3. To stop counting, press S1 sensor.
4. To restart counting to resume from where it left off, press S1 sensor again.
5. To reset to zero, press S1 sensor to stop counting and then press S2 sensor.

NOTE: The touch sensor lock will not be activated in CHRONOGRAPH mode when the chronograph is in use.

NOTE: The chronograph can count up to a maximum of 23 hours, 59 minutes and 59.99 seconds

NOTE: You can leave the chronograph running while switching over to other operating modes. The chronograph indicator  will be displayed in NORMAL TIME mode and WORLD TIME mode when the chronograph is in use.

TO SET THE TIMER:

1. Press S3 sensor to select TIMER mode.
2. Press and hold S2 sensor, the message "HOLD TO SET" will be displayed for approximately 2 seconds and the hour digits will blink.
Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
3. Press S3 sensor, the minute digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
4. Press S3 sensor, the second digits will blink. Press S1 sensor to increase or S2 sensor to decrease the value. Holding down the sensor will speed up the process.
5. Press S3 sensor, the "Action-at-End*" setting will blink. Press S1 or S2 sensor to toggle between STOP AT END and REPEAT AT END.
6. When finished making all the settings, press and hold S3 sensor for 3 seconds to confirm.



NOTE* : Action-at -END setting option definitions:

- a) STOP AT END – the timer will stop when the countdown reaches zero.
- b) REPEAT AT END – the timer will repeat the countdown when the countdown reaches zero.

TO USE THE TIMER:

1. Press S3 sensor to select TIMER mode.
2. To start a new counting, press S1 sensor.
3. To stop counting, press S1 sensor.
4. To resume a counting from where it left off, press S1 sensor to restart.
5. To reset timer: If counting is stopped press S2 sensor; If counting is running, press S1 sensor to stop and then press S2 sensor to reset the count.
6. Upon completion of a countdown, if STOP AT END is selected as the action to be taken, the timer stops at zero and a beep (for timer of less than 30 seconds) / tune (for time of 30 seconds or more).

NOTE: The touch sensor lock will not be activated in TIMER mode when the timer is in use.

NOTE: You can leave the timer running while switching over to other operating modes. The timer indicator  (STOP AT END)/  (REPEAT AT END) will be displayed in NORMAL TIME mode and WORLD TIME mode when the timer is in use.

TO USE THE BACKLIGHT:

Press S4 sensor to turn on the backlight for 3 seconds.

NOTE: Continual use of backlight will result in significant consumption of the battery power. This will reduce the normal battery life time to less than 1 year.

ABOUT AUTOMATIC SELF-WINDING MECHANICAL WATCHES:

The Automatic Self-Winding Mechanical Watch is not operated by a battery. You must wind it six or seven times before wearing. After that, your daily activity should wind the watch sufficiently to keep it running at night when it is not being worn. Occasional supplementary manual winding may be necessary. It is suggested that your mechanical watch be cleaned and oiled periodically to insure optimum performance. As this is a mechanical watch, quartz watch accuracy cannot be expected.

TO WIND THE MAINSPRING:

1. Hand wind by turning the crown clockwise in position A. Wind 15-20 times.
2. The wearer can also wind the watch by moving his/her wrist from side to side several times.

ABOUT SELF-WINDING MECHANICAL WATCHES:

Self-Winding Mechanical Watch is not operated by a battery. You must wind it six or seven times before wearing.

Occasional supplementary manual winding may be necessary. It is suggested that your mechanical watch be cleaned and oiled periodically to insure optimum performance. As this is a mechanical watch, quartz watch accuracy cannot be expected.

 
TO WIND THE MAINSPRING:

Hand wind by turning the crown clockwise in position A. Wind 15-20 times.

SCREW-DOWN CROWN

Some watch models are equipped with a screw-down crown. Make sure to un-screw the crown before pulling out the crown for setting, then screw the crown back in tightly after setting to avoid any water entry.

AUTOMATIC TWO OR THREE-HAND MODELS

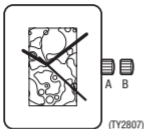

(TY2807)



(TY2836SK)
(TY2809)
(TY2807)



(TY2807)



(TY6C1K)



(TY2509)



(DP3501/2025)

TO SET THE TIME:

1. Pull the crown out to first click position B.
2. Turn crown to set time.
3. Push crown back to position A.

CAUTION:

This automatic multi-function watch has a very delicate movement. You are advised to read the following instructions carefully ahead of any operations.

AUTOMATIC MULTI-FUNCTION

- 1.Hour Hand
- 2.Minute Hand
- 3.Second Hand
- 4.Date Window
5. Power Reserve Hand



S1 – Date Set Button

(TY2505)

TO SET THE TIME:

1. Pull crown out to first click position B.
2. Turn crown clockwise to set time.
3. Push crown back to position A.

TO SET THE DATE:

Press S1 button to set the date.

CAUTION:

ALWAYS turn the crown in clockwise direction (watch hands moving in clockwise direction) to set the time. Otherwise, the movement may be damaged when

pushing the date set button. If you accidentally turn the crown in counter-clockwise direction during time adjustment, make sure to turn the crown in clockwise direction until the date changes before you further operate the day/date/month set button.

 
Avoid all time and calendar adjustments between 10:00P.M. and 2:00A.M. Otherwise, the watch movement will be damaged.

CAUTION:

This automatic multi-function watch has a very delicate movement. You are advised to read the following instructions carefully ahead of any operations.

AUTOMATIC MULTI-FUNCTION

- 1.Hour Hand
- 2.Minute Hand
- 3.Second Hand
- 4.Day Hand
- 5.Date Window
- 6.Month Hand

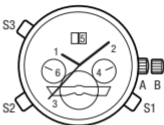

(TY2525)

- S1 – Day of the week Set Button
 S2 – Month Set Button
 S3 – Date Set Button

TO SET THE TIME:

1. Pull crown out to first click position B.
2. Turn crown counter-clockwise to set time.
3. Push crown back to position A.

TO SET THE DAY:

Press S1 button to set day.

TO SET THE DATE:

Press S3 button to set the date.

TO SET THE MONTH:

Press S2 button to set the month.

CAUTION:

ALWAYS turn the crown in counter-clockwise direction (watch hands moving in clockwise direction) to set the time. Otherwise, the movement may be damaged when pushing the day/date/month set button. If you accidentally turn the crown in clockwise direction during time adjustment, make sure to turn the crown in counter-clockwise direction until the date changes before you further operate the day/date/month set button.

Avoid all time and calendar adjustments between 10:00P.M. and 2:00A.M. Otherwise, the watch movement will be damaged.

ABOUT MANUAL WATCHES:

The manual Watch is not operated by a battery. You must wind it daily before wearing. Please be caution while you are winding the manual watch. Please stop winding when you start to feel slight resistance. Otherwise, the watch movement will be damaged. It is suggested that your manual watch be cleaned and oiled periodically to insure optimum performance. As this is a manual watch, quartz watch accuracy cannot be expected.

TO WIND THE MAINSPRING:

Hand wind by turning the crown clockwise in position A. Wind 15-20 times.

MANUAL TWO-HAND MODEL



TO SET THE TIME:

1. Pull the crown out to first click position B.
2. Turn crown to set time.
3. Push crown back to position A.

For repair and warranty information,
please visit our website at:

www.genevawatchgroup.com

KCWB0315