


#1222 PERFORMANCE VCO USER GUIDE

1. **Octave Switch** - 5 positions
2. **Fine Tune** - range of one octave
3. **Tuner** - shows note and indicates sharp/flat
4. **Pulse Width**
5. **1v/Oct pitch CV input**
6. **Frequency CV input and attenuator**
7. **Pulse Width Modulation CV input and attenuator**
8. **Frequency Sync input**
9. **Frequency Modulation input**
10. **Square, Ramp & Triangle outputs**
11. **Calibration Trimmers**

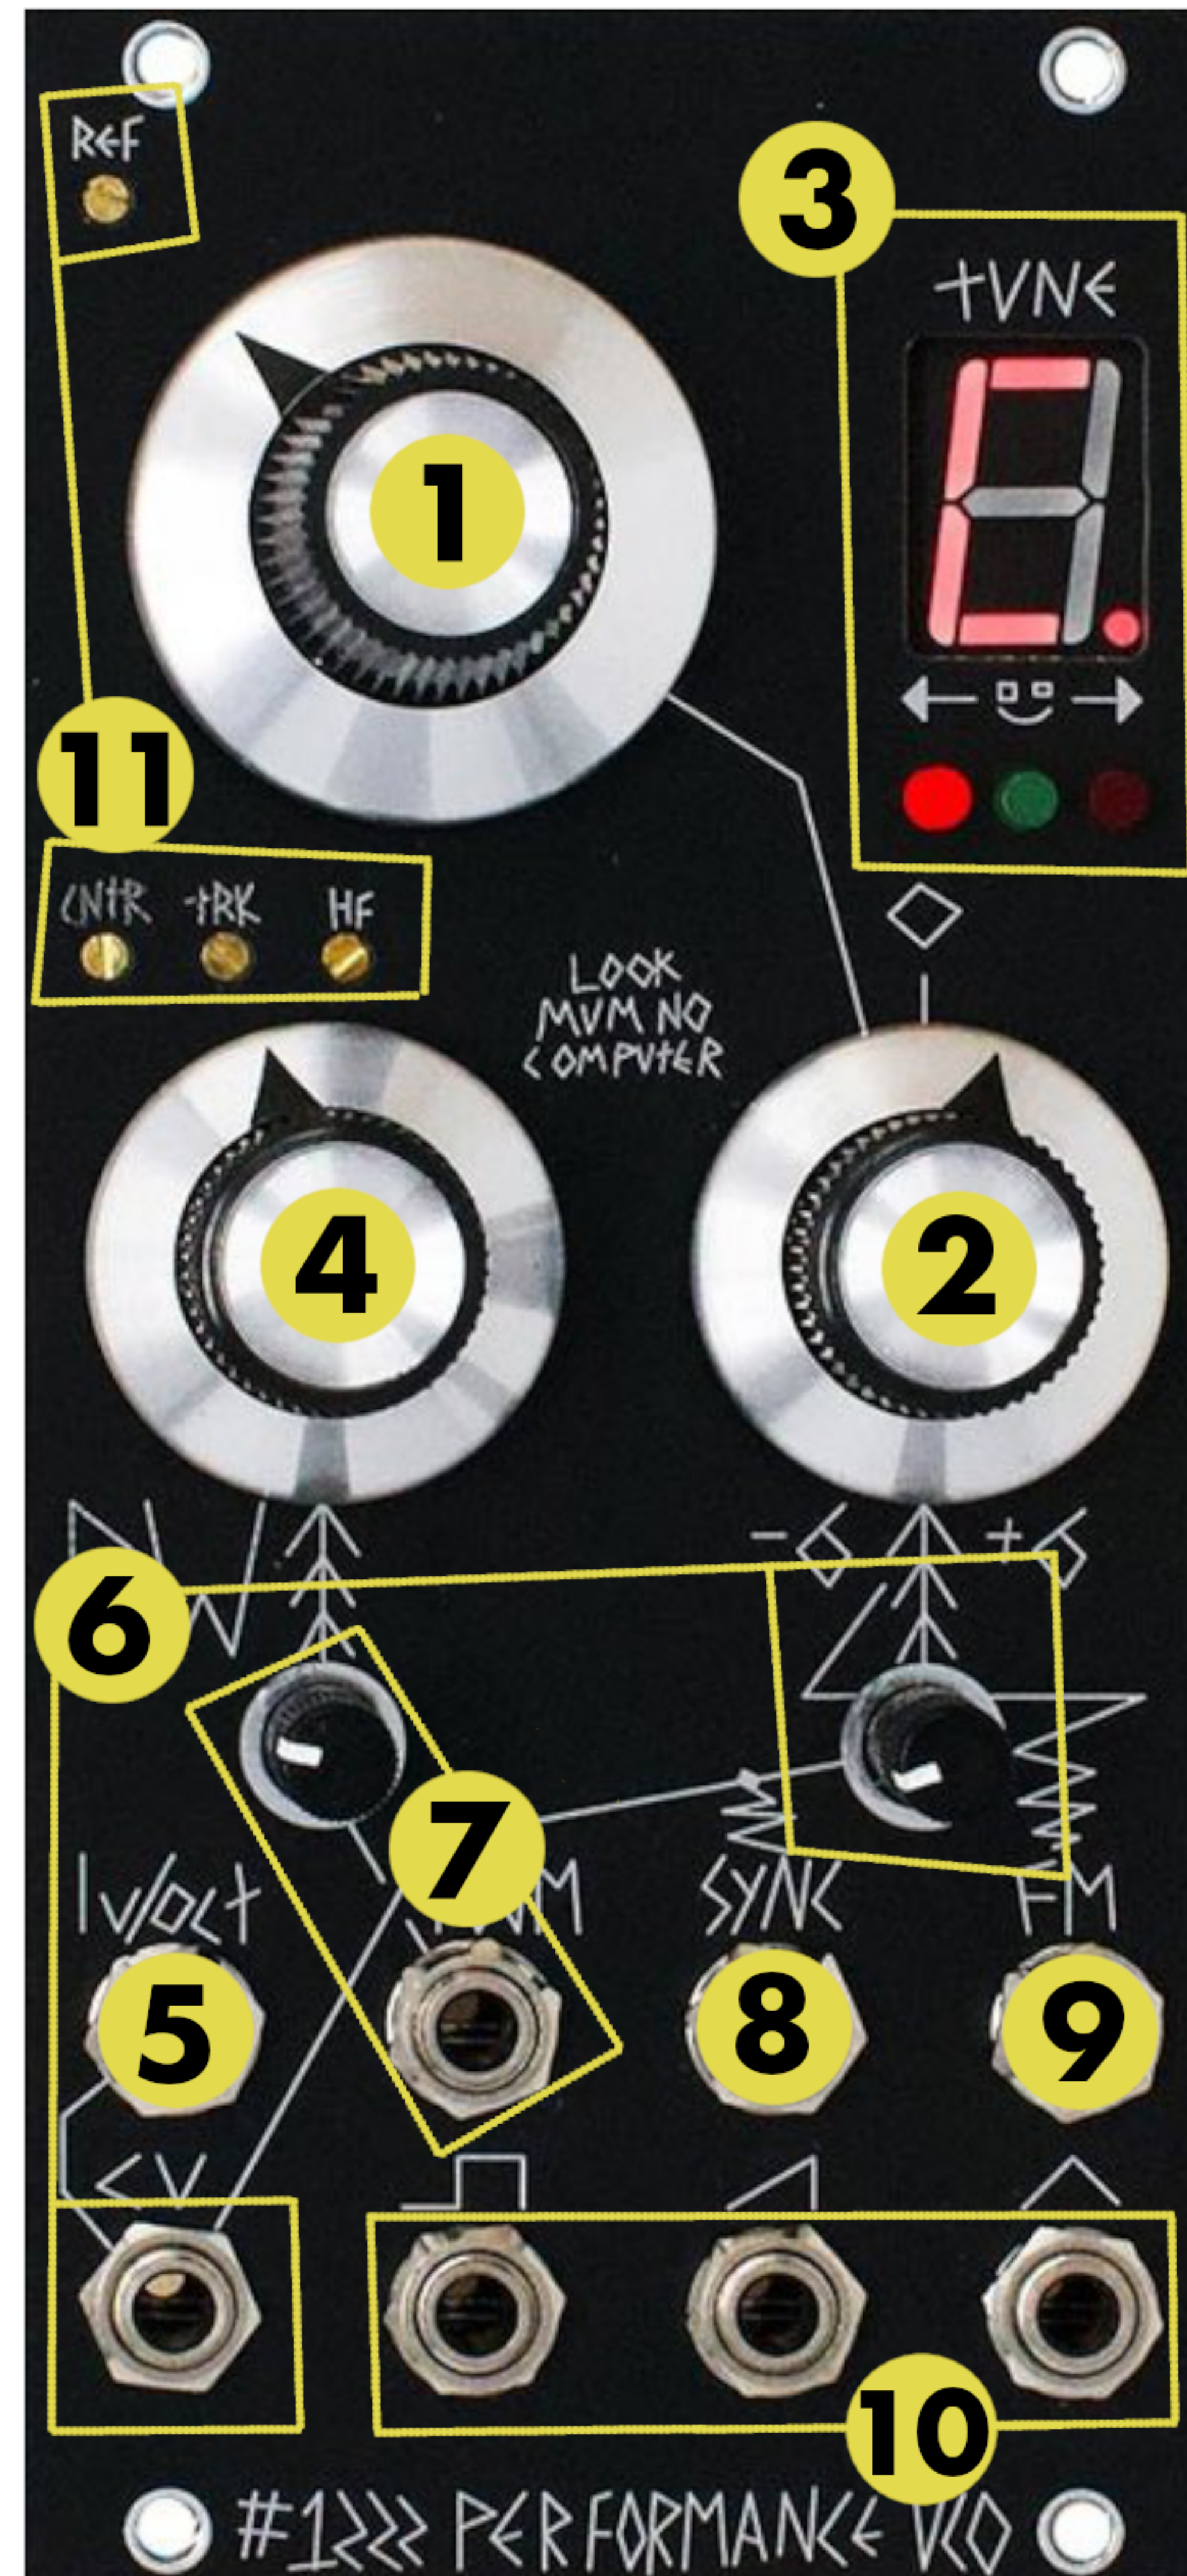

CALIBRATION

REF: sets the reference voltage of the test point on the rear of the module. This should be 4V.

CNTR: sets the frequency of the fine tune knob in it's center position.

TRK: sets the tracking of the 1v/oct pitch control. Expands or narrows the interval between notes selected via contol voltage.

HF: High frequency tracking. Does the same job as TRK but specifically at higher frequencies.

Watch the calibration & demo video on LMNC YouTube