



# **Video Recording**

## **OPERATION GUIDE**

for

Gov Video Recorder 9  
Court Video Recorder 9  
Interview Video Recorder 9

## **About This Manual**

This manual covers the installation procedures for the video recording using SoniClear software and systems, including the following products:

- SoniClear Gov Video Recorder 9
- SoniClear Court Video Recorder 9
- SoniClear Interview Video Recorder 9
- Axis Video Camera Kits
- Axis Video Encoder Kit

Printed in the United States.

© Copyright 1998 - 2017 Trio Systems LLC

Updated 7/12/17

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher.

SoniClear and Trio Systems are registered trademarks of Trio Systems LLC. Portable Recorder, SoniClear Gov, Gov Video Recorder 9, Court Video Recorder 9, Interview Video Recorder 9, and VoiceBoost are exclusive trademarks of Trio Systems LLC.

# Table of Contents

SoniClear Video Recording .....	5
Overview .....	5
SoniClear Video Kits .....	5
Axis M1065 Video Camera Kit .....	6
Axis P1365 Video Camera Kit .....	6
Axis V59 Video Camera Kit .....	7
Axis F44 Video Camera Kit .....	7
Axis Q7401 Video Encoder Kit .....	8
Recommended Optional Equipment: .....	9
Recording with the Video Recording Kit .....	11
Using the M1065 Video Camera Kit .....	11
Using the P1365 Video Camera Kit .....	11
Using the V59 Video Camera Kit .....	12
Using the F44 Video Camera Kit .....	13
Using the Video Encoder Kit .....	14
Setting Up the SoniClear System .....	15
Hardware Requirements .....	15
Network Address Configuration .....	15
Network Device Power Settings .....	18
Disable WiFi .....	18
NOD32 Antivirus Setup .....	19
Configure Windows Firewall .....	21
Install Axis Video and Audio Software .....	22
Install SoniClear 9 Software .....	23
Configure SoniClear 9 Software Preferences .....	23
Transcriber Live Configuration .....	24
SoniClear Player Configuration .....	25
Configure Camera Audio Playback .....	25
Custom Video Configuration .....	26
Connecting the Axis Camera .....	26
Connecting the Axis Encoder .....	26
Configure the Axis Device .....	27
Hardware Warranty and Repair .....	33
Hardware Information: .....	33



# **SoniClear Video Recording**

## **Overview**

SoniClear video recording products are designed to make it easy to capture digital video along with digital audio. The software works with compatible Axis video cameras and encoders, and keeps the audio and video synchronized during playback. The user can select audio from any microphone or the microphone in the camera while viewing synchronized video of the event. The current release supports a single Axis camera or encoder that is connected via Ethernet.

## **SoniClear Video Kits**

SoniClear Video Camera Kits are available for use with Gov Video Recorder 9, Court Video Recorder 9, and Interview Video Recorder 9. The kits include either an Axis camera, or an Axis video encoder for connection to an existing video camera or video switcher. The kits also include all of the required parts to start video recording quickly and easily.

## **Axis M1065 Video Camera Kit**

The Axis M1065 Video Camera Kit includes the following hardware:

- Axis M1065 video camera  
<http://www.axis.com/us/en/products/axis-m1065-1>
- A desktop tripod with an adapter for mounting the M1054 camera.
- Axis POE Power Injector for remotely powering the camera.
- Flexible 25' Ethernet cable for connecting camera to the Power Injector.
- Standard 6' Ethernet cable for connecting the Power Injector to the computer.

## **Axis P1365 Video Camera Kit**

The Axis P1365 Video Camera Kit includes the following hardware:

- Axis P1365 video camera  
<http://www.axis.com/us/en/products/axis-p1365>
- Axis Q7401 video encoder (optional)  
[www.axis.com/products/cam\\_q7401](http://www.axis.com/products/cam_q7401)
- Netgear GS105PE Network Switch (or similar)  
<http://www.netgear.com/business/products/switches/unmanaged-plus/GS105PE.aspx>

or

Axis T8120 POE Power Injector  
<http://www.axis.com/us/en/products/midspans/axis-t8120-midspan-15-w-1-port>

- Flexible 25' Ethernet cable for connecting camera to the Power Injector.
- Standard 6' Ethernet cable for connecting the Power Injector to the computer.

## **Axis V59 Video Camera Kit**

The Axis V59 Video Camera Kit includes the following hardware:

- Axis V59 video camera  
<https://www.axis.com/us/en/products/axis-v59-series>
- Flexible 25' Ethernet cable for connecting camera to the Power Injector.

## **Axis F44 Video Camera Kit**

The Axis F44 Video Camera Kit includes the following hardware:

- Axis F44 video camera encoder  
[www.axis.com/products/f\\_series/index.htm](http://www.axis.com/products/f_series/index.htm)
- Axis F1015 Varifocal camera head with 39 Foot Cable (4 heads)  
[www.axis.com/us/en/products/axis-f1015](http://www.axis.com/us/en/products/axis-f1015)
- Axis F8203 Tripod Mounting Bracket (4 mounts)  
[http://classic.www.axis.com/files/manuals/ig\\_axisf8203\\_57321\\_en\\_1406.pdf](http://classic.www.axis.com/files/manuals/ig_axisf8203_57321_en_1406.pdf)
- Axis POE Power Injector for remotely powering the camera.
- Flexible 25' Ethernet cable for connecting camera to the Power Injector.
- Standard 6' Ethernet cable for connecting the Power Injector to the computer.

## **Axis Q7401 Video Encoder Kit**

The Axis Video Encoder Kit includes the following hardware:

- Axis Q7401 video encoder  
[www.axis.com/products/cam\\_q7401](http://www.axis.com/products/cam_q7401)
- BNC to RCA composite video adapter. (Note: User must provide a cable for connection to a standard composite video source, such as a professional camcorder or video switcher.)
- Axis POE Power Injector for remotely powering the encoder.
- Flexible 25' Ethernet cable for connecting camera to the Power Injector.
- Standard 6' Ethernet cable for connecting the Power Injector to the computer.



## Recommended Optional Equipment:

The follow equipment can be used with the Axis Camera Kit and the Axis Encoder Kit to optimize the configuration for various requirements:

- **SoniClear Tablet Recorder System.** This is a Microsoft Surface Pro 4 business-class laptop with an i5 processor.

[http://www.soniclear.com/Tablet\\_Recorder.html](http://www.soniclear.com/Tablet_Recorder.html)

- **Ethernet POE switch.** Used for connecting both the camera device and a network connection to a single Ethernet jack on the computer. The POE power output from the switch eliminates the need to power the camera using a power brick or POE Injector. Recommend switches:

- o Netgear GS105PE, which supports up to 4 video cameras

<http://www.bhphotovideo.com/c/product/1116815-REG>

- o D-Link DES1005P, which is smaller, less expensive, and supports one camera

[www.bhphotovideo.com/c/product/859848-REG](http://www.bhphotovideo.com/c/product/859848-REG)

- **Microphones for recording audio.** Various SoniClear microphones will work with video, including multichannel recording interfaces, such as the Motu 4Pre and Motu 8PreUSB. Consult with SoniClear for recommended audio additions to the video kit:

[http://www.soniclear.com/Products.html#Computer\\_Microphone\\_Products](http://www.soniclear.com/Products.html#Computer_Microphone_Products)

- **Ethernet Crossover Adapter.** Please note that some computers will need to connect to the camera using an Ethernet Crossover Adapter. However, in testing we have found the computer usually does not need this adapter. If you are connecting the camera and computer into an Ethernet switch, no Ethernet Crossover Adapter is required, as this functionality is provided by the switch. StarTech Ethernet crossover adapter:

<https://www.startech.com/Cables/Network/Network-Adapters/Cat-6-Gigabit-Crossover-Adapter~C6CROSSOVER>



# **Recording with the Video Recording Kit**

## **Using the M1065 Video Camera Kit**

The Video Recording Kit with the Axis M1065 Camera is supplied ready to use. Once the SoniClear software has been installed and the computer has been configured for video, you can start recording using these setup steps:

1. Set up the computer and microphones as required for the recording.
2. Set up the Axis camera on the supplied desktop tripod, or other user-supplied tripod.
3. Plug the 25' Ethernet cable into the Axis camera.
4. Plug the other end of the 25' Ethernet cable into the Power Injector (such as the Axis T9120). Be sure to use the jack labeled "Data & Power Out".
5. Plug the 6' Ethernet cable into the jack labeled "Data In" and plug the other end of the cable into the laptop or desktop computer.
6. Run SoniClear and record as directed in the SoniClear Users Guide.

## **Using the P1365 Video Camera Kit**

The Video Recording Kit with the Axis P1365 Camera is supplied ready to use. Once the SoniClear software has been installed and the computer has been configured for video, you can start recording using these setup steps:

1. Set up the computer and microphones as required for the recording.
2. Set up the Axis camera on a user-supplied tripod.
3. Plug the 25' Ethernet cable into the Axis camera.
4. For kits that do not include a Q7401 encoder:
  - a. Plug the other end of the 25' Ethernet cable into the Power Injector (such as the Axis T9120). Be sure to use the jack labeled "Data & Power Out".
  - b. Plug the 6' Ethernet cable into the jack labeled "Data In" and plug the other end of the cable into the Ethernet Crossover Adapter.
  - c. Plug the Ethernet Crossover Adapter into the Ethernet jack in the laptop or desktop computer.

- d. Plug the audio feed from the microphone or sound system into the microphone input jack on the back of the camera. The kit of parts to make this connection will vary, depending on the sound system. Contact SoniClear for assistance with this connection.
5. For kits that do include a Q7401 encoder:
  - a. Plug the camera and encoder into the Netgear switch. Note that the camera and encoder can be located anywhere, they do not need to be next to each other or the computer.
  - b. Plug the Netgear switch into the computer.
  - c. Plug the audio feed from the microphone or sound system into the microphone input jack on the Q7401.
  - d. Note: For systems using the Netgear switch (or equivalent).
6. Run SoniClear and record as directed in the SoniClear Users Guide.
7. Loosen the focus and zoom adjustments on the camera. View the SoniClear Liveview video preview window while adjusting the focus and zoom to the appropriate coverage of the room. After adjustment is complete, tighten the focus and zoom adjustments to prevent shifting.
8. After general adjustments have been made on the camera lens, it may be necessary to perform additional fine focus adjustment using the computer focus assist feature. Connect to the camera using a web browser (entering the user name and password for the camera). In the Settings section, select video settings and focus, following the steps outlined on that display.

## **Using the V59 Video Camera Kit**

The Video Recording Kit with the Axis V59 Camera is supplied ready to use. Once the SoniClear software has been installed and the computer has been configured for video, you can start recording using these setup steps:

1. Set up the computer and microphones as required for the recording.
2. Set up the Axis camera on a user-supplied tripod.
3. Plug the 25' Ethernet cable into the Axis camera.
4. Plug the other end of the 25' Ethernet cable into the Ethernet jack in the laptop or desktop computer.

5. Plug the audio feed from the microphone or sound system into the Left XLR microphone input jack on the back of the camera. For systems using the Motu 4Pre, the supplied cable connects from the camera XLR jack to the 4Pre Output #3 (1/4" phone plug).
6. Run SoniClear and record as directed in the SoniClear Users Guide.
7. Adjust the camera settings using the web control panel for the V59 camera. To do this, enter the address of the camera in the Microsoft Internet Explorer browser (such as 192.168.0.90). When prompted, enter the user name and password. After authentication, make the following adjustments:
  - a. Adjust Pan, Tilt, Zoom, and Focus manually in the main Live View window.
  - b. If needed, enter Preset locations for Pan, Tilt, Zoom in the Setup panel, under the *PTZ* section.
  - c. If needed, adjust White Balance in the Setup panel, under *Video and Audio/Camera Settings* section.

## **Using the F44 Video Camera Kit**

The Video Recording Kit with the Axis F44 Camera is supplied ready to use. Once the SoniClear software has been installed and the computer has been configured for video, you can start recording using these setup steps:

1. Set up the computer and microphones as required for the recording.
2. Set up each of the four the Axis camera heads on a user-supplied tripod. An optional 4-head mounting bracket is available to hold all four camera head units on a single tripod.
3. Plug the 25' Ethernet cable into the Axis F44 camera base unit.
4. Plug the other end of the 25' Ethernet cable into the Power Injector (such as the Axis T9120). Be sure to use the jack labeled "Data & Power Out".
5. Plug the 6' Ethernet cable into the jack labeled "Data In" and plug the other end of the cable into the Ethernet Crossover Adapter.
6. Plug the Ethernet Crossover Adapter into the Ethernet jack in the laptop or desktop computer.
7. Please note that some computers will connect to the camera without the need for the Ethernet Crossover Adapter. However, in testing we have found the camera may not always connect to the computer without the adapter. If you are

connecting directly to the camera as described in this section, using the adapter is necessary for reliable operation.

8. Plug the audio feed from the microphone or sound system into the microphone input jack on the F44 camera base unit.
9. Run SoniClear and record as directed in the SoniClear Users Guide.
10. Using a screw driver, loosen the focus and zoom adjustments on the camera. View the SoniClear Liveview video preview window while adjusting the focus and zoom to the appropriate coverage of the room. After adjustment is complete, tighten the focus and zoom adjustment screws to prevent shifting.

## **Using the Video Encoder Kit**

The Video Recording Kit with the Axis Q7401 Encoder is supplied ready to use. Once the SoniClear software has been installed and the computer has been configured for video, you can start recording using these setup steps:

1. Set up the computer and microphones as required for the recording.
2. Connect the Axis Q7401 encoder to the composite video output of the existing camera or video switching unit.
3. Connect the Axis encoder to the supplied Axis T9120 Power Injector. Be sure to use the jack labeled “Data & Power Out”.
4. Plug the 6’ Ethernet cable into the jack labeled “Data In” and plug the other end of the cable into the Ethernet Crossover Adapter.
5. Plug the Ethernet Crossover Adapter into the Ethernet jack in the laptop or desktop computer.
6. Alternatively, connect the Q7401 directly to the computer and power it using the included encoder power supply.
7. Run SoniClear and record as directed in the SoniClear Users Guide.

Please note that some computers will connect to the camera without the need for the Ethernet Crossover Adapter. However, in testing we have found the camera may not always connect to the computer without the adapter. If you are connecting directly to the camera as described in this section, using the adapter is necessary for reliable operation.

If you are connecting the encoder and computer into an Ethernet switch, no Ethernet Crossover Adapter is required.

# Setting Up the SoniClear System

The SoniClear Tablet Recorder system is ready to use for video recording without the need for additional configuration steps. If you are using SoniClear software with your own computer, you will need to perform the configuration and installation steps listed in this section.

## Hardware Requirements


The SoniClear video recording requires a computer that has the following minimum hardware specifications:

- Intel-based desktop or laptop computer with i5 or i7 processor.
- Windows 7 Operating System (64-bit recommended).
- System has been tested and passes the DPC Latency requirements listed in the SoniClear Installation Guide or the Court Recorder Installation Guide.
- SoniClear-compatible microphones.

## Network Address Configuration

If the camera is connected to the laptop (either directly using a crossover cable, or indirectly through an Ethernet switch), the laptop will need to be configured to connect to the camera without the use of an Ethernet router to assign an IP address. This is accomplished by setting a fixed IP address in the laptop network settings (Windows 7 instructions):

1. Open the Network and Sharing Center: select Start/Control Panel/Network and Sharing Center.
2. Click Change Adapter Settings link in left column.
3. Double click on Ethernet adapter entry to open the Connection Status dialog for that adapter.
4. Click the Properties button.
5. Double click on the Internet Protocol Version 4 entry to open the Local Area Connection Properties dialog.
6. Select the option “Use the following IP address”.
7. Set the IP address to 192.168.0.20 (or similar address on the same “subnet”).
8. Uncheck the option “Validate settings upon exit”.

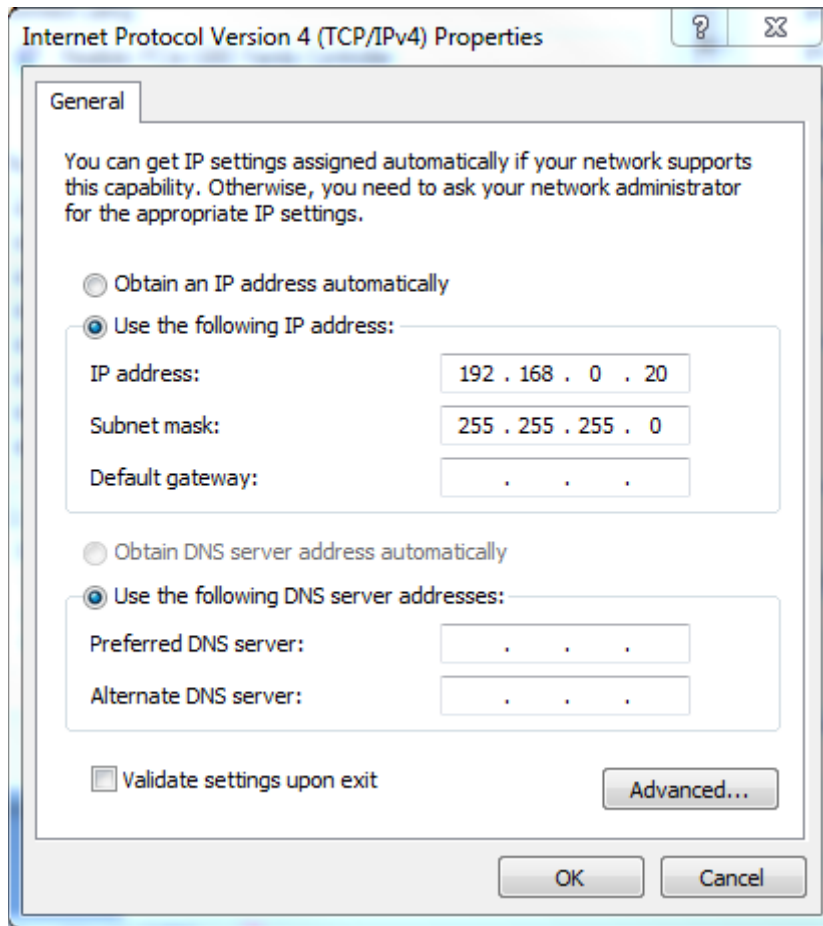

9. Make sure the Subnet mask is set to 255.255.255.0 and click OK.
10. Make sure the “Default gateway” field is blank (since there is no gateway used in this connection).
11. Make sure the DNS fields are also blank.
12. Click OK to close the Local Area Connection Properties dialog. This may display a diagnostic error dialog because this setting does not support connection to the Internet. Dismiss these dialogs.
13. Disconnect any Ethernet cable if it is not connected to the Axis camera.
14. Reboot the computer.
15. The computer will reset the Ethernet port to the new static address set in the Alternate Configuration dialog when you connect to the camera.



16. To confirm the port setting, make sure the camera is connected, and wait for the alternate IP address to be set (done when the little circle on the Ethernet connection turns to a warning triangle). Then click Start and enter cmd.exe into the search field. Run the cmd.exe program displayed, which will bring up a command line dialog.
17. On the command line enter the command: ipconfig. This will display the current computer IP address.
18. If the displayed IP address is not the one specified, enter the following additional commands:  
  

```
ipconfig /release  
ipconfig /renew  
ipconfig
```

  
The release and renew steps should force the IP address to the new setting, which will be confirmed by the last ipconfig command.
19. If the IP address does not set correctly, contact SoniClear Support for assistance.

**IMPORTANT NOTE:** after making these setting changes, the Ethernet port can only be used for connection to the camera. Use the WiFi connection for Internet access.

## **Network Device Power Settings**

By default the Ethernet network hardware in the computer will have power settings enabled. This will interfere with recording of video information sent through the Ethernet connection. The power saving settings must be disabled following these steps:

1. Open the Network and Sharing Center: select Start/Control Panel/Device Manager.
2. Open the Network Adapters section of the device list.
3. Double click on the Ethernet network device. (If there is more than one Ethernet device, configure the device that will be connected to the Axis camera).
4. In the device properties dialog select the Power Management tab.
5. The options displayed for power management will vary, depending on the type of network device. The generic option is "Allow the computer to turn off this device to save power". This should be unchecked. For Intel network devices the dialog will display is a set of options under the section "Power Saver Options". Uncheck all of these options to fully disable power saving.
6. Click OK .
7. Close all programs and reboot the computer.

## **Disable WiFi**

To ensure proper access to the camera via the Ethernet port, it is necessary to disable the WiFi transmitter while using the computer with the camera. Otherwise the computer will try to connect to the camera via WiFi and fail to connect. The most reliable way to accomplish this is to disable the WiFi driver in the Device control panel. Alternatively, it is possible on many laptop computers to manually disable the WiFi from a button. However, this requires that the system user be properly training on this detail and that they exercise care to make sure the WiFi is turned off before starting SoniClear.

## NOD32 Antivirus Setup

SoniClear has been tested for compatibility with the Eset NOD32 antivirus product. SoniClear video recording has not been tested with any other antivirus product and only NOD32 is recommended and supported.

By default the NOD32 antivirus scanning product tries to monitor the recording files being written by SoniClear. With audio this generally does not interfere. However, with the high data volume produced by video recording the antivirus product can introduce processor overhead and disk drive delays that will cause problems.

To prevent this type of interference, add exclusions in the antivirus software setup for the following file types:

- \*.video
- \*.index
- \*.state
- \*.mp3
- \*.wav
- \*.bkc
- \*.bkm
- \*.txt

Adjust the settings for NOD32 Real Time Scan following these steps:

1. Open the Eset NOD32 control panel: Click the Start button, click All Programs, scroll down and click Eset folder and the Eset NOD32 folder, then click the Eset NOD32 program icon.
2. In the NOD32 window click the Setup link in the left panel.
3. Click the link “Enter advanced setup...” in the right panel.
4. Double click on the Computer link to open that section.
5. Double click on the “Antivirus and antispysware” link to open that sub-section.
6. Click on the Exclusions link to open the Exclusion editing panel.
7. Click the Add button and enter an exclusion item listed above (such as \*.video).
8. Repeat the Add operation to add all of the file exclusions.
9. Click OK to close the setup window.
10. Click the link “Enter advanced setup...” in the right panel.
11. Double click on the Computer link to open that section.

12. Double click on the “Antivirus and antispysware” link to open that sub-section.
13. Click on the Real-time file system protection link to open those options.
14. Click on the Setup button for ThreatSense engine parameter setup.
15. Click on Extensions option.
16. Enter an exclusion item listed above, without the “\*.” characters (such as VIDEO)
17. Click the Add button.
18. Repeat the Add operation to add all of the file exclusions.
19. Click OK twice to close the editing dialogs and close the main NOD32 window.

Adjust the NOD32 web scanning feature to prevent the camera video from being scanned while recording:

1. Open Eset control panel (click on NOD32 icon in System Tray icon).
2. Click on Setup button on left.
3. Click on "Enter advanced setup" link.
4. Expand "Web and Email" settings tree.
5. Expand "Web access protection" settings tree.
6. Click on "URL address management" link.
7. Click the Add button and enter the IP address of the camera (such as 192.168.0.90).
8. Click OK to save the new IP address exclusion. Click Yes to accept security warning, if you get one.

## Configure Windows Firewall

After the SoniClear software has been installed the Windows Firewall must be modified to allow access from the SoniClear software to the Axis camera or encoder. Follow these steps:

1. Click Start button and select Control Panel.
2. Ensure that “Small Icons” is set as the display type.
3. Click on Windows Firewall.
4. Click on link in left column, “Allow a program or feature through Windows Firewall”.
5. Click the Change Settings button.
6. Click the Allow Another Program button.
7. If SoniClear 9 is shown on the list of programs:
  - a. Select SoniClear 9 on the list.
  - b. Click the Add button.
8. If SoniClear 9 is not shown on the list, continue:
  - a. Click the Browse button.
  - b. Navigate to the folder were SoniClear was installed, select the SoniClear9.exe program, and click Open.
  - c. Click the Add button.
9. Ensure that both of the check boxes for SoniClear 9 allowing access on Home/Work and for Public networks are checked.
10. Click OK button.
11. Close Control Panel.

## Install Axis Video and Audio Software

Software for the Axis camera must be installed on the recording computer. Run the Axis software installation program provided with the Video Recording Kit and following the instructions on screen:

InstallAxisCameraSoftware40.exe

If you are using the MJPEG video encoding option there are no additional Axis software requirements. If you are using H.264 video, however, you will need to install the Axis software on all workstations that will be playing video recorded in H.264 format. Run the provided Axis Camera Software Installer on each playback computer to install the H.264 and AAC decoders required for playing these types of recordings.

The SoniClear video software and solution kits provide a license package that allows for installation of the H.264 and AAC decoders included in the Axis Camera Software Installer.

If you wish to install the Axis camera software on more systems than provided by SoniClear or the Axis cameras being installed, a 50-unit license pack (Axis part number 0160-060) must be purchased first. Contact SoniClear to purchase this license product. It can also be purchased from any Axis distributor, or as a drop-ship item from B&H:

<http://www.bhphotovideo.com/c/product/600593-REG/>

**IMPORTANT LICENSING INFORMATION:** A single license for the H.264 and AAC decoders is included with each camera or encoder device. Before running the Axis Camera Software Installer on more than one recording or playback computer you must have a license for the decoders that will be copied to each computer in this installation process. A copy of the license agreement is included with the decoder license package. Some applications, such as commercial recording and distribution of video content for profit, may require additional licensing arrangements with MPEGLA, the patent licensing organization for H.264 and AAC. More information is available on their website at: [www.mpegla.com](http://www.mpegla.com). See the section “Request A License”, and “AVC/H.264 License Agreement”.

## Install SoniClear 9 Software

Install the SoniClear software following the directions in the SoniClear Installation Guide for Gov Video Recorder 9 or Interview Video Recorder 9. For Court Video Recorder 9 consult the Court Recorder Installation Guide.

## Configure SoniClear 9 Software Preferences

The SoniClear software preferences must be modified for video recording. This includes enabling video support, specifying how to connect to the video camera, and video options.

The steps for editing the SoniClear preferences are:

1. Select the Edit/Preferences/Recording Options dialog
2. Check the Enable Video option.
3. If you are recording audio from input jack of the camera device, select “One Camera”. Also check the “Include camera audio” option. This is the recommended setting.

If the camera channel audio is being recorded from a second device, select “Two Devices (Video+Audio)”. Then enter the connection information for the device that has the audio encoder (such as a Q7401 encoder).

If you are not using audio from the camera at all, select “One Camera” and leave the “Include camera audio” option unchecked.

4. Configure the address for connecting to the camera:
  - For a standard connection using H.264 or MJPEG, select the H264 or MJPG option and enter the IP address of the camera (or encoder).
  - For manually controlling the connection using MJPEG encoding, select Custom and enter the following URL string:  
**axmphphttp://192.168.0.90/mjpg/1/video.mjpg**
  - For manually controlling the connection using H.264 encoding, select Custom and enter the following URL:  
**axrtsphphttp://192.168.0.90/axis-media/media.amp?videocodec=h264**
  - For connecting to the quad view stream on the Axis F44 camera, select Custom and enter the following custom URL  
**axrtsphphttp://192.168.0.90/axis-media/media.amp?videocodec=h264&camera=quad**

(enter as one line)

Note: H.264 provides higher quality encoding and dramatically smaller file sizes. It also provides support for encoding the audio in AAC format from the camera or encoder. However, H.264 and AAC encoders require licensing for recording and playback. See the section “*Install Axis Video and Audio Software*” above for details.

5. For the User field enter:  
root  
(or other valid user account on the Axis camera).
6. Enter in the Password field:  
Use password assigned to the camera during setup.
7. Set the Adjust Sync field to:  
0 (the number zero)  
Note: this may need to be adjusted based on characteristics of the sound card in this computer.
8. Set the Adjust Export field to:  
0 (the number zero)  
Note: this may need to be adjusted based on characteristics of the camera device to provide accurate audio/video sync when exporting the recording to WVM format.

After setting this information in the preferences, exit and restart the program. The Video Preview window should be displayed on the screen. If not, contact SoniClear Support for assistance.

## **Transcriber Live Configuration**

Transcriber Live supports video monitor and video playback functionality. This feature must be configured in Edit/Preferences/Recording Options by checking the Enable option in the Video section.

To allow playback of camera audio in addition to microphones recorded in the audio channels, select the “Include Camera Audio” option. This will enable the selection of camera audio in the Channel selection control during playback of recordings that have camera audio.



## **SoniClear Player Configuration**

SoniClear Player (in Export CD Image and Manage LAN Archive) supports video monitor and video playback functionality. This feature is enabled by default. To disable video, uncheck the Enable check box in the Video section of the Edit/Preferences/Recording Options dialog.

## **Configure Camera Audio Playback**

When playing back camera audio in Court Recorder 9 or Gov Recorder 9, the sound will be played through the current default Windows audio output device. This can be set in the Windows Sound control panel. The audio device selection can be the same output device that SoniClear uses for playback (headphones or speaker), or a different device.

## Custom Video Configuration

The Axis camera or encoder can be purchased from an Axis dealer or distributor instead of using the SoniClear Video Recording Kit. The following section describes how to set up the recording system using stock Axis components.

### Connecting the Axis Camera

The Axis camera option is connected to the computer using an Ethernet cable. Two options are available for this. A standard Ethernet cable can connect the camera to an Ethernet switch, with the laptop connecting to the switch also. Or the camera can be connected directly to the computer using a Crossover cable (or regular cable with a Crossover Adapter). Some computers will automatically detect the need for a crossover connection and will switch the send and receive lines in the Ethernet chip, in which case a crossover cable or adapter will not be needed.

The camera can be powered using the included power transformer “brick”. It is recommended, however, to power the camera using the included Power Over Ethernet (“POE”). This allows the camera to be placed anywhere in the room without the need for a separate power extension cord for the power transformer. The source of power for POE can either be a POE-enabled Ethernet switch, or a POE “injector” that is placed in-line with the Ethernet cable going to the camera. The POE switch or injector can be placed next to the laptop and powered off the same power strip the computer is plugged into.

### Connecting the Axis Encoder

The Axis encoder option is also connected to the computer using an Ethernet cable, in the same way as described above for the Axis Camera.

The video signal is sent to the encoder using a standard composite video signal with a BNC video connector. An adapter converting from RCA to BNC will be required for use with standard RCA composite video cables. An equivalent part to the one included in the Axis Encoder Kit is:

[www.bhphotovideo.com/c/product/547721-REG/](http://www.bhphotovideo.com/c/product/547721-REG/)

The audio signal from a sound system, Motu 4Pre or 8PreUSB should be connected to the 1/8” input jack on the encoder. For this type of setup be sure to configure the audio input as a line-in device when setting up the encoder (see setup instructions below).

## Configure the Axis Device

The stock settings for Axis devices are not compatible with SoniClear. The settings described below are applicable for the M1054 camera and Q7401 encoder. Each type of device will have various different settings. Contact SoniClear Support for additional instructions for other types of Axis devices.

Configure the Axis M1054 camera or Q7401 encoder using the following steps:

1. Open the Windows Internet Explorer browser (also works with Firefox).
2. Enter the URL address of the camera (the IP address number): 192.168.0.90
3. The first time you access the camera you will be required to enter a password for the “root” account.
4. When the browser finishes connecting to the camera or encoder it will display a “Live View” of the video stream.
5. Switch to the setup view by clicking on “Setup” link in upper right corner of the page.
6. Under the Basic Setup section, you can adjust the following items.
7. Select the “Users” link to enter user access information. The default user, “root”, can be used for accessing the camera. Alternatively, you can create a non-administrator user in this screen to keep the administrative password for the device secure.

8. TCP/IP: The default setting is for a fixed IP address at 192.168.0.90, as follows:

The screenshot displays the web interface for the AXIS Q7401 Video Encoder. The top navigation bar includes the AXIS logo, the device name "AXIS Q7401 Video Encoder", and links for "Live View", "Setup", and "Help". A left-hand sidebar contains a menu with categories: "Basic Setup" (with sub-items: Instructions, 1 Users, 2 TCP/IP, 3 Date & Time, 4 Video Stream, 5 Audio Settings), "Video & Audio", "Live View Config", "PTZ", "Applications", "Events", "Recordings", "System Options", and "About". The main content area is titled "Basic TCP/IP Settings" and includes a help icon. It is organized into several sections: "Network Settings" with a "View" button; "IPv4 Address Configuration" with options to "Enable IPv4" (checked), "Obtain IP address via DHCP", or "Use the following IP address:" (selected). The latter option includes input fields for "IP address" (192.168.0.90), "Subnet mask" (255.255.255.0), and "Default router", along with a "Test" button. "IPv6 Address Configuration" has an unchecked "Enable IPv6" checkbox. The "Services" section includes checked boxes for "Enable ARP/Ping setting of IP Address" and "Enable AVHS", with radio buttons for "One-click enabled" (selected) and "Always". At the bottom, there is a "Settings..." button for "AXIS Internet Dynamic DNS Service" and "Save" and "Reset" buttons. A footer note says "See also the [advanced TCP/IP settings](#)".

9. Date & Time: The camera should be set to sync with the computer:

The screenshot displays the 'Date & Time Settings' page for an AXIS Q7401 Video Encoder. The interface includes a navigation menu on the left with options like 'Basic Setup', 'Video & Audio', and 'Live View Config'. The main content area is titled 'Date & Time Settings' and contains several sections: 'Current Server Time' (Date: 2013-12-18, Time: 15:52:18), 'New Server Time' (Time zone: GMT-08, Automatically adjust for daylight saving time changes: checked), 'Time mode' (Synchronize with computer time: selected, Date: 2013-12-18, Time: 15:53:24), 'Date & Time Format Used in Images' (Specify date format: Predefined YYYY-MM-DD, Specify time format: Predefined 24h, With resolution: 1 second), and 'Save' and 'Reset' buttons.

Alternatively, you could set the time option to sync with an NTP server, if the camera is connected to a network that has an NTP server behind the firewall, or Internet access to a public NTP server.

10. Video Stream: this controls the default settings for streaming video data. Set the image preferences in the Image tab:

The screenshot displays the configuration interface for the AXIS Q7401 Video Encoder. The left sidebar contains a navigation menu with the following items: Basic Setup (Instructions, 1 Users, 2 TCP/IP, 3 Date & Time, 4 Video Stream, 5 Audio Settings), Video & Audio, Live View Config, PTZ, Applications, Events, Recordings, System Options, and About. The main content area is titled "Video Stream Settings" and features four tabs: Image, Audio, H.264, and MJPEG. The "Image" tab is selected, showing the following settings:

- Image Appearance:**
  - Resolution: 4CIF (704 x 480) (with an "Aspect ratio correction" checkbox)
  - Compression: 0 [0..100]
  - Mirror image:
  - Rotate image: 0 degrees
  - Color setting: Color
- Video Stream:**
  - Maximum frame rate: Limited to 30 [1..30] fps per viewer (with "Unlimited" as an alternative option)
- Overlay Settings:**
  - Include overlay image at the coordinates: X 0 [0..] Y 0 [0..] (checkbox unchecked)
  - Include date:  (checkbox checked)
  - Include time:  (checkbox checked)
  - Include text:  (checkbox unchecked)
  - Text color: white (dropdown)
  - Text background color: black (dropdown)
  - Place text/date/time at: top of image (dropdown)

At the bottom of the main content area, there is a "Preview" section with the text "View image stream while configuring." and a "Video format:" dropdown set to "H.264". Below this are "Save" and "Reset" buttons, and an "Open..." button.

For the Axis Encoder, set the Resolution to match with resolution of the external video source, or a smaller resolution for recording (if preferred). For the Axis Camera, set the resolution to the desired resolution for recording.

Set Compression to 0 for maximum clarity. The manufacturer default value of 30 produces less clear recordings that take up less disk space.

Set Video Stream to Limited, with a value of 30.

Set the Overlay Settings fields, "Include date" and "Include time", if you want the image to be timestamped in the video feed.

11. In the Audio tab, select the “Enable audio” option if you want to record audio from the camera or the encoder:



The settings in the H.264 and MJPEG tabs can be left as their default values.

12. Audio Settings: For recording audio from the camera or encoder, set up the audio options:

**AXIS** Q7401 Video Encoder Live View | Setup | Help

**Audio Settings** ?

**Audio Channels**

Audio mode: Simplex - Network Video Encoder microphone only

**Audio Input**

Source: Line

Enable microphone power. If your microphone is dynamic or battery powered, this should be off.

Input gain: 6 dB (0 = medium default level)

Encoding: AAC

Sample rate: 16 kHz

Bit rate: 64 kbits/s

Alarm level: 50 [0..100] %

**Audio Output**

Output gain: 0 dB (0 = medium default level)

**Note:** The Java applet only supports G711 audio. QuickTime supports G711 and AAC.

Save Reset

Select the Simplex microphone option (you do not want audio from the computer to be sent to the speaker in the camera, for example).

For the Axis Encoder, set the input source to the correct type of audio input (microphone or line).

Set the input gain to provide the desired signal level in the recording. This will require experimentation to determine the optimum value.

Set the Encoding option to AAC, 64 kbits/s.



## Hardware Warranty and Repair

Any hardware included in a SoniClear video recording kit is covered by the Limited Warranty provided by the manufacturer. SoniClear does not provide hardware repair services. SoniClear will coordinate repair services and ensure proper installation of the SoniClear software installed on the computer, on customer request.

## Hardware Information:

Hardware Model: \_\_\_\_\_

Hardware Serial Number: \_\_\_\_\_

SoniClear Order Number: \_\_\_\_\_

SoniClear Purchase Date: \_\_\_\_\_

Axis Camera Login User: \_\_\_\_\_

Password: \_\_\_\_\_

Axis Camera Power Frequency: 60Hz

Notes: :

1. For security reasons, the default password supplied with the system should be changed before deploying the video recording system. The corresponding password will need to be changed in the SoniClear Tablet Recorder, if you purchased a complete system.
2. The video hardware has been initialized for using with power systems using 60Hz AC. For power systems using 50Hz AC the camera will need to be reset. Follow the hardware instructions for resetting and then following the instructions in this manual for device setup.