


# DOT

点  
ポ  
リ  
リ  
ズ  
ム

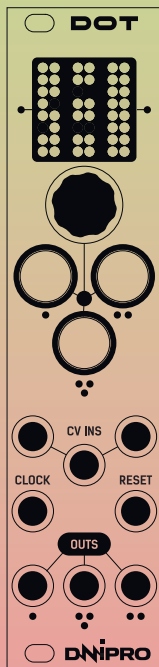

シ  
ー  
ケ  
ン  
サ  
ー

USER GUIDE 1.0

Dot is a 3 channel trigger sequencer with polymetric capabilities.



Each of three paired columns of leds represents a trigger track, which can be a 16 step max.

Each track has a dedicated button, trigger out and cv input. Clock and reset inputs are common for all tracks.

**>>>GO!**

Patch the clock input with pulse to start sequencer running.

Patch any trigger output to a module that accept triggers.

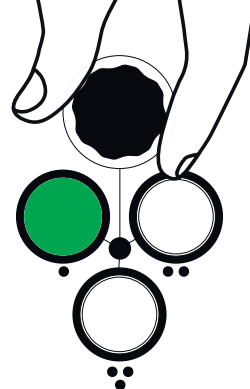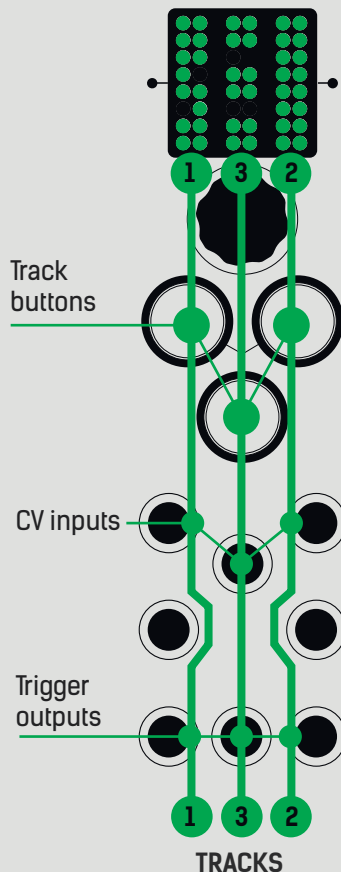

Select active track by pressing a corresponding button, rotate encoder to edit the track.

Each track consists of two layered patterns: Euclid and XOX, so there are two modes to record and modify track data:

**Euclidean mode and XOX mode.** Euclid pattern is shown by green dots on display, while XOX pattern is red.

## EUCLID MODE

In euclidean mode you can generate an Euclid pattern which is based on euclidean algorithm. There are 3 parameters that can be edited with encoder: Fill, Length and Offset. Press track button several times to switch parameters, indicated by a button light color. Green is for FILL, Red is for LENGTH, Yellow is for OFFSET. Rotate encoder to edit them. Note, LENGTH and OFFSET parameters both referred to XOX and Euclid patterns.



## XOX MODE

In XOX mode you can populate triggers in classic step sequencing way and build XOX pattern like on TR808. To enter xox mode click encoder while in euclidean mode. Use encoder to select step and press to set trigger. Press red button to return to euclidean mode or select other tracks to edit.

It is possible to convert euclidean patterns to XOX for manual editing, see optional menu page.



## MENUES

Of course there are additional tools and settings you can find in two menus: **Global menu** and **Optional menu**.

Press and hold encoder for a second to enter **Global menu** and navigate through 4 menu pages. To exit Global menu, simply press encoder again.

Press and hold track button to call for **Optional menu**. Rotate encoder to navigate through pages. Push encoder to apply selected function to an active track or press any button to exit

## GLOBAL MENU



### CV IN SETTINGS PAGE

Each track has a dedicated CV input. The destination of each CV input is represented by 3 color bricks on the bottom of screen, referred to a specific track parameter: Green is for **FILL**, Red is for **LENGTH**, Yellow is for **OFFSET**.

CV inputs accepts bi-polar signals from -5 to +5 v, or usual 0 to +5v.



### RECORD

Record User pattern by tapping track buttons. Hold track button to clear.



### INITIALIZE TRACK

Push referred button to init pattern data of a referred track. You must confirm erasing with second press.



### LOAD/SAVE

Press green button to load or red to save pattern. Rotate encoder and select 1 of 16 available slots on next page. Hit lighted button again to load/save all 3 tracks to/from selected slot. Press encoder to exit.



### MUTE

Use buttons to mute tracks.

## OPTIONAL MENU



### RATCHET

Push to enter ratchet page and set ratchets for desired steps.



### ERASE

Push to erase specific pattern data. Instead of Track Init this function erase data in dependence of a current mode, f.e. XOX pattern will be erased when DOT is in XOX mode or Euclid pattern when it is euclidean mode now.



### EUCLID TO XOX CONVERT

Converts Euclid pattern to XOX pattern on the active track for further editing.

## SWING

Press top two track buttons simultaneously to enter swing parameter page. Rotate encoder and add groove to your patterns.



## AND MORE...

It is possible to flip DOTs interface upside down. To do this, press and hold encoder on startup. Release when tracks are loaded.

You can link several dots by using a dedicated link cable. Linked slave module will use clock and reset from a master, until slaves clock and reset inputs are unpatched. Patch that inputs to make slave module run independently.

## META MODE

Pres all 3 buttons simultaneously to activate META mode (all buttons will start flashing rapidly).

In this mode you can quickly switch saved patterns just with an encoder turn, or by applying CV to CV IN 1, while CV IN 2 and CV IN 3 will be referred to ratchet function.

Note, when entering this mode, your current pattern will be saved to the native slot, so you can use this as a hot key for quick saving.