

User Guide

OontZ

Angle 3 PRO *2nd Gen*

The Waterproof Bluetooth Speaker

Incredible Sound, Powerful Volume, 100 Foot Wireless Bluetooth Range

OontZ App for the OontZ Angle 3 Pro

 
Control the OontZ Angle 3 Pro Advanced Features
from your iPhone or Smartphone

Designed and Engineered By

CAMBRIDGE SOUNDWORKS.

TheOontZ.com

In the Package

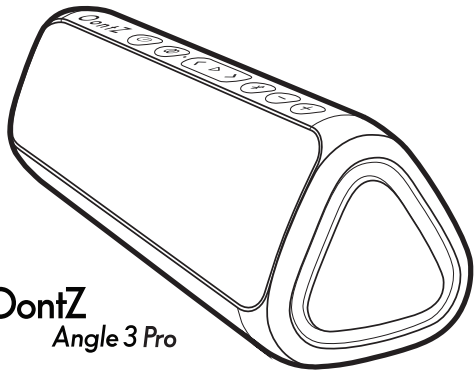

OontZ
Angle 3 Pro



User Guide



USB Type C Charging Cable




3.5mm Stereo Audio Cable

Table of Contents

	Pages
Buttons, Built-in Mic, Lights, and Connectors.....	1 - 3
Battery Features and Charging the Battery	4 - 5
Turning On and Off	6
Pair & Connect with Your Device	7 - 10
IPX7 Water Resistance.....	11
Talk to Siri.....	12
To Play with Non-Bluetooth Devices Use a 3.5mm Stereo Audio Cable.....	13
Dual Mode - Connect Two OontZ Angle 3 Pro Speakers Together.....	14 - 18
Surround Mode - Connect 2, 3, or 4 OontZ Angle 3 Pro Speakers Together.....	19 - 22
The OontZ App.....	23 - 34
Reset Function and Wireless Hands Free Speakerphone.....	35
Contacting Customer Support	36
Safety and Precautions	37 - 38

 Buttons & Built-in Mic

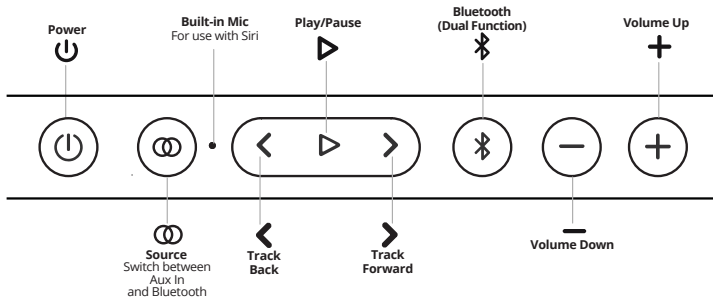

Important - The volume control on your device and the speaker work independently of each other.

To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

Important - Some apps may not support track back, track forward, or play/pause

Lights

Power Button Light

Lit Red when charging

- **Slowly flashing** - battery is charging
- **Solid** - battery is fully charged
- **Rapidly flashing** indicates battery charge is low

 
Source Button Light

Lit Green when Aux In is the selected the audio source

Bluetooth Button Light

Lit Blue when speaker is on:

- **Flashing** in Bluetooth pairing mode
- **Solid** connected to Bluetooth Device



Play/Pause Button Light - Single Speaker

- **Lit Green** when connected to OontZ app on iPhone or Smartphone
- **Flashes Green** every 5 seconds on Host speaker when connected to the OontZ app on iPhone or Smartphone and in Dual Mode or Surround Mode

Play/Pause Button Light - Two, Three or Four Speakers

 
Lit White when speakers are in Dual Mode

- With a second OontZ Angle 3 Pro speaker (**sold separately**) you can wirelessly connect both speakers together to play in Dual Mode .
- For Dual Mode instructions please see page 14.

Lit Orange when speakers are in Surround Mode


- With 2, 3 or 4 OontZ Angle 3 Pro speakers (**sold separately**) you can wirelessly connect the speakers together to play with Surround Mode.
- For Surround Mode instructions please see page 19.

Connectors

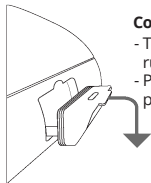

Connectors under the Rubber Flap

 - To access the connectors open the rubber flap
- Pull the tab from the top, it is a snug fit as part of the waterproofing




Closing Rubber Flap

- Align the Rubber Flap directly over the connector bay. Push the Rubber Flap straight in until the edges are even with the edges of the connector bay.

IMPORTANT:

 - The rubber flap needs to be closed before the speaker is exposed to water.
- The speaker is not water-resistant or waterproof when the rubber flap is open.

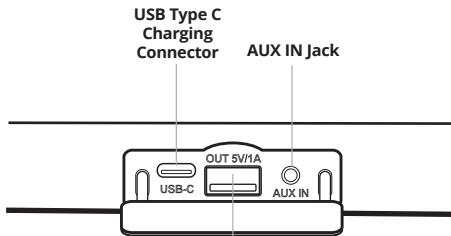

USB Power Bank

- Use for keeping your iPhone or Smartphone charged while playing.
- Use to power your Echo Input.
- Output 5V - 1A

Battery Features

- The rechargeable battery comes with a partial charge and the speaker is ready to play.
- For maximum playtime, fully charge the battery.
- You can play while charging.

Low Charge Remaining

- When the battery charge has less than 20% remaining the Power Button Light will begin flashing Red rapidly, the USB Power Bank will turn off and the volume will decrease to preserve the remaining battery.
- To return to full volume follow the steps to charge the battery on Page 5.

Music Play Time

- Up to 15 hours on a full charge, at 2/3 volume.
- Louder volumes will reduce the battery play time.
- When using the USB Power Bank the play time will be reduced.

Power Saving Feature

- When playing from battery power the OontZ Angle 3 Pro will turn off after 30 minutes of not playing audio to conserve the battery charge. *
- When plugged into a charging source the OontZ Angle 3 Pro will remain on until you turn the power off.
- You can continue to keep the speaker plugged into a charging source even when it is fully charged, keeping the speaker turned on and available.

* Exception: certain devices, including the Amazon Echo Input, Amazon Echo Dot and Amazon Echo, disable the Power Saving Feature and the speaker will remain on until you turn the power off.

Charging the Battery

Lit Red when charging:


- **Slowly flashing** battery is charging

 
- **Solid** battery is fully charged



Insert the small end of the USB Type C Charging Cable into the Charging Connector as shown.

Insert the larger end of the USB Type C Charging Cable into a USB wall charger for a Smartphone or iPhone (USB wall charger* that is 5V $\overline{\text{---}}$ 3A maximum) to charge the OontZ Angle 3 Pro battery.

* Only use a USB wall charger that is UL listed. A UL listed USB wall charger will have the logo  printed on it.

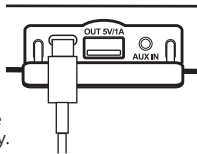




Charging Time - Up to 3 hours to fully charge a low battery.

Important: When the OontZ Angle 3 Pro is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.

Turning On and Off

Turn ON



- Press and Release the Power Button 
- Power Button Light  will turn **Red** for 3 seconds then turn off
- Bluetooth Button Light  will turn **Blue**

Bluetooth Button Light

- **Flashing Blue** in pairing mode
- **Solid Blue** your device has connected with the OontZ Angle 3 Pro and is ready to play



Turn OFF

- Press and Hold Down the Power Button for 2 Seconds 
- Bluetooth Button Light  will turn off

Pair & Connect with Your Device -- Step 1

Turn ON your OontZ Angle 3 Pro 


Flashing Blue Light

- The OontZ Angle 3 Pro is ready to pair and connect.

Solid Blue Light

- Your device has connected to the OontZ Angle 3 Pro and is ready to play.
- The OontZ Angle 3 Pro allows the last device it was connected with to automatically reconnect with the speaker each time the speaker is turned on and that device is within range.*

The OontZ Angle 3 Pro can be connected to one device at a time.

- To pair and connect to a different device, you need to first disconnect the currently paired device.
- To disconnect the current device, press and hold down the **Bluetooth button**  for 3 seconds.
- The **Blue Light** will begin **flashing** and the OontZ Angle 3 Pro is ready for the next device to pair and connect.


*Exception: certain devices may not automatically reconnect. When connected to an Amazon Echo device it will not automatically reconnect. You will need to say to your Amazon Echo device, "Alexa, connect my speaker".

- Your device needs to be within 100 unobstructed feet of the OontZ Angle 3 Pro to pair and connect. If there is an issue when connecting please move your device closer to the speaker, then pair and connect.
- When the charge is too low indicated by a flashing red light on the speaker, your device will not be able to connect with the speaker.



Pair & Connect with Your Device -- Step 2 --

-- With Your iPhone, iPad, iPod, Smartphone, Tablet & Mobile Devices

- Go to Settings > Bluetooth, check Bluetooth is on
- Select 'OontZ Angle 3 Pro SS xxx' when it appears under DEVICES (xxx: 3 characters which are unique to your speaker)
- Your device will connect in a few seconds
- The **Bluetooth Button Light**  will turn solid blue and there will be a quiet chime
- You can now play your audio wirelessly to your OontZ Angle 3 Pro

Note: Your Smartphone or Tablet instructions may vary

Important - The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

-- With Your Apple Mac or Windows Laptop/Computer

For the pairing and connecting guide for your Apple Mac or Windows laptop/computer, please visit: TheOontZ.com/pairing.

Pair & Connect with Your Device -- Step 2 --

-- With Your Amazon Echo, Amazon Echo Dot or Amazon Echo Input

To pair and connect with the Amazon Echo, Amazon Echo Dot or Amazon Echo Input for the first time use the Alexa app. For other Amazon Alexa devices please refer to their pairing and connecting instructions.

- Open the Alexa app
- Select 'Devices' in the lower right corner of the screen.
- Press 'Echo & Alexa'
- Select your Amazon Echo device by pressing it
- Press 'Bluetooth Devices'
- Press 'Pair a New Device'
- Select the 'OontZ Angle 3 Pro SS xxx' (xxx: 3 characters unique to your speaker) when it appears in the list of 'Available Speakers'
- Alexa will announce: "Connected to OontZ Angle 3 Pro SS xxx"

To connect the next time, turn on the OontZ Angle 3 Pro and say "Alexa, connect my speaker" or "Alexa, pair"

Pair & Connect with Your Device -- Step 2 --


-- With Your Amazon Echo or Amazon Echo Dot (continued)

Important Note: When the OontZ Angle 3 Pro is playing from battery power and connected to the Amazon Echo device, the speaker will remain on and it will not automatically turn off after 30 minutes of not playing audio. This will use up the battery charge.

We recommend to:

- 1) Keep the OontZ Angle 3 Pro plugged into a USB wall charger.
It can remain on and available to play from the Amazon Echo device.

- Or -

- 2) Turn off the OontZ Angle 3 Pro when you are done listening.
 - Either turn off the speaker by pressing and holding down the power button  for 2 seconds,
 - or say "Alexa, disconnect my speaker" and the OontZ Angle 3 Pro will automatically turn off after 30 minutes.
 - When you want to connect and play to the speaker again turn on the OontZ Angle 3 Pro and say "Alexa, connect my speaker" or "Alexa, pair".

For assistance with the Alexa app, contact Amazon's Customer Service.
Open the Alexa app and select Help & Feedback > Email Customer Service

IPX7 Waterproof

The OontZ Angle 3 Pro is Waterproof and it is IPX7 certified

The perfect speaker for listening to your favorite music in any environment

Perfect for taking to the lake, the beach, listening by the pool, listening in the shower

IPX7 means the OontZ Angle 3 Pro is Waterproof and can handle water spray or being splashed and can handle being partially or fully submerged in water up to a maximum of 3 feet deep, for up to a maximum of 30 minutes


The rubber flap needs to be closed for the speaker to be waterproof and dustproof.

Important Safety Precaution: When the OontZ Angle 3 Pro speaker is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.

Talk to Siri on your iPhone or iPad through the OontZ Angle 3 Pro

This feature works when connected to an iPhone or an iPad over Bluetooth.

To talk to Siri through the OontZ Angle 3 Pro


- Press and Release the Power Button  on the OontZ Angle 3 Pro
- The Source Button Light will turn Green and Flash 3 times.
- Wait for about two seconds until you hear a "chime"
- After the "chime" talk to Siri through the mic on the OontZ Angle 3 Pro
- The response from Siri will then play through the OontZ Angle 3 Pro, and may display information on your iPhone or iPad

Your iPhone or iPad needs to be on the latest version of iOS


Wireless Hands Free Speakerphone

The Wireless Hands Free Speakerphone feature works over Bluetooth with iPhones and Smartphones only; this feature is not supported when connected to other types of devices.

To answer an incoming Call / To End a Call

- Press and Release the Bluetooth Button 

To reject incoming Call

 
- Press and Release the Bluetooth Button  for 3 seconds.

- Please keep the speaker close in front of you so you may be heard clearly by the listener.
- You can use your iPhone or Smartphone to switch between using the Hands Free Speakerphone and your phone.

To Play with Non-Bluetooth Devices Use the 3.5mm Stereo Audio Cable

Turn ON your OontZ Angle 3 Pro 

- Plug one end of the included 3.5mm Stereo Audio Cable into the **AUX IN** jack on the speaker.
- Press the Source Button and the Source Button light will turn solid Green.
- Plug the other end of that 3.5mm Stereo Audio Cable into the headphone jack on your device.
- Make sure both ends of the cable are fully inserted
- You are now ready to play.

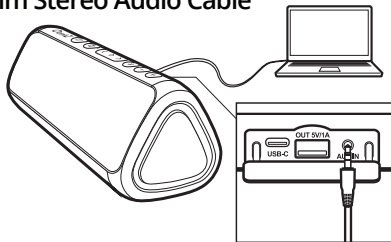


Important: The Bluetooth on the OontZ Angle 3 Pro is disabled when the Source Button is pressed. To switch back to Bluetooth press the Source Button and the OontZ Angle 3 Pro allows the last device it was connected to automatically reconnect with the speaker and that device is within range.

Important Notes:

- Note: The rubber flap needs to be closed before the speaker is exposed to water. The speaker is not water-resistant or waterproof when the flap is open.
- The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

 Dual Mode - Connect two OontZ Angle 3 Pro speakers together Play your music wirelessly through both speakers up to 100 feet apart*



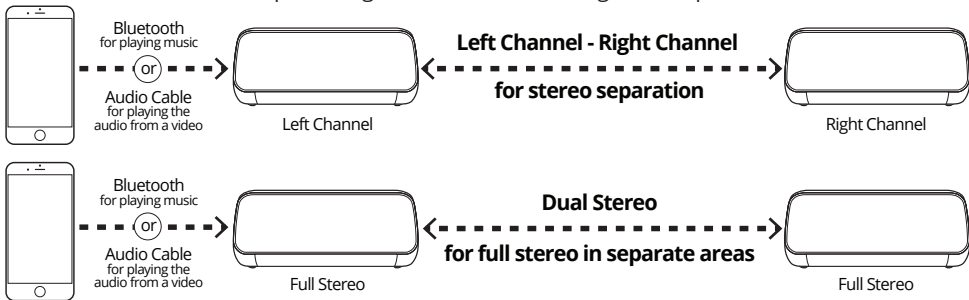


Note: The OontZ Angle 3 Pro 2nd Generation is **NOT** compatible with the previous generations of OontZ Angle 3 Pro speakers.



*Placing the speakers on the ground or having walls or obstructions between the speakers will significantly reduce the distance apart the two speakers can play together

Connecting two OontZ Angle 3 Pro speakers together for Left Channel - Right Channel

You can also use the OontZ app to connect two OontZ Angle 3 Pro speakers together - See page 26 for instructions on using the OontZ app

- Turn on both OontZ Angle 3 Pro speakers. 
- Pair and Connect one of the speakers with your device. When connected the Bluetooth Button  light will be lit Solid Blue. This speaker will serve as the **Host Speaker**.
- The second speaker must not be connected to any device, its Bluetooth Button  light needs to be flashing. If the second speaker has a solid Blue Light it is connected to a device and you need to disconnect it by pressing and holding down the **Bluetooth Button**  for 3 seconds until the Bluetooth Button  light begins flashing.
- On the **Host Speaker** (speaker with solid Blue Light) press and hold down the **Play/Pause button**  for 3 seconds until the **Play/Pause Button** is flashing with a White Light and the speaker says "Dual Pairing".
- After a few seconds both speakers **Play/Pause Button**  will be lit with a solid White light. The **Play Control Speaker** will say "Left Channel" and the second speaker will say "Right Channel". The speakers will be connected together for Left Channel - Right Channel and you are ready to play.

Two OontZ Angle 3 Pro Speakers connected for Left Channel - Right Channel



- Use the buttons on the **Host Speaker** for volume, play/pause, track back, track forward, answer and end phone calls. These controls are disabled on the second speaker when paired together.
- Use the **Host Speaker** for connecting to different audio devices via Bluetooth or AUX IN. The Bluetooth and AUX IN are disabled on the second speaker when paired together.
- Speakerphone call audio will only play through the **Host Speaker**.

Changing to Dual Stereo from Left Channel - Right Channel

Use Dual Stereo when placing the two speakers in different areas, and both speakers will play in full stereo.

- To set both speakers for Dual Stereo they must first be connected together for Left Channel - Right Channel (see page 15).
- With the speakers connected together for **Left Channel - Right Channel**, you can change the speakers to **Dual Stereo**.
- To change to Dual Stereo, press and hold down the **Track Forward button** > on the **Host Speaker** for 3 seconds until both speakers say "Dual Stereo". You are ready to play.

Changing back to Left Channel - Right Channel from Dual Stereo

- To change back to Left Channel - Right Channel, press and hold down the **Track Forward button** > on the **Host Speaker** for 3 seconds. The **Host Speaker** will say "Left Channel" and the second speaker will say "Right Channel". You are ready to play.

OontZ Wireless Dual Stereo - Important Notes

Turning the speakers off

- Turning the **Host Speaker** off will turn both speakers off.
- Turning the second speaker off first will only turn that speaker off and the **Host Speaker** will play as a single speaker.

Turning the speakers back on

- Turn both speakers on and they will automatically try to connect to each other again.
- Turn one of the speakers on and a device can connect with it, and play as a single speaker.

Disconnecting the two speakers from each other

 
- Both speakers need to be turned on.
- On the **Host Speaker** press and hold down the **Play/Pause button**  for 3 seconds. The White Lights will turn off and the speakers will be disconnected from each other.

Playing the audio from a video in Dual Mode

- To play the audio from a video or TV in Dual Mode you will need to connect the **Host Speaker** to your device or TV using a the 3.5mm Stereo Audio Cable, allowing the audio and video to play in sync with each other. If the **Host Speaker** is connected over Bluetooth to your device or TV there will be a delay in the audio playback from a video.
- You can also use the OontZ Bluetooth Adapter 2nd Gen (Sold separately on www.theoontz.com) with it's low latency technology which removes or eliminates the delay in the audio playback from the video and allows the audio to play in sync with the video when playing to two OontZ Angle 3 Pro 2nd Gen speakers.

Surround Mode - Connect 2, 3 or 4 OontZ Angle 3 Pro speakers together Play your music wirelessly through speakers up to 100 feet apart *


Note: The OontZ Angle 3 Pro 2nd Generation is **NOT** compatible with the previous generations of OontZ Angle 3 Pro speakers.

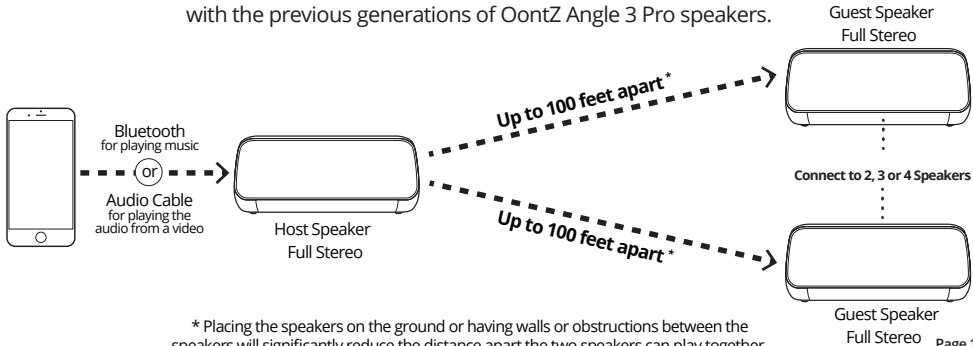



* Placing the speakers on the ground or having walls or obstructions between the speakers will significantly reduce the distance apart the two speakers can play together.

Connecting 2, 3 or 4 OontZ Angle 3 Pro speakers together

You can also use the OontZ app to connect the OontZ Angle 3 Pro speakers together - See page 30 for instructions on using the OontZ app

- Turn on one of OontZ Angle 3 Pro speakers. 
- Connect the speaker to your device or connect a 3.5mm audio cable to the Aux In of the speaker. When connected the Bluetooth Light will be lit Solid Blue or the Source Light will be lit Solid Green if using Aux In. This speaker will serve as the **Host Speaker**.
- Turn on the other OontZ Angle 3 Pro speakers. These speakers will be the **Guest Speakers**
- The **Guest Speakers** must not be connected to any device, their Bluetooth Light  must be flashing. If a speaker has a solid Blue Light it is connected to a device and you need to disconnect it by pressing and holding down the **Bluetooth Button**  for 3 seconds until the Bluetooth Light  begins flashing.
- On the **Host Speaker** press and release the **Bluetooth Button** . The Play/Pause Button Light will turn solid Orange and the speaker will say "Surround Mode Transmit".
- On the **Guest Speakers** with a flashing Blue Light, press and release the **Bluetooth Button** . The Play/Pause Button Light will flash Orange and the speaker will say "Surround Mode Receive".
- After a few seconds each speaker will connect with the **Host Speaker** and will have the Play/Pause Button Light lit with a solid Orange light.

  OontZ Angle 3 Pro Speakers connected in Surround Mode

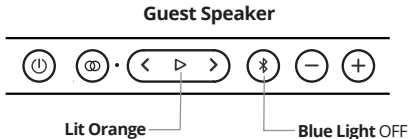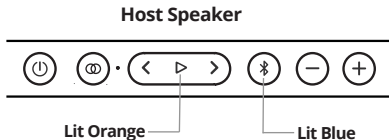

- Use the buttons on the **Host Speaker** for volume, play/pause, track back, track forward, answer and end phone calls. These controls are disabled on the other speakers when connected together.
- Use the **Host Speaker** for connecting to different audio devices via Bluetooth or AUX IN. The Bluetooth and AUX IN are disabled on the other speakers when connected together.
- Speakerphone call audio will only play through the **Host Speaker**.

Surround Mode - Important Notes

Turning the speakers off


- Turning the **Host Speaker** off will turn off all the speakers.
- Turning a Guest Speaker off first will only turn that speaker off and the other Guest Speakers will continue to play. The **Host Speaker** will play as a single speaker if no other Guest Speakers are connected.

Turning the speakers back on

- Turn all the speakers on and repeat the pairing process - See page 20 for instructions.
- Turn one speaker on and the speaker can be paired and connected with another device. The speaker will play as a single speaker.

Disconnecting the speakers from each other

- To disconnect a single Guest Speaker, press and release the **Bluetooth Button**  on the speaker. All other Guest Speakers will stay connected to the Host Speaker.
- To disconnect all the speakers, turn off the Host Speaker or press and release the **Bluetooth Button**  on the Host Speaker. The speakers will all be disconnected from the Host Speaker.
- If the Guest Speaker(s) are not turned off and are disconnected by pressing and releasing the **Bluetooth Button**  on the Host Speaker. The speakers will automatically reconnect when the Host Speaker when **Bluetooth Button**  on the Host Speaker is pressed and released again. If a Guest Speaker is turned off the **Bluetooth Button**  on the speaker will need to be pressed and released to enter Surround Mode.

Note: To pair a Guest Speaker with a flashing Orange Light with another device, press and release the **Bluetooth Button** . The Bluetooth Light will begin flashing Blue and the OontZ Angle 3 Pro is ready to pair and connect with the device.

The OontZ app

Control the advanced features of your OontZ Angle 3 Pro from your iPhone or Smartphone running the Android operation system.

EQ - Adjust the Treble and Bass levels

Volume Control - With a single OontZ Angle 3 Pro speaker remotely control the volume. With two OontZ Angle 3 Pro speakers in Dual Mode sync the volume to control both speakers together or independently control the volume on each OontZ Angle 3 Pro speaker

Dual Mode - Connect, Disconnect and change between Left Channel - Right Channel and Dual Stereo when using two OontZ Angle 3 Pro (2nd Gen) Speakers.

Audio Source - Change the audio source between Bluetooth and Aux In

 
Surround Mode - Connect, Disconnect and manage 2, 3 or 4 OontZ Angle 3 Pro (2nd Gen) Speakers.

Support - View the latest online manual and get OontZ speaker updates

Speakers - Select to allow the OontZ app to control other connected OontZ speakers

Download the OontZ app from the [Apple App Store®](#) or [Google Play™ Store](#).

- 1) Open the Apple App Store® or Google Play™ Store on your iPhone or Smartphone running the Android operating system.
- 2) Search for the "Oontz" app and install.
- 3) After the app has been installed the Oontz app will appear on your iPhone or smartphone.

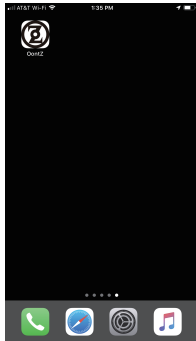

The OontZ app

To enable the OontZ app with your OontZ Angle 3 Pro

- Turn on your OontZ Angle 3 Pro speaker
- Launch the OontZ app and the Home screen will appear
- Select the Menu ≡ in the upper left hand corner of the OontZ app and the Menu screen will appear
- Select 'Speakers' from the Menu and the Speaker screen will appear

OontZ Angle 3 Pro icon is Grey

 
- Press the Grey speaker icon on the app to enable the OontZ app with the OontZ Angle 3 Pro
- The OontZ app will be enabled with your OontZ Angle 3 Pro in a few seconds
- The Grey speaker icon will turn Blue and the **Play/Pause Button Light** ▶ on the OontZ Angle 3 Pro will turn solid Green
- The OontZ app is enabled and ready to use.

If the OontZ Angle 3 Pro icon is Blue and **Play/Pause Button Light** ▶ on the OontZ Angle 3 Pro is solid Green

- The OontZ app is already enabled and ready to use.



Home screen

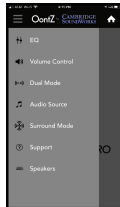

Menu screen



Speaker screen

 
Using the OontZ app for EQ and Volume Control

Select the Menu ☰ in the upper left hand corner of the app


- Select 'EQ' from the menu to access the speaker Equalizer screen

- Select 'Volume Control' from the menu to access the Volume Control screen

EQ
screen




Volume
Control
screen
for One
Speaker

 


When using only one OontZ Angle 3 Pro speaker, the volume control functions the same for 'Sync Volume' or 'Independent Volume'.

 Volume
Control
screen
for Two
Speakers



 Press 'Sync Volume' to control together the volume of two OontZ Angle 3 Pro speakers when connected in OontZ Wireless Dual Stereo.



Press 'Independent Volume' to separately control the volume of two OontZ Angle 3 Pro speakers when connected in OontZ Wireless Dual Stereo.


The Left slider adjusts the Bass and the Right slider adjusts the Treble. Press 'Default EQ' to set the EQ to the default setting.

Works when connected to one or two speakers and the OontZ app will adjust both speakers to the same EQ with two speakers connected in OontZ Wireless Dual Stereo.

Using the OontZ app for Dual Mode

 
Connect two OontZ Angle 3 Pro speakers together - Play your music wirelessly through both speakers up to 100 feet apart.

Refer to Page 14 for more information about Dual Mode

- Turn on **one** of the OontZ Angle 3 Pro speakers.
- Pair and Connect the speaker with your device. When connected the **Bluetooth Button Light**  will be lit solid Blue. This speaker will serve as the **Host Speaker**.
- Enable the OontZ app with the OontZ Angle 3 Pro speaker. When the OontZ app is enabled the **Play/Pause Button Light** on the OontZ Angle 3 Pro will be lit solid Green.
- Turn on the **second** OontZ Angle 3 Pro speaker.
- The second speaker must not be connected to any device, its Bluetooth Button light needs to be flashing. If the second speaker has a solid Blue **Bluetooth Button Light**  it is connected to a device and you need to disconnect it by pressing and holding down the **Bluetooth Button**  for 3 seconds until the **Bluetooth Button Light**  begins flashing.
- Refer to the next page for connecting the two OontZ Angle 3 Pro speakers together with the OontZ app.

Using the OontZ app for Dual Mode


Select the Menu ☰ in the upper left hand corner of the app and select 'Dual Mode' from the menu.



Press 'Connect' to connect two OontZ Angle 3 Pro speakers in Dual Mode.



 After a few seconds the second speaker **Play/Pause Button Light** will be lit solid White. The Host Speaker will say "Left Channel" and the second speaker will say "Right Channel". The speakers are connected together for Left Channel - Right Channel and you are ready to play.



Disconnecting and Reconnecting the OontZ Angle 3 Pro speakers.

- Press 'Disconnect' to disconnect the two OontZ Angle 3 Pro connected speakers.
- The Play/Pause Button White Light on the second speaker will turn off and the speakers will be disconnected from each other.
- To reconnect press 'Connect' with both OontZ Angle 3 Pro speakers turn on.

Playing the audio from a video in Dual Mode

 
- To play the audio from a video or TV in Dual Mode you will need to connect the Host Speaker to your device or TV using a the 3.5mm Stereo Audio Cable, allowing the audio and video to play in sync with each other. If the Host Speaker is connected over Bluetooth to your device or TV there will be a delay in the audio playback from a video.

Using the OontZ app for Dual Mode



Use Dual Mode when placing the two speakers in different areas, and both speakers will play in full stereo.

- With the speakers connected together for **Left Channel - Right Channel**, you can change the speakers to **Dual Stereo**.
- To change to Dual Stereo, press 'Dual Stereo'.
- Both speakers will say "Dual Stereo" and you are ready to play.

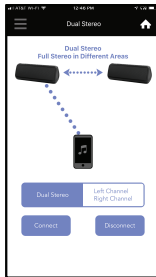


Use Left Channel - Right Channel for incredible left and right stereo separation.


- With the speakers connected together for **Dual Stereo**, you can change the speakers to **Left Channel - Right Channel**.
- To change to Left Channel - Right Channel, press 'Left Channel Right Channel'.
- The Host Speaker will say "Left Channel" and the second speaker will say "Right Channel" and you are ready to play.


Using the OontZ app for Audio Source selection

 Select the Menu ☰ in the upper left hand corner of the app and select 'Audio Source' from the menu.

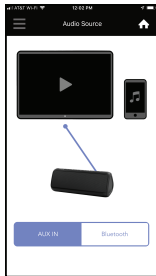



 Press "Aux In" to change the audio source for the OontZ Angle 3 Pro to play from the device connected to the OontZ Angle 3 Pro Aux In Jack.

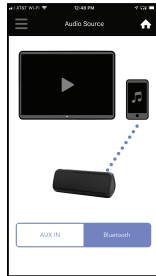The Source Button Light  on the OontZ Angle 3 Pro will be lit solid Green.




Press "Bluetooth" to change the audio source for the OontZ Angle 3 Pro to Bluetooth. The last device connected to the OontZ Angle 3 Pro will automatically reconnect if that device is turned on and within range.

The Bluetooth Button Light  on the OontZ Angle 3 Pro will flash Blue until reconnected to your device. After connected the Bluetooth Button Light  will be lit solid Blue.

Using the OontZ app for Surround Mode

Connecting 2, 3 or 4 OontZ Angle 3 Pro speakers together

 
- Turn on **one** of OontZ Angle 3 Pro speakers. 
- Connect the speaker to your device or connect a 3.5mm audio cable to the Aux In of the speaker. When connected the Bluetooth Button Light will be lit Solid Blue or the Source Button will be lit Solid Green if using Aux In. This speaker will serve as the **Host Speaker**.
- Turn on the **other** OontZ Angle 3 Pro speakers. These speakers will be the **Guest Speakers**
- The Guest speakers must not be connected to any device, their Bluetooth Light  must be flashing Blue. If a speaker has a solid Blue Light it is connected to a device and you need to disconnect it by pressing and holding down the Bluetooth Button  for 3 seconds until the Bluetooth Light  begins flashing Blue.

Select the Menu  in the upper left hand corner of the app and select 'Surround Mode' from the menu.



The 'Host Speaker' menu will be displayed and the speaker connected to your iPhone or Smartphone will be displayed.

The first time entering Surround Mode the speaker connected with your device will automatically be selected and the box will turn from Grey to Blue.



The Play/Pause Button Light on the Host Speaker will turn solid Orange and the speaker will announce "Surround Mode Transmit". This speaker will serve as the Host Speaker.

If the Host Speaker has exited Surround Mode. Surround Mode can be enabled again by selecting the Grey box of the Host Speaker. The box will turn from Grey to Blue.

Using the OontZ app for Surround Mode

 
Selecting the Guest Speaker(s)



Press the 'Guest Speaker' Button.

The other OontZ Angle 3 Pro speakers that are turned on and within range will be displayed.


Select the Grey boxes in the list of displayed speakers that you want to connect with the Host Speaker in Surround Mode.



The selected speaker boxes will turn from Grey to Blue.

The Play/Pause Button Light on the selected speakers will flash Orange.

 After a few seconds each speaker will connect with the Host Speaker. The Play/Pause Button Light on each speaker will be lit a solid Orange and the speaker will announce "Surround Mode Receive".



Using the OontZ app for Surround Mode

Disconnecting and reconnecting the OontZ Angle 3 Pro speakers in Surround Mode



 
To disconnect a Guest speaker in Surround Mode, press the 'Guest Speaker' Button.

Select a desired speaker from the list of displayed speakers.

Confirm you want the speaker to exit Surround Mode.

The box will turn from Blue to Grey, the speaker will disconnect from the Host Speaker and the speaker will exit Surround Mode.

If the Host Speaker is still in Surround Mode, to reconnect a Guest Speaker just select the Grey box. The Grey box will turn Blue. The speaker will enter Surround Mode and connect with the Host Speaker.



To disconnect all speakers in Surround Mode, press the 'Host Speaker' Button.

Select the Blue box displayed for the Host Speaker.

Confirm you want to the Host Speaker to exit Surround Mode.

The box will turn from Blue to Grey, all speakers will disconnect from the Host Speaker and the Host Speaker will exit Surround Mode.

Guest Speaker(s) have not been turned off after being disconnected and are in Surround Mode, the speakers will automatically reconnect when the Host Speaker is enabled for Surround Mode.

Guest Speaker(s) have been turned off and back on. The speakers will need to be reconnected. To reconnect using the OontZ app refer to the instructions on Page 30 and 31 or to reconnect with the Bluetooth button on the speakers refer to instructions on Page 20.



Using the OontZ app for Speaker selection

The OontZ app allows you to control different supported OontZ speakers.

The OontZ app currently supports the following OontZ speaker models:

 
- OontZ Angle 3 Pro (1st and 2nd Gen)
- OontZ Angle 3 ULTRA (4th Gen)
- OontZ Angle 3 Pro Soundbar
- OontZ Bluetooth Adapter (2nd Gen)
- OontZ Angle 3 Shower with Alexa (OontZ app support only for Alexa function)

For the latest list of supported OontZ speakers please visit
TheOontZ.com/OontZapp

To utilize the OontZ app with a different supported OontZ speaker.

- Select the Menu ☰ in the upper left hand corner of the OontZ app and select 'Speakers' from the menu
- Select the desired speaker from the available list of OontZ speakers
 - Speaker icon is Blue - the OontZ app is already enabled with this speaker
 - Speaker icon is Grey - press and the OontZ app will be enabled with this speaker.

The Play/Pause Button Light ▶ on the OontZ Angle 3 Pro will be lit solid Green to indicate the OontZ app is enabled with this speaker.

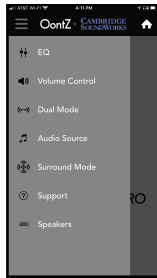

Menu screen



Speaker screen

Using the OontZ app for Support

Select the Menu ☰ in the upper left hand corner of the app and select 'Support' from the menu to access the Support screen.



Press 'User Guide' to display the latest version of the online user guide and FAQ for the OontZ Angle 3 Pro.

Press 'Update Speaker' to check the version of the current firmware version on the OontZ Angle 3 Pro and whether there is a new version available.

Press 'Contact Us' to display the customer support form. Fill in the information in the displayed form to email to our OontZ support team.



The firmware version of the OontZ Angle 3 Pro is shown under 'Current Firmware Version'.

If there is a new version of firmware for the OontZ Angle 3 Pro it will be displayed under 'New Firmware Version' along with the version number of the update.

To update the OontZ Angle 3 Pro to the 'New Firmware Version' press 'Update Speaker' and follow the instructions in the OontZ app.

Note: The update may take up to 30 minutes. Make sure the OontZ Angle 3 Pro is plugged into power and the iPhone or Smartphone is not interrupted by a phone call during the update of the OontZ Angle 3 Pro.

Reset Function



Step 1: Remove the USB Type C Charging Cable and 3.5mm Stereo Audio cable, if connected.

Step 2: With the OontZ Angle 3 Pro on, press the **Power button**  and **Volume +** together and release. The speaker will then turn off.

Step 3: The speaker has now been reset and you can turn it on.

Customer Support

If you have a question about your OontZ Angle 3 Pro or experience an issue with the speaker, our Customer Support Team wants to assist you.

For online troubleshooting tips please visit:

TheOontZ.com/troubleshooting

and select the OontZ Angle 3 Pro

For latest version of this manual please visit:

TheOontZ.com/pages/manuals

and select the OontZ Angle 3 Pro (2nd Gen)

Contact us at:

TheOontZ.com/support

and fill in our customer support form

Safety and Precautions

- 1. When the OontZ Angle 3 Pro speaker is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.**
2. Read and follow all instructions – All operating and use instructions should be followed.
3. Protect the USB Type C Charging Cable from being pinched, particularly at the connectors.
4. Unplug the USB Type C Charging Cable during lightning storms or when unused for long periods of time.
5. Do not place speaker near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way.
7. Do not make alterations to this speaker.
8. The battery in the speaker is not replaceable. Do not attempt to change it.
9. Use this speaker only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) in accordance with the manufacturer's specifications.
10. Do not place near naked flame sources, such as lighted candles, on or near the speaker.
11. Do not expose this speaker to excessive heat (e.g. from storage in direct sunlight, fire or the like)
12. If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.

Safety and Precautions (continued)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Apple, iPhone, iPad, iPod, Mac and Siri are registered trademarks of Apple Inc.

Amazon, Amazon Echo Input, Amazon Echo and Amazon Echo Dot are registered trademarks of Amazon.com, Inc.

Windows is a registered trademark of Microsoft Corporation

Bluetooth is a registered trademark of Bluetooth SIG, Inc

UL is a registered trademark of UL.

OontZ Bluetooth Adapter (2nd Gen)

Sold separately

- Allows you to play wirelessly over Bluetooth from your TV and Devices that do not have built-in Bluetooth.
- When playing with two OontZ Angle 3 Pro speakers, using the OontZ Bluetooth Adapter with it's low latency technology removes or eliminates the delay in the audio playback from the video and allows the audio to play in sync with the video.
- Pairs with a single button to one or two OontZ Angle 3 Pro speakers



Available at TheOontZ.com

OontZ True Wireless BudZ ULTRA

Sold separately

- Totally Wireless
- Amazing Sound and Rich Bass
- Quiet Mode and Sound Passthrough Mode
- Comfortable with Secure Fit
- Sweatproof, Weaterproof, Splashproof
- Quick and Easy Connection
- Playtime up to 6 Hours with 12 Extra Hours from Small Compact Charging Case



User Manual V2.0