



MORNING GLORY V4

Transparent low/medium gain overdrive that never gets in the way.
The overdrive you've always wanted but could never find.

CONTROLS

VOLUME - Controls the output volume. Left is less, right is more.

DRIVE - Controls the amount of drive or gain just like a tube amp being cranked at high volumes. You will notice that as you turn up the drive, it also adds brightness. Left is less, right is more.

STONE - Controls the amount of brightness. Right is brighter, left is darker.

GAIN TOGGLE - Engages higher gain mode when flipped up. The LED will turn red to indicate that you are in the higher gain mode.

BRIGHT CUT SWITCH - Switch on the right side of the pedal that cuts the highest frequencies in case the overall tone is too bright.

JACKS

INPUT - Lower 1/4" jack on the right side of the pedal.

OUTPUT - 1/4" jack on the left side of the pedal.

RED REMOTE JACK - The upper jack on the right side of the pedal is for a JHS "Red Remote" switch. When using this switch you can toggle between the higher gain mode and the standard mode on the fly.

POWER - Uses 9V DC Negative Center. Do not use more than 9V DC. Your warranty will be voided. 43mA consumption.

JHS PEDALS