



APPLICATION INSTRUCTIONS

Read the instructions fully and gather the following materials before beginning the application.

Supplied

Lint free Microfiber cloth
Application spreader
Spray Bottle
Alcohol wipes
Pre-Cut Film

Not Supplied

Dawn Dish Soap / Baby Soap
Water

Application Solution

1 Drop dish soap per **2 oz** of water

1. Thoroughly wash your hands.
2. Using the supplied alcohol swabs, thoroughly clean the display to remove any fingerprints, dust, or dirt from the screen.
3. Dry the screen with the supplied microfiber cloth. Lightly brush any lint or dust off, that may have been left behind.
4. Fill a cup with water and add Dish soap or Baby Soap per the recipe above. **Soap is not optional.**
5. Fill the included bottle with the soap/water mix.
6. *Note: We supplied a small bottle due to shipping restrictions. It will be easier to use a larger one if possible.*
7. Spray your fingertips with water to avoid getting any prints on the back of the film. Keep your hands wet to protect the film from oils.
8. **Roll film in opposite direction of packing to make it easier to work with.** Waves and light creases are completely normal and will not be visible when applied. Peel the film from the backing and spray the sticky side as you go. Be generous with the soapy water mix, it will help you center the film to the screen. It should be wet but not dripping.
9. Spray the screen with water, then place the film on the screen with no pressure. You should be able to slide the film around.
10. Align the film on the screen. Make sure any gaps are equal all the way around.
11. Once you are happy with the alignment, spray the front of the protector with a little water and gently press on the film to keep it from moving. Using the supplied applicator, begin pressing the film to the screen starting from the top and working your way down.
12. You want to work the screen in rows starting from the top.
13. The goal is to press the water mix out from between the screen and the film allowing the adhesive to work.
14. Use the microfiber cloth to wipe any water that has been released. Be very cautious while wiping the film dry. It will be in a very delicate state until all the moisture has been removed/evaporated.

Streaks and/or small bubbles under the film is normal and will go away with time.

Alternatively, WET FINGERS, peel back affected half, spray and re-squeegee.

Touch Screen may become unresponsive until moisture has completely evaporated.