

METAL FLOATING LOTUS TORCH

Antorcha de loto flotante metálico

FOR OUTDOOR USE ONLY!

Read instructions carefully.

PARA USO EN EXTERIORES SOLOAMENTE.


Lea el instrucciones cuidadosamente

CALIFORNIA PRO. 65 WARNING: This product and combustion products emitted when this product is burning may contain chemicals known to the State of California to cause cancer, birth defects or reproductive harm.



TotalPond®
Manufactured by
GeoGlobal Partners
West Palm Beach, FL 33409
888-412-6001
www.totalpond.com

©GeoGlobal Partners, LLC. TotalPond is a registered trademark of GeoGlobal Partners, LLC.

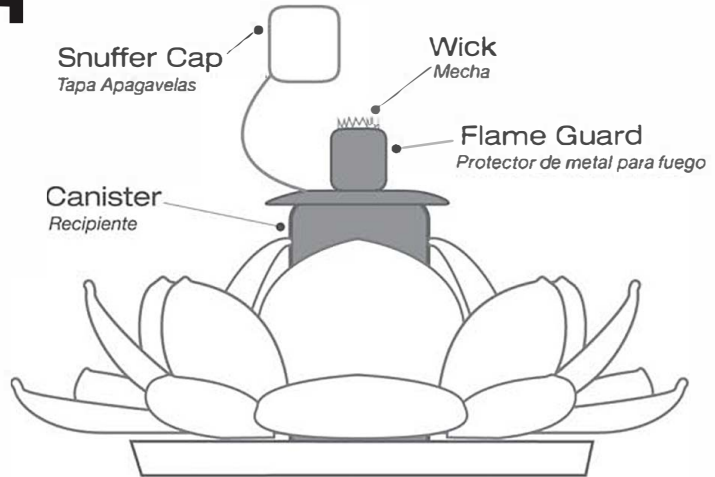

Item/Artículo #:
A16550

⚠ DANGER: TORCH FUEL IS HARMFUL OR FATAL IF SWALLOWED. CONTAINS PETROLEUM HYDROCARBONS. READ WARNINGS ON TORCH FUEL CONTAINER CAREFULLY.

⚠ WARNING: FOR OUTDOOR USE ONLY! KEEP OUT OF REACH FROM CHILDREN AND PETS - NEVER LEAVE BURNING TORCH UNATTENDED. FAILURE TO FOLLOW WARNINGS AND INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE.

⚠ WARNING: USE ONLY TORCH FUEL - DO NOT USE GASOLINE OR OTHER FLAMMABLE FUELS.

⚠ CAUTION: Use only in well-ventilated area. Do not use in windy conditions. Do not use near plants or other flammable objects. Do not use fuel canister outside of torch. Do not tip torch as fuel can spill and cause fire or serious injury. Store fuel in original bottle with cap secured, and dispose of any unwanted fuel in accordance to local laws and regulations.

INSTRUCTIONS FOR USE:

- 1. INSTALLING:** Do not place torch under covered shelter or umbrellas, near pedestrian traffic or combustibles such as wood structures, fuel, clothing or dry vegetation. Retain these instructions for reference.
- 2. FILLING:** Remove metal flame guard from fuel canister and fill with torch fuel. Use a funnel to fill up to ½" from top seam. **DO NOT OVERFILL.** Reattach metal wick holder to fuel canister. Wipe away any spilled fuel before lighting.
- 3. LIGHTING:** Allow wick to become saturated with fuel. Exposed wick should be no higher than ¾". **⚠ CAUTION:** Keep clothing, hair and face away from flame when lighting.
- 4. EXTINGUISHING:** Using the snuffer cap that is attached to the torch, carefully place completely over the wick until flame is extinguished. To prevent snuffer cap from igniting, remove after flame is extinguished and allow the wick to cool. Place snuff cap over the wick to protect from elements. Allow to cool for 30 minutes before handling and refilling.

⚠ PELIGRO: EL COMBUSTIBLE DE LA ANTORCHA ES DAÑINO O MORTAL SI SE INGIERE. CONTIENE HIDROCARBUROS DE PETRÓLEO. LEA CUIDADOSAMENTE LAS ADVERTENCIAS EN EL ENVASE DEL COMBUSTIBLE DE LA ANTORCHA.

⚠ ADVERTENCIA: PARA USO EN EXTERIORES SOLAMENTE. MANTENGA ALEJADO DEL ALCANCE DE LOS NIÑOS Y LAS MASCOTAS. NUNCA DEJE UNA ANTORCHA ENCENDIDA SIN SUPERVISIÓN. SI NO RESPETA LAS ADVERTENCIAS E INSTRUCCIONES PUEDE PRODUCIR LESIONES PERSONALES O DAÑOS MATERIALES GRAVES.

⚠ ADVERTENCIA: USE ÚNICAMENTE COMBUSTIBLE PARA ANTORCHAS, NO UTILICE GASOLINA NI NINGÚN OTRO COMBUSTIBLE INFLAMABLE.

⚠ PRECAUCIÓN: Utilice sólo en áreas bien ventiladas. No lo utilice cuando haya mucho viento. No lo utilice cerca de plantas u otros objetos inflamables. No utilice un recipiente fuera de la antorcha. Guarde el combustible en el recipiente de combustible original y la tapa bien puesta; desheche el combustible que no necesite según las leyes y normas locales.

INSTRUCCIONES DE USO:

- 1. INSTALACIÓN:** No coloque la antorcha debajo de un refugio cubierto ni de sombrillas, ni tampoco cerca de la circulación peatonal ni de elementos combustibles tales como estructuras de madera, combustible, ropa o vegetación seca. Antes de encender la antorcha retire la etiqueta colgante y guárdela como referencia.
- 2. LLEVADO:** Retirar el protector metálico de llama del envase de combustible y llenar con combustible de la antorcha. Llene a 1.3 cm de la parte superior costura. **NO APRIETE EXCESIVAMENTE.** Vuelva a colocar la mecha de metal soporte para botella de combustible. Limpie el combustible derramando antes de encender.
- 3. ENCENDIDO:** Deje que la mecha se moje completamente con combustible. La mecha expuesta no debe superar los 1.9 cm. **⚠ PRECAUCIÓN:** Mantenga la ropa, cabello y cara lejos de la flama cuando enciende la antorcha.
- 4. APAGADO:** Coloque la tapa apagavelas unida a la antorcha completamente sobre la mecha hasta que se apague la flama. para evitar que la tapa apagavelas se enciende, retirela cuando la mecha esté apagada y deje que la mecha enfrie. Coloque la tapa apagavelas sobre la mecha para proteger esta ultima de los elementos climáticos. Deje enfriar durante 30 minutos antes de manipular y rellenar.

Capacity 3 fl oz. (98 mL)

⚠ DANGER: TORCH FUEL IS HARMFUL OR FATAL IF SWALLOWED. CONTAINS PETROLEUM HYDROCARBONS. READ WARNINGS ON TORCH FUEL CONTAINER CAREFULLY.

⚠ WARNING: FOR OUTDOOR USE ONLY! KEEP OUT OF REACH FROM CHILDREN AND PETS - NEVER LEAVE BURNING TORCH UNATTENDED. FAILURE TO FOLLOW WARNINGS AND INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE.

⚠ WARNING: USE ONLY TORCH FUEL - DO NOT USE GASOLINE OR OTHER FLAMMABLE FUELS.

⚠ CAUTION: Use only in well-ventilated area. Do not use in windy conditions. Do not use near plants or other flammable objects. Do not use fuel canister outside of torch. Do not tip torch as fuel can spill and cause fire or serious injury. Store fuel in original bottle with cap secured, and dispose of any unwanted fuel in accordance to local laws and regulations.

INSTRUCTIONS FOR USE:

- 1. INSTALLING:** Do not place torch under covered shelter or umbrellas, near pedestrian traffic or combustibles such as wood structures, fuel, clothing or dry vegetation. Retain these instructions for reference.
- 2. FILLING:** Remove metal flame guard from fuel canister and fill with torch fuel. Use a funnel to fill up to $\frac{1}{2}$ " from top seal. **DO NOT OVERFILL.** Reattach metal wick holder to fuel canister. Wipe away any spilled fuel before lighting.
- 3. LIGHTING:** Allow wick to become saturated with fuel. Exposed wick should be no higher than $\frac{3}{4}$ ". **⚠ CAUTION:** Keep clothing, hair and face away from flame when lighting.
- 4. EXTINGUISHING:** Using the snuffer cap that is attached to the torch, carefully place completely over the wick until flame is extinguished. To prevent snuffer cap from igniting, remove after flame is extinguished and allow the wick to cool. Place snuff cap over the wick to protect from elements. Allow to cool for 30 minutes before handling and refilling.

Capacidad 3 onzas líquidas (98 mL)

⚠ PELIGRO: EL COMBUSTIBLE DE LA ANTORCHA ES DAÑINO O MORTAL SI SE INGIERE. CONTIENE HIDROCARBUROS DE PETRÓLEO. LEA CUIDADOSAMENTE LAS ADVERTENCIAS EN EL ENVASE DEL COMBUSTIBLE DE LA ANTORCHA.

⚠ ADVERTENCIA: PARA USO EN EXTERIORES SOLAMENTE. MANTÉNGALO ALEJADO DEL ALCANCE DE LOS NIÑOS Y LAS MASCOTAS. NUNCA DEJE UNA ANTORCHA ENCENDIDA SIN SUPERVISIÓN. SI NO RESPETA LAS ADVERTENCIAS E INSTRUCCIONES PUEDE PRODUCIR LESIONES PERSONALES O DAÑOS MATERIALES GRAVES.

⚠ ADVERTENCIA: USE ÚNICAMENTE COMBUSTIBLE PARA ANTORCHAS. NO UTILICE GASOLINA NI NINGÚN OTRO COMBUSTIBLE INFLAMMABLE.

⚠ PRECAUCIÓN: Utilice sólo en áreas bien ventiladas. No lo utilice cuando haya mucho viento. No lo utilice cerca de plantas u otros objetos inflamables. No utilice un recipiente fuera de la antorcha. Guarde el combustible en el recipiente de combustible original y la tapa bien puesta; deseche el combustible que no necesite según las leyes y normas locales.

INSTRUCCIONES DE USO:

- 1. INSTALACIÓN:** No coloque la antorcha debajo de un refugio cubierto ni de sombrillas, ni tampoco cerca de la circulación peatonal ni de elementos combustibles tales como estructuras de madera, combustible, ropa o vegetación seca. Antes de encender la antorcha retire la etiqueta colgante y guárdela como referencia.
- 2. LLENADO:** Retire el protector metálico de la boca del envase de combustible y llene con combustible de la antorcha. Llene a 1.3 cm de la parte superior costura. **NO APRIETE EXCESIVAMENTE.** Vuelva a colocar la mecha de metal soporte para botella de combustible. Limpie el combustible desarrancando antes de encender.
- 3. ENCENDIDO:** Déje que la mecha se moje completamente con combustible. La mecha expuesta no debe superar los 1.9 cm. **⚠ PRECAUCIÓN:** Mantenga la ropa, cabello y cara lejos de la flama cuando encienda la antorcha.
- 4. APAGADO:** Coloque la tapa apagavelas unida a la antorcha completamente sobre la mecha hasta que se apague la flama. Para evitar que la tapa apagavelas se encienda, retírela cuando la mecha esté apagada y deje que la mecha enfíe. Coloque la tapa apagavelas sobre la mecha para proteger esta última de los elementos climáticos. Déje enfriar durante 30 minutos antes de manipular y rellenar.