


Directions


Set-up

1. DO NOT remove the tape holding the strings in place
2. Hold the backboard in the desired location against the wall. Level the bottom edge.
3. Place a sharp instrument through the screw holes, marking their positions on the wall.
4. Drill pilot holes. If the wall is sheetrock or plaster use plastic anchors.
5. Screw the sculpture to the wall using only the 2 lower mounting holes.
6. Slide the color ring behind the patterning wheels and upper portion of the base.
7. Center the ring behind the wheels with the notch in the ring spanning the base.
8. Screw the upper portion of the sculpture into place.
9. Remove the tape.

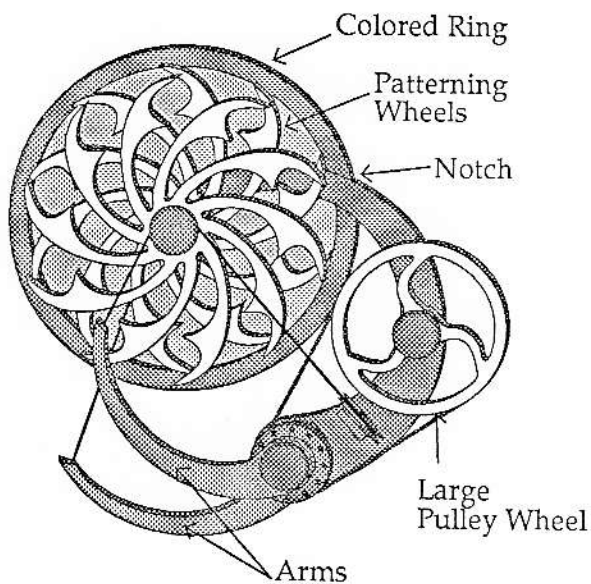

Helios

by
David
Roy

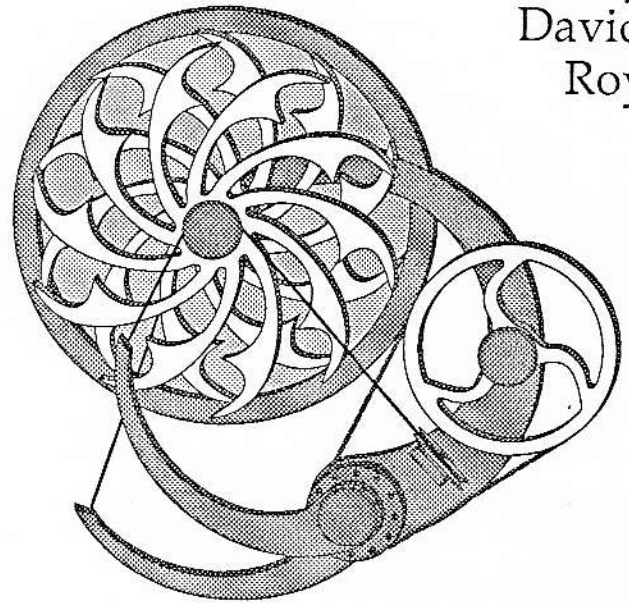

©1988 David C. Roy

To Wind

Turn the large pulley wheel clockwise 20 turns.

To Start

Gently push down on which ever arm is in the upper most position.