




Step 1.

Undo your hardtop latch.



Step 2.

With an allen-wrench - remove the bolts securing the strike. By rotating the lock with the key counter-clockwise (2.5 Revolutions), remove the lock cylinder and rectangular bolt.

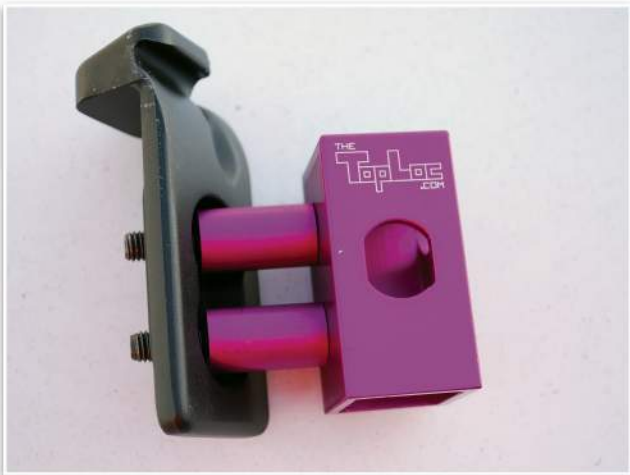


Step 3.

Position the TopLoc as shown.




Step 4.

Re-attach the strike with the TopLoc sleeve, spacers, & provided bolts as shown above.

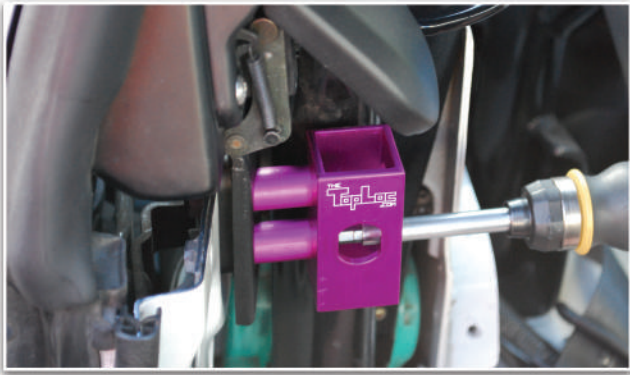

Step 5.

Being careful not to cross-thread, snug TopLoc and strike into position. Do not tighten yet!

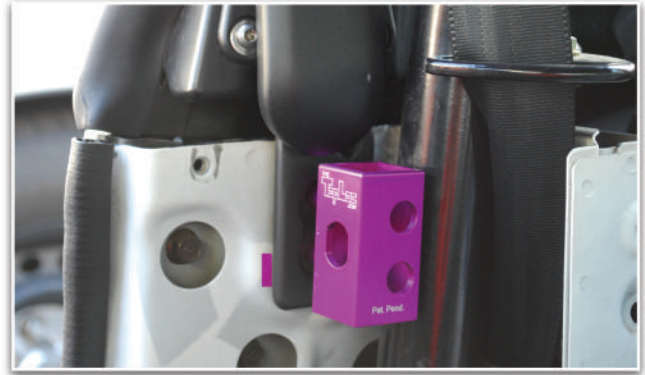

Step 6.

Put your hardtop latch into the “close” position and tighten down TopLoc. A screwdriver-style wrench should provide enough torque.



Step 7.

Slide rectangular bolt into sleeve. If there is substantial resistance, check if the bolts are securely tightened & sitting flush with the inside of the sleeve.



Step 7.

Install lock cylinder and rotate clockwise (with key) approximately 2 revolutions. Snug enough to not rattle, but do not over-tighten.



Step 8.

Your hardtop is now secure.



Step 9.

These are instructions in large font