

# CONNECTICUT POST & BEAM

## EZ Directions for the EZ SLOTTER

EZ Slotter is recommended for homeowner/contractor single-project use with 6"x6" and smaller beams.

We encourage you to watch the 5-minute video on YouTube before using the EZ SLOTTER to cut your slots for T-REX™ Connectors - <https://youtu.be/jNMy-2wfcw>




1. Drill a 3/8" hole in your chain saw bar. Center hole in the middle of the bar, approximately 4" from the motor.

2. Unscrew the nut from the end of the bolt and remove 2 washers. Remove the block by unscrewing 3 screws from the bottom of the EZ Slotter.



3. Mount chainsaw in EZ Slotter and add the 2 washers that you previously removed (to make 2 of each side of the bar).

4. Replace block by reinstalling the 3 screws in the bottom of the EZ Slotter. Tighten the nut so bar is snug but moves freely.

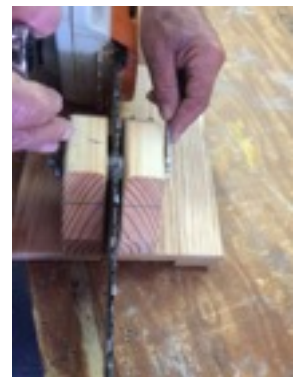

5. EZ Slotter is set up for 6"X6" lumber. If you are using a different-sized T-REX, you will have to remove the wood spacer on the bottom of the EZ Slotter and replace it with a new spacer to adjust the location of the saw kerf (slot) so that it will be in the center of your timber.

[www.ctpostandbeam.com](http://www.ctpostandbeam.com)