



10'

**SOLID STALL SIDE
LUMBER KIT**

LKSS10

10' Vertical Wood Kit
Solid Side Panel – Fits
SSO10 Standard Horse Stalls

FEATURES:

- TONGUE & GROOVE
- CUT TO LENGTH
- BEVELED FRONT
- READY TO INSTALL

TARTER
FARM AND RANCH EQUIPMENT

www.tarterusa.com

KIT INCLUDES:

Bottom Portion (Install First)

- 15 – 47" x 6-3/4" boards with tongue
- 1 – 47" x 6-3/4" board with no tongue
- 1 – 47" x 5-3/4" board with no tongue

Top Portion

- 15 – 33-3/4" x 6-3/4" boards with tongue
- 1 – 33-3/4" x 6-3/4" board with no tongue
- 1 – 33-3/4" x 5-3/4" board with no tongue



BOTTOM PORTION INSTRUCTIONS:

BEFORE YOU START: Place stall securely against a sturdy surface with the backside facing forward.

Note: The notches in the bottom channel should be facing toward you.

Note: A rubber mallet may be used to secure boards tightly without damaging the boards.

1. Install 15 – 47" x 6-3/4" boards with tongue first.

Note: First few boards can be installed by leaning at an angle and sliding in the groove.



2. Install 1 – 47" x 6-3/4" board with no tongue second to last.

Note: You will have to use slot to install last two boards.




3. Install 1 – 47" x 5-3/4" board with no tongue in final slot.



TOP PORTION INSTRUCTIONS:

1. Install 15 – 33-3/4" x 6-3/4" with tongue first.

Note: First few boards can be installed by leaning at an angle and sliding in the groove.

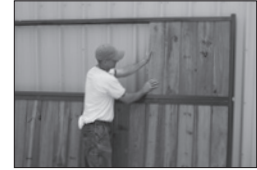

2. Install 1 – 33-3/4" x 6-3/4" board with no tongue second to last.

Note: You will have to use notch in the channel to install last two boards.



3. Install 1 – 33-3/4" x 5-3/4" board with no tongue.



YOUR SOLID STALL SIDE IS NOW COMPLETE!

** Due to possible changes during shipping, some adjustments may be needed to last board.*