

MINI R55 Taillight Installation



MINISTRY AUTO

- 1. Open your MINI's rear barn doors**
- 2. Remove the T25 screw at the top of the taillight with the supplied screw driver**
- 3. Unplug the electrical connector and remove the taillight pulling from the top first**



This adaptor cable in Fig.1 is to be used if your R55 is a Non LCI built between 2008 - 2010 .


Simply plug this cable in between your body harness and the new taillights for both sides. If you have an LCI you can disregard this cable.



Fig.1

Right Taillight

Right Hand Drive (RHD) Cars will have the reverse light on the Left and the fog light on the right. Starting with the right side taillight plug the Grey wired male connector into the White wired connector shown here

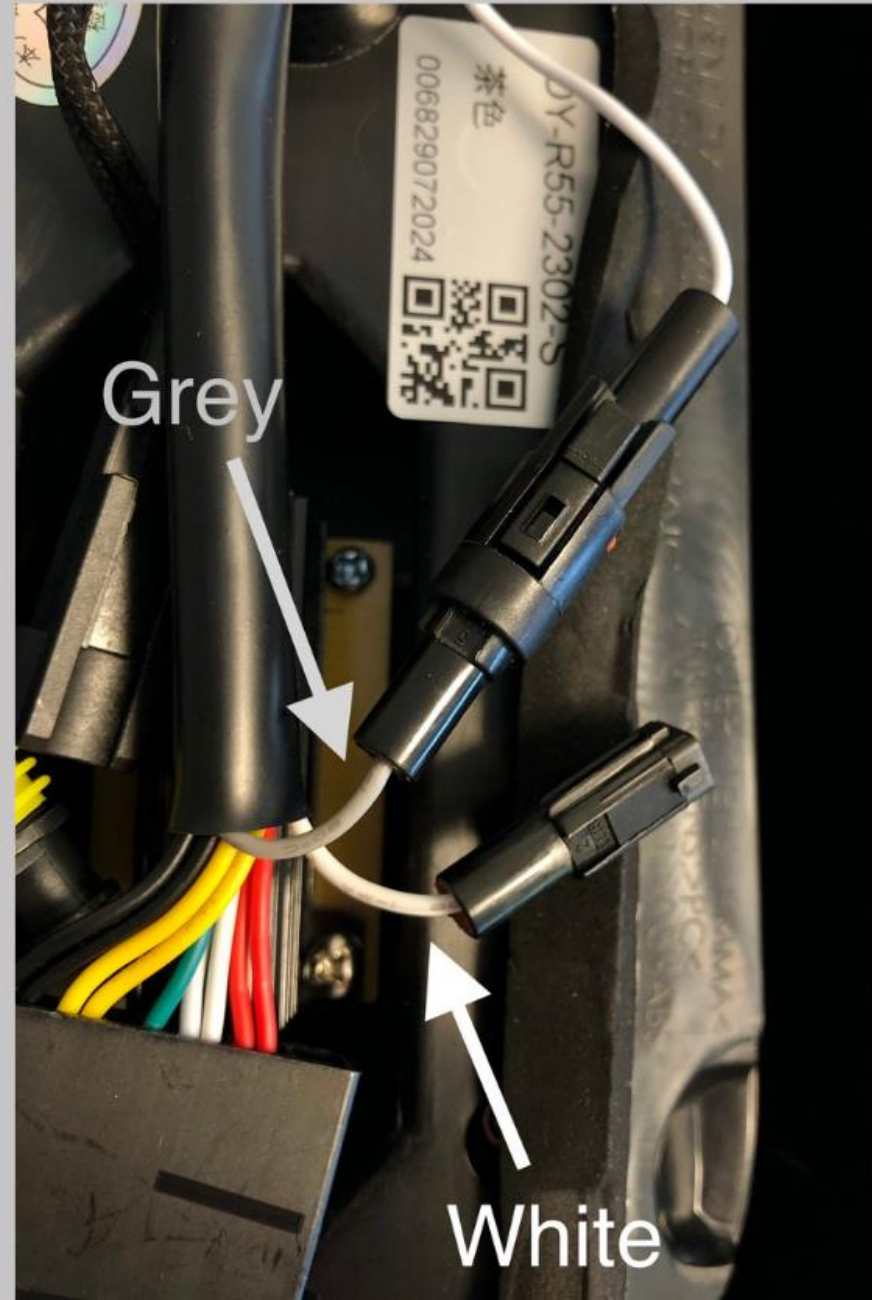

Left Taillight

Now working on the Left taillight you'll do the opposite by connecting the white wire male connector to the Grey wire female connector like this...



Now plug in the main connector into the body harness of the MINI and install the taillight by inserting the lower section first and securing with the screw you removed earlier.

Now test that your lights are all functioning correctly and that your reverse light is working on the left side and the fog light is on the right side.

