


# INSTALL GUIDE

Below are instructions to assist you with the installation of your ADA compliant sign. These signs are required for every permanent room or space in a building as per Chapter 7, section 703 of the ADA code. These guidelines were revised as of March 15, 2016 and enforced there after. For additional information you may visit [www.ada.gov](http://www.ada.gov) or reach out to us at [info@gdssigns.com](mailto:info@gdssigns.com). One of our team members will be in touch to answer all of your questions.

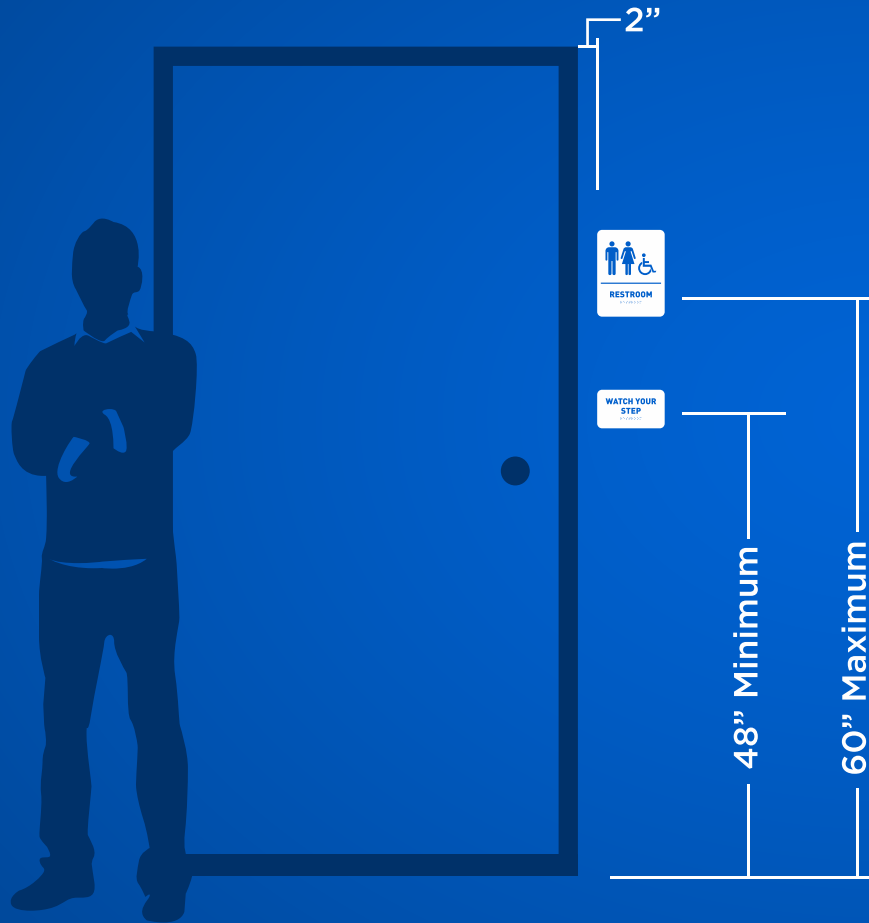

**1** Peel the paper off of the double stick tape on the back of the sign to expose the adhesive.

**1** Measure and mark a spot that is 2" off of the door frame and in between 48" & 60" above the finished floor.

**Single Door** Sign to be mounted on the latch side. If no area exists it should be mounted on the opposite side. Only mount on door if no space exists on either side of the door.

**Double Doors** Sign to be mounted on the right side of the right handed door. If no area exists it should be mounted on the opposite side. Only mount on door if no space exists on either side of the door.

**3** Using a level, place your sign over the wall in the area previously marked and ensure that the bottom line of raised lettering does not fall below 48" and does not exceed 60".

**4** Press the sign against the surface while applying equal pressure to the face.