


TRANSFER STATION DECONTAMINATION SCHEMATIC

HCW: healthcare workers; TT: Transport Team

1. DROP-OFF

TRANSFER STATION

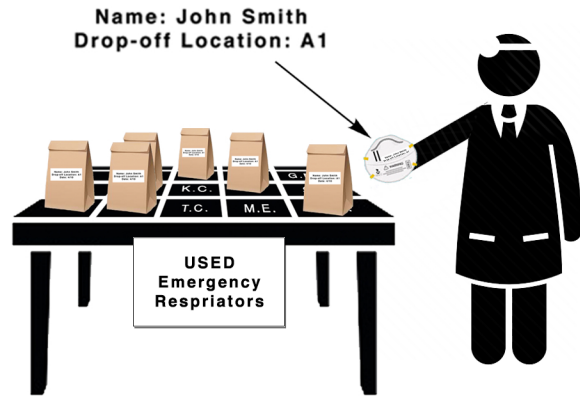

HCWs drop off labeled N95 FFRs at designated TRANSFER STATION in a bag. Each bag should only contain ONE N95 FFR. (Recommended <20 HCWs per TRANSFER STATION.)

2. TRANSPORT



TT picks up N95 FFRs from TRANSFER STATION and transports them to a centralized DECON STATION.

3. DECONTAMINATION PREP

DECON STATION




METHOD-SPECIFIC

1. N95 FFRs are checked for damage/soil.
2. Undamaged/unsouled N95 FFRs are prepared for decontamination.
3. Paper bags are discarded.

4. DECONTAMINATION

DECON STATION

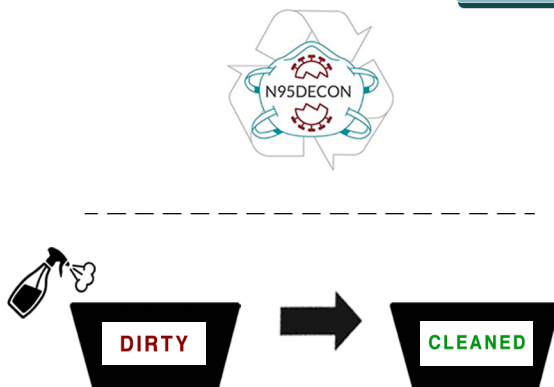

1. N95 FFRs are decontaminated.
2. Transport bins are disinfected.
3. N95 FFRs are transferred to bags. N95 FFRs at that exceed max decon cycles are set aside.


5. TRANSPORT



TT picks up N95 FFRs from DECON STATION and transports them back to original TRANSFER STATION.

6. PICK-UP

TRANSFER STATION

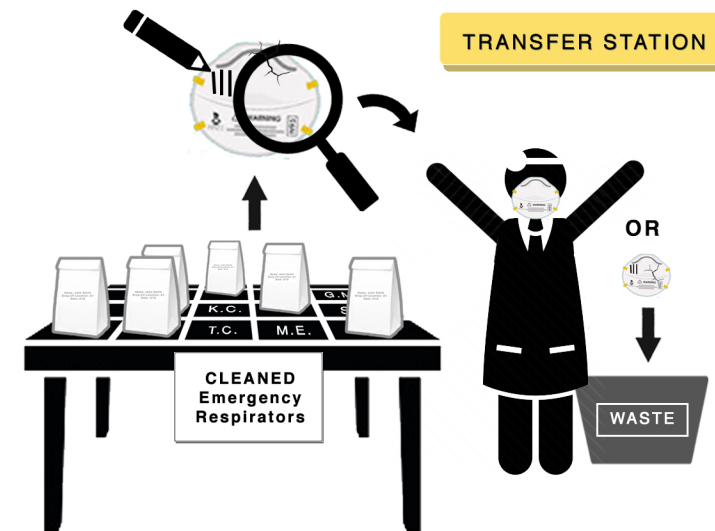

HCWs pick up N95 FFRs in a bag at designated TRANSFER STATION and mark a tally. If the N95 shows damage or poor fit, it is discarded.