

Awning Installation Guide



Unpack Awning And Locate Mounting Brackets




Mock Up Brackets 18" From Ends / 6-12" From Shoulders




Mark Wall For Bracket Placements



Place Bracket Bottom 9 Inches or More From Soffit

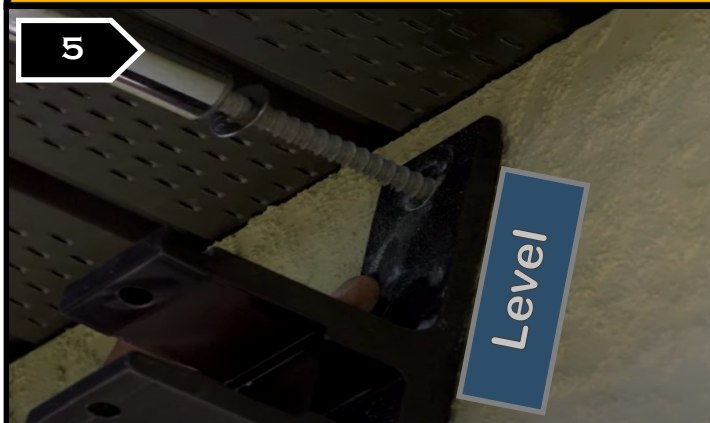

Drill Holes, Level, and Install End Brackets

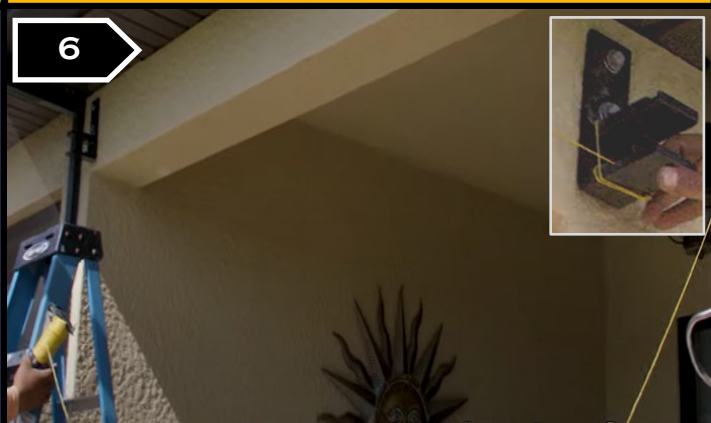

Run a Straight Line From One End Bracket To The Other

Awning Installation Guide



Use String Gauge For Proper Height On Center Brackets




Team Lift The Awning Into The Brackets



Install Retention Bolts While Lifting Awning



Connect to GFCI Protected Power Outlet

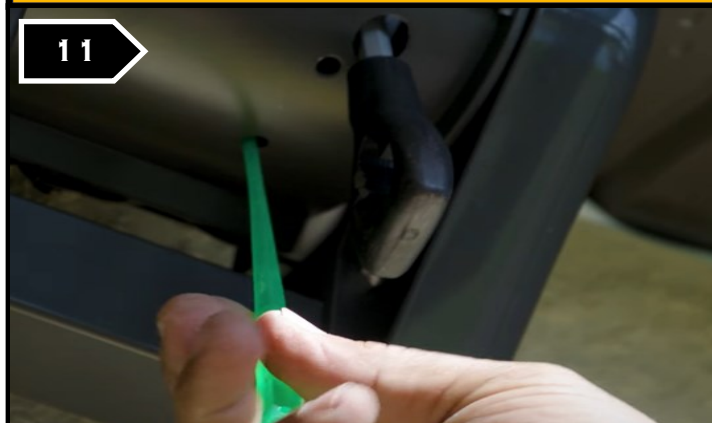

Adjust Limits As Needed



Adjust Awning Pitch As Needed