




PRODUCT INSTALLATION GUIDE



PRODUCT:	LEFT HAND REAR DOOR - MOLLE PLATE
VEHICLE:	TOYOTA LANCRUISER - 78 SERIES
PRODUCT NO.	OTA-78-2022-004

TOOLS/ITEMS REQUIRED FOR FITTING:

- HANDHELD DRILL
- 3mm DRILL BIT
- RIVET GUN
- MARKER PEN (FINE POINT)
- RUST PROOF PAINT
- SMALL PAINT BRUSH

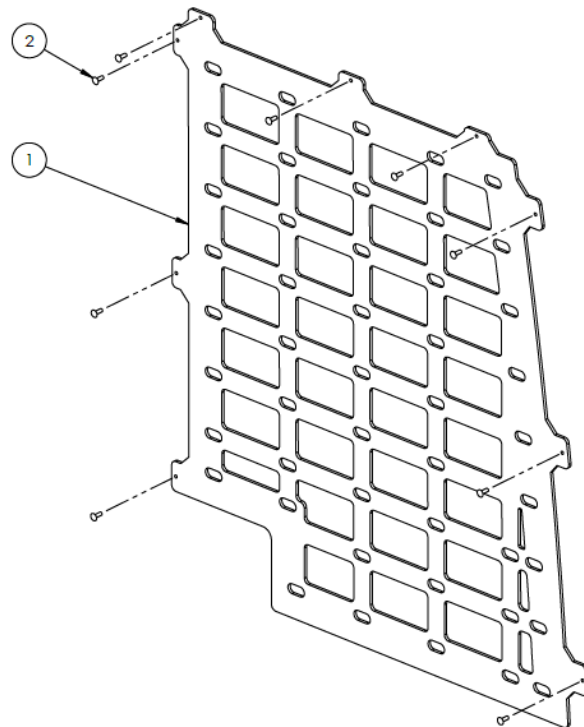

ITEM NO.	DESCRIPTION	QTY	PART NUMBER
PART LIST			
1	LEFT HAND REAR DOOR - MOLLE PLATE	1	OTA78-2022-004

FITTING KIT - SUPPLIED			
ITEM NO.	DESCRIPTION	QTY	PART NUMBER
2	3mm BLACK BLIND RIVETS	9	-

FOR PRODUCT WARRANTY PLEASE REFER TO OUR WEBSITE - www.micktighe4x4.com.au/

OVERLAND TOURERS AUSTRALIA


STEP 01:

PREPARE AND CLEAN MOUNTING SURFACE ON LEFT HAND WINDOW.



STEP 02:

LOCATE THE MOLLE PLATE AGAINST THE LH WINDOW TRIM - ENSURE ALL HOLES ARE ALIGNED CENTRAL TO WINDOW TRIM.

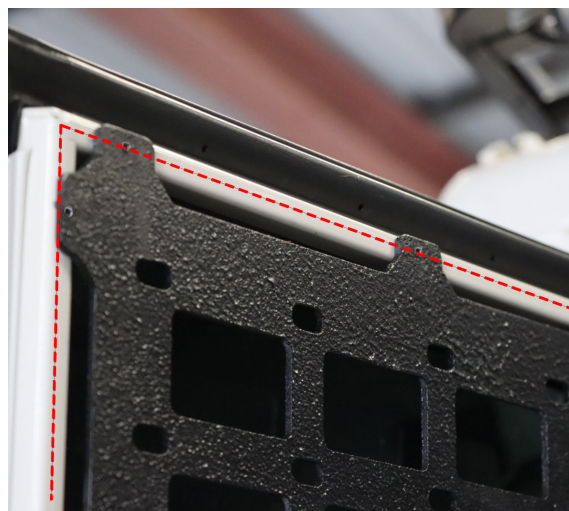

STEP 03:

USING A FINE POINT MARKER, MARK CENTERS OF ALL HOLES FOR DRILLING. (A SECOND PERSON WILL BE HELPFUL)



STEP 04:

USING A 3mm DRILL BIT, DRILL ALL THE MARKED HOLES.



STEP 05:

USING A SMALL PAINT BRUSH, COAT ALL DRILLED HOLES WHERE EXPOSED - RE-COAT ALL HOLES ONCE FIRST COAT HAS DRIED.



STEP 06:

BEFORE FIXING THE MOLLE PLATE, ENSURE BOTH THE MOUNTING SURFACE AND WINDOW ARE CLEANED.



STEP 07:

USING THE SUPPLIED BLACK RIVETS (9x) AND A RIVET GUN, FIX THE MOLLE PLATE TO THE DOOR.



STEP 08:

YOUR MOLLE PLATE IS NOW INSTALLED AND READY FOR YOUR NEXT ADEVNTURE!

