



Required Tools

- 3/16" Allen Wrench (Included)




Required Fasteners

- 3/8 x 1/2" Set Screw (Included)



NOTE: Please note that each stairway is built separately and handrails may or may not have a universal fit.

1. Insert appropriate handrail left/right to receiver sockets on stairway such that the mid-rail tube is on the outside of the handrail.
2. Lower handrail posts evenly into the receiver sockets so that the bottom of the post is flushed with the bottom of the lower socket.
3. Tighten all set screws on receiver sockets. CAUTION: Do not over tighten

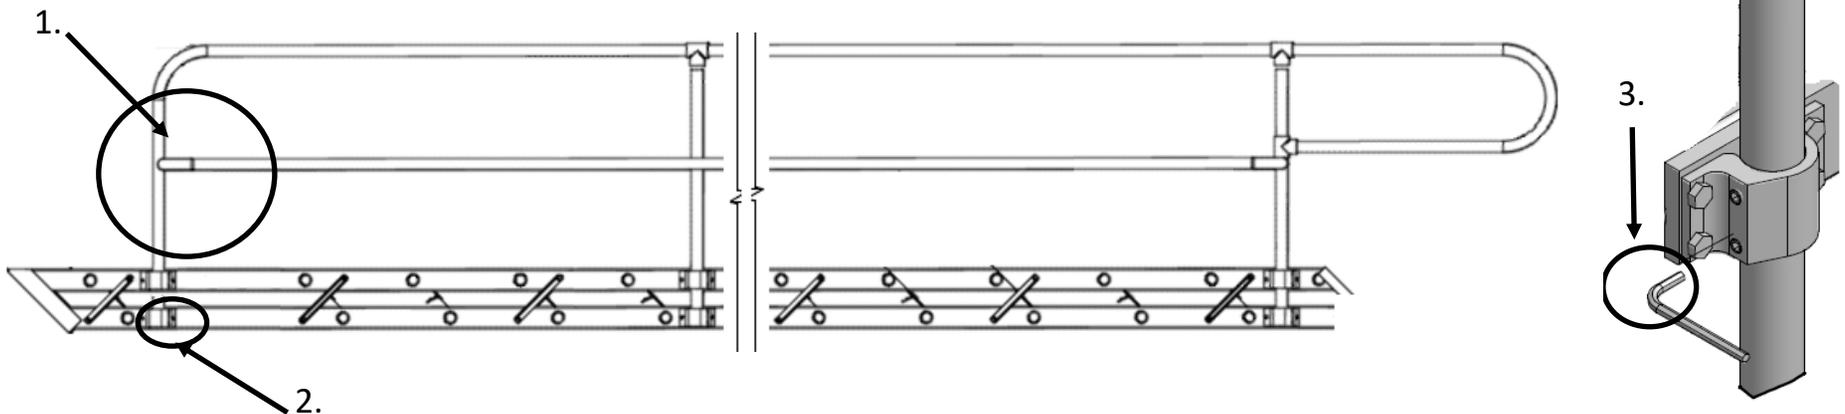



Alumidock®

Stairway Installation

Required Tools (Not Included)

- 3/8" DRIVE RACHET
- 1/2" WRENCH and SOCKET

1. Loosen 4 bolts and lock washers / remove 2 bolts and lock washers on hinge bars to allow retaining clips on bracket to be rotated 90 degrees.
2. Place stairway axles into the hinge bars accordingly.
3. Rotate retaining clips back to original position and replace 2 bolts and lock washers / tighten 4 bolts and lock washers accordingly. CAUTION: Do not over tighten

