




Rocket Door Frames

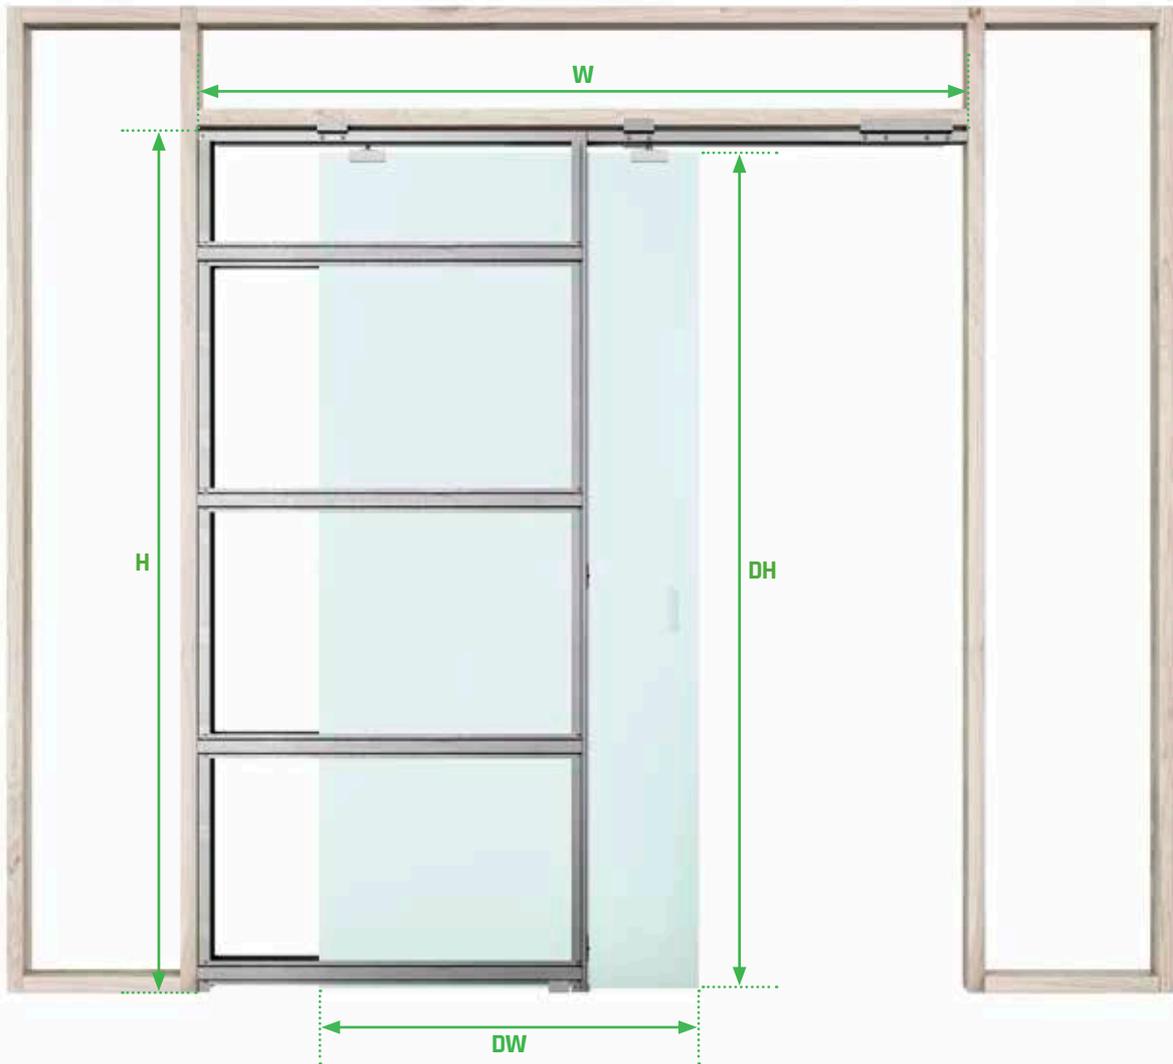

GLASS DOOR		FRAME WIDTH	OVERALL DIMENSIONS			
			SINGLE DOOR		DOUBLE DOOR	
DW	DH		W	H	W	H
696 (27")	1971 (78")	70 (2 3/4")	1385 (54 1/2")	2045 (80 3/8")	2770 (109")	2045 (80 3/8")
772 (30")	1971 (78")	75 (3")	1537 (60 1/2")	2045 (80 3/8")	3074 (121")	2045 (80 3/8")
		90 (3 1/2")				

Glass Door Thickness : 8

- Install at finished floor level
- To obtain a sliding pocket door with two leaves it's necessary to join n°2 single door kits
- See page 5 for stud dimensions

 **CAUTION**


Please follow the instructions carefully as they have been designed to help you, don't skip any pages or stages as you may cause yourself problems. Use the correct tools and relevant protective clothing/eyewear, gloves are essential as there may be some sharp edges. A pair of trestles would be useful for the assembly.

**WANT TO SEE
HOW IT'S DONE?**



**GO TO WWW.ROCKETDOORFRAMES.CO.UK
TO SEE THE INSTALLATION VIDEO**


TOOLS REQUIRED

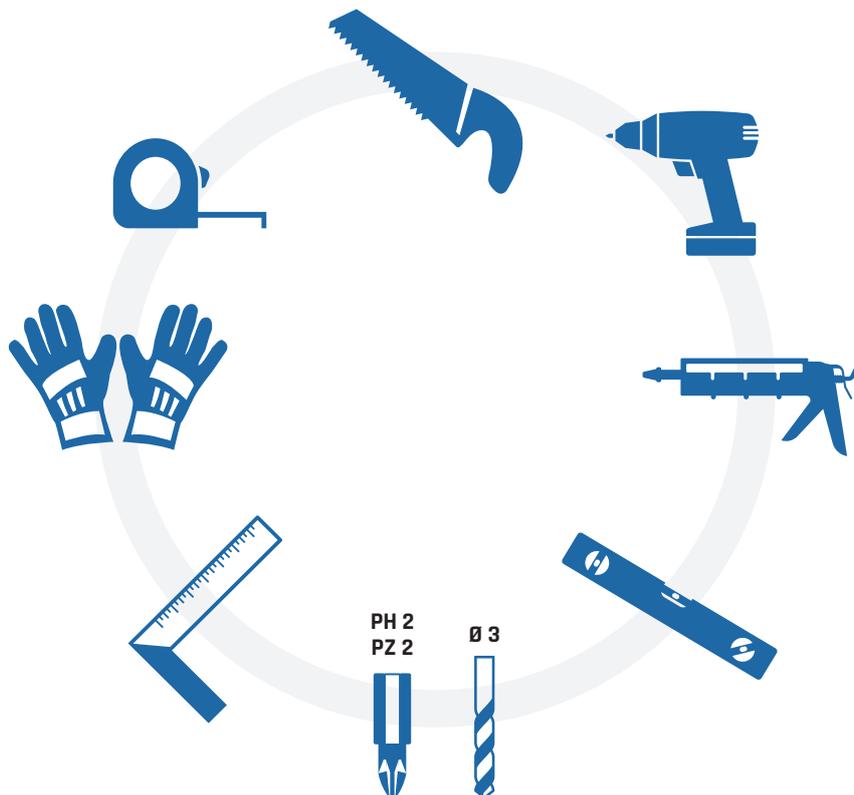


INSTALLING IN STUDWORK

SINGLE DOOR


DOUBLE DOOR

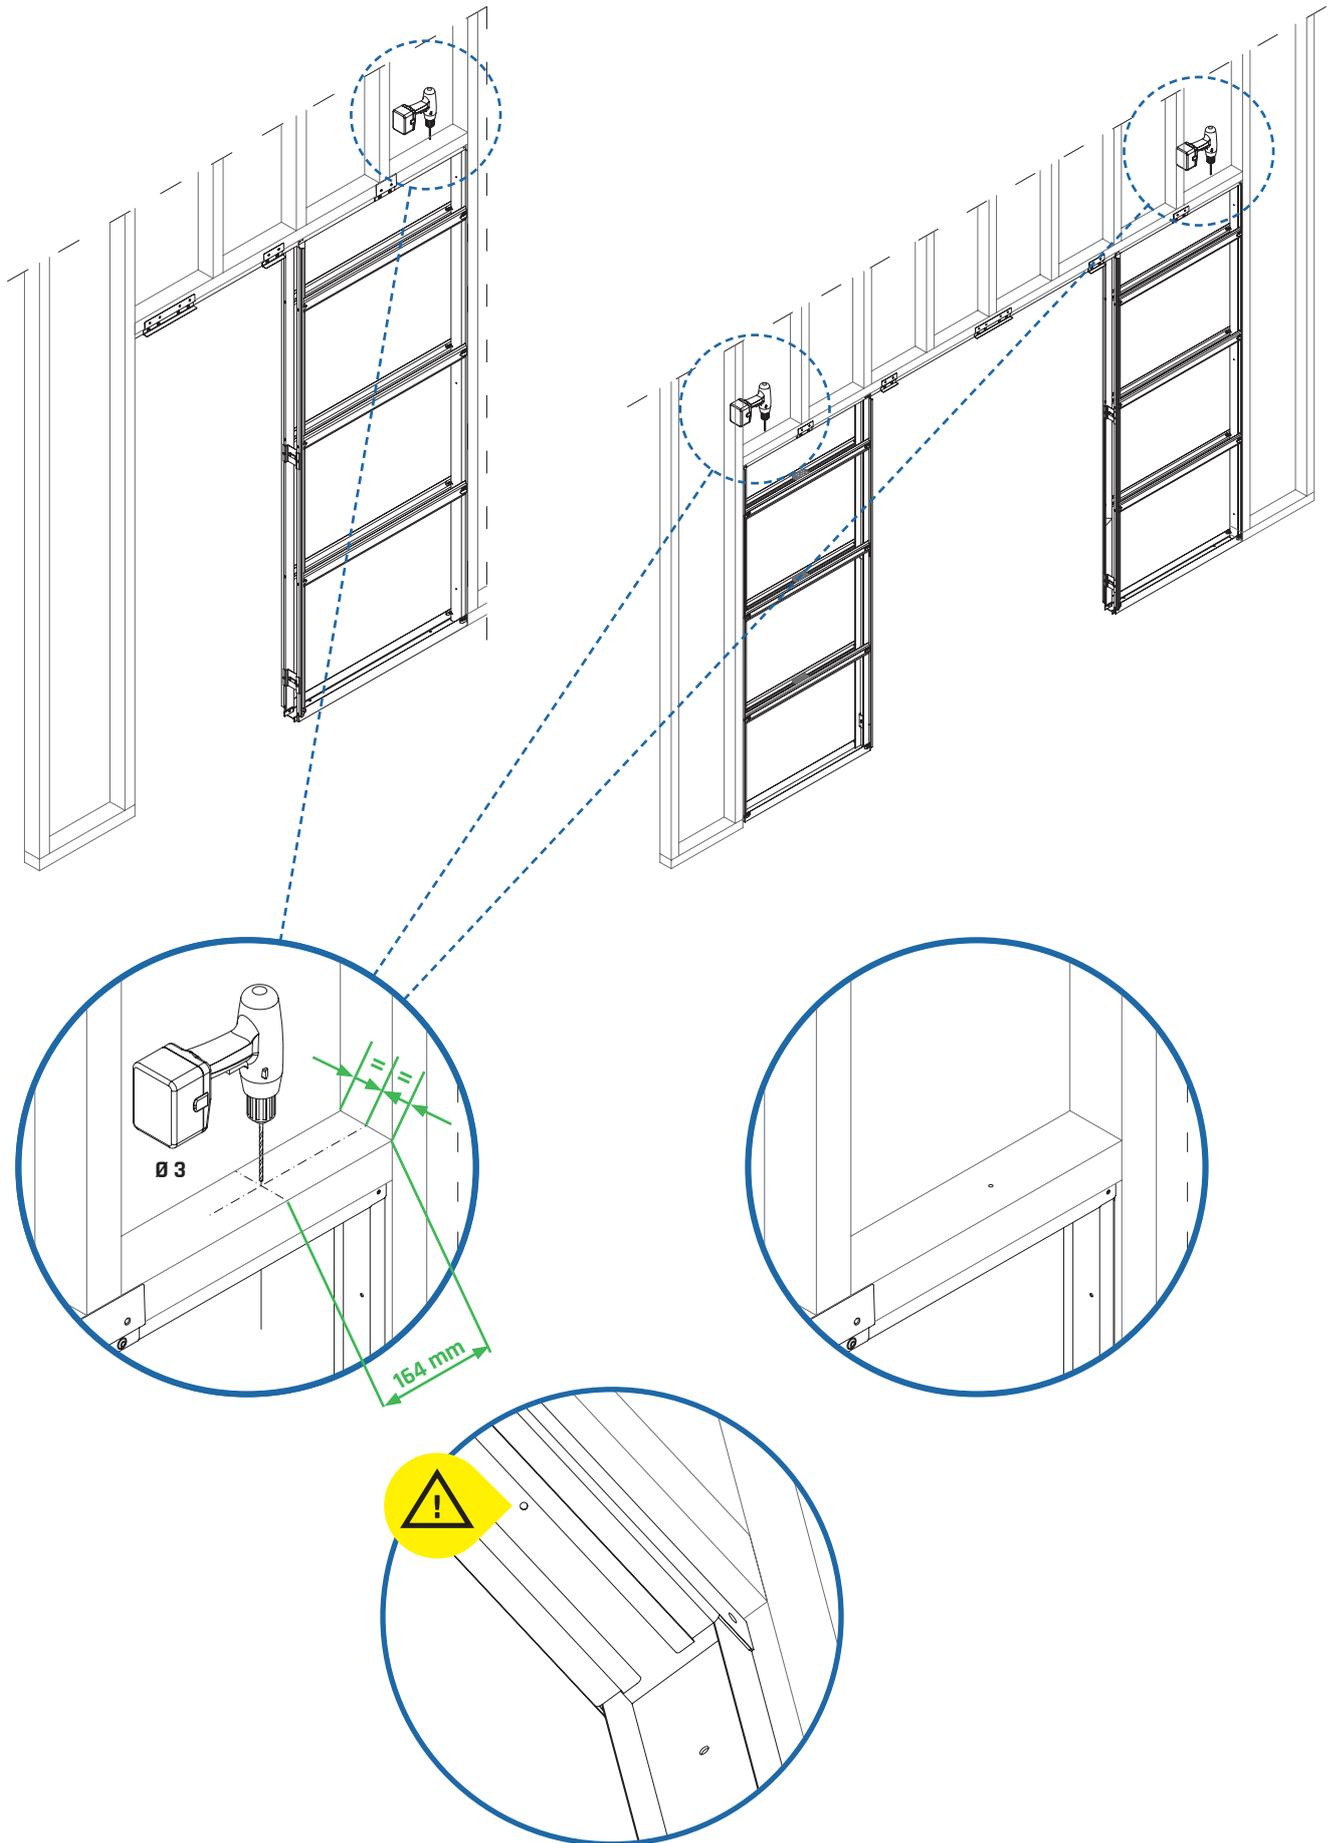




INSTALLING THE DOOR STOP

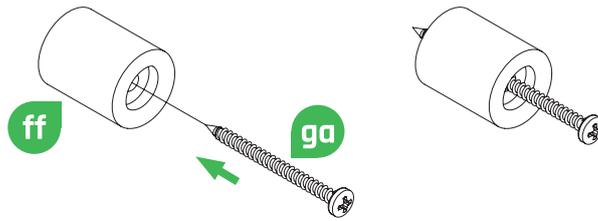



SINGLE DOOR

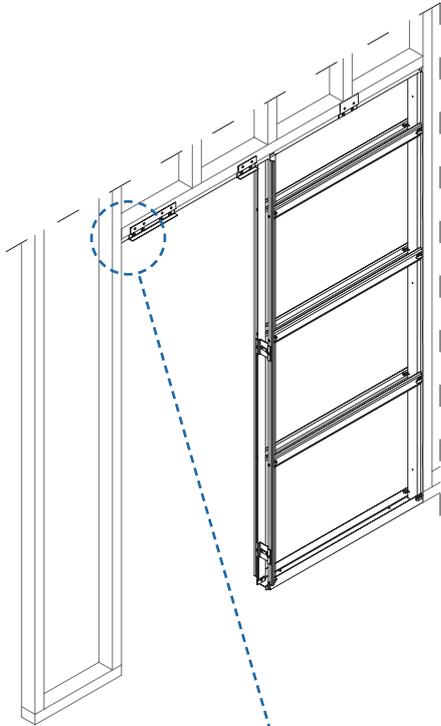

DOUBLE DOOR

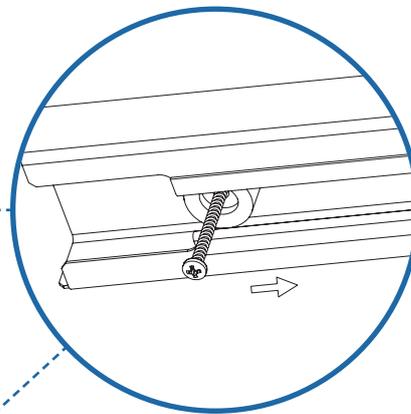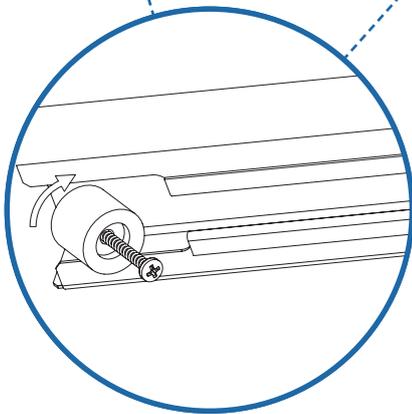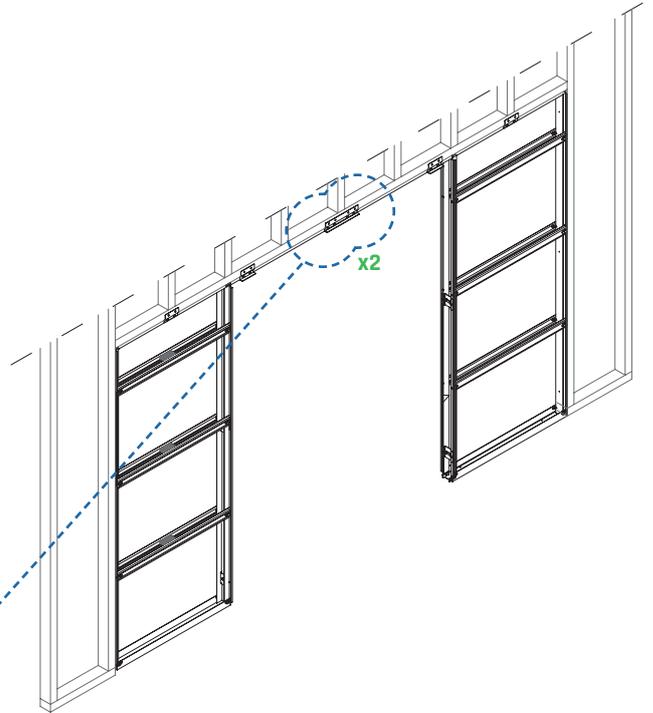


Install the door stop using the hole you have drilled in the track (see previous page)

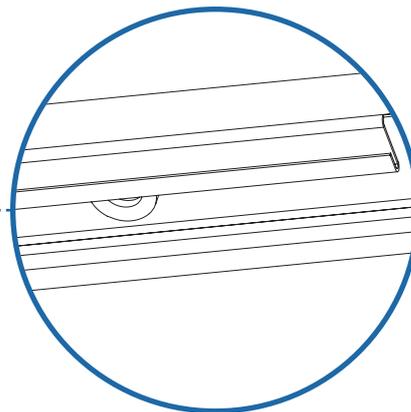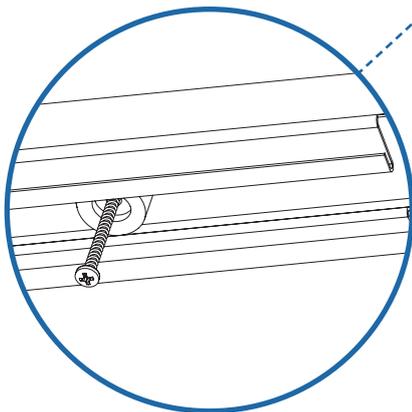


FIXING THE PLASTERBOARD


SINGLE DOOR

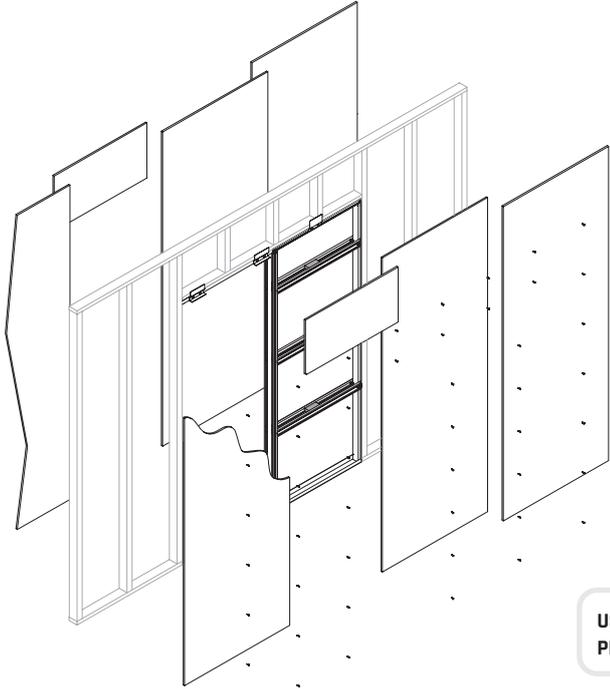



DOUBLE DOOR

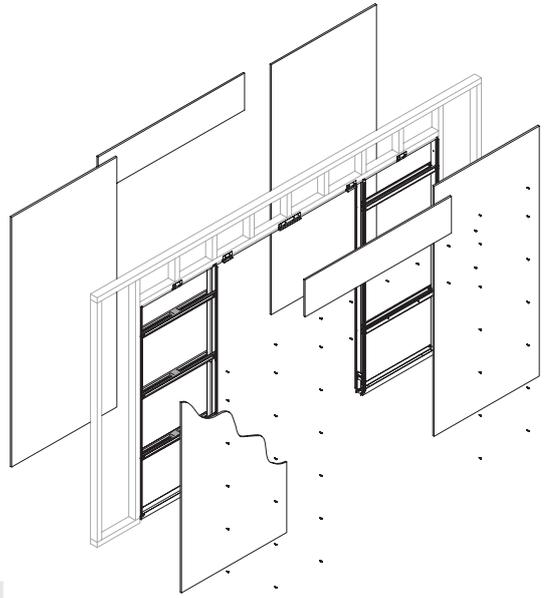

USE 12.5 mm
PLASTERBOARD

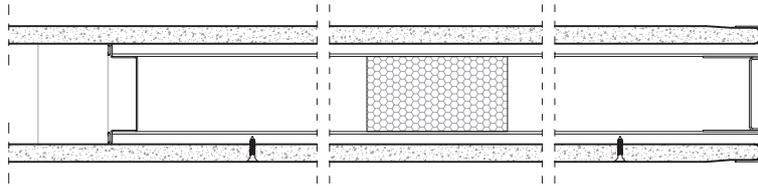



Use supplied
19 mm screws

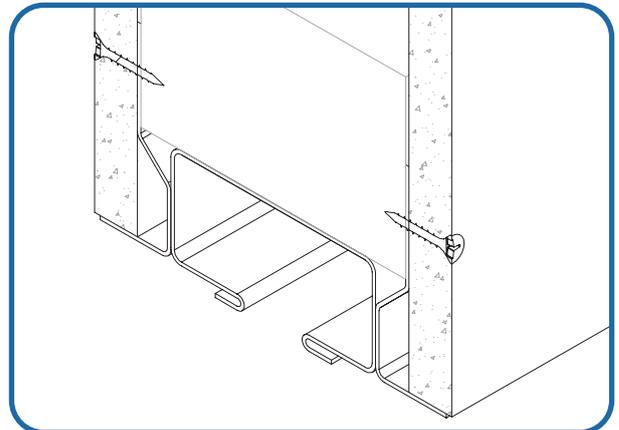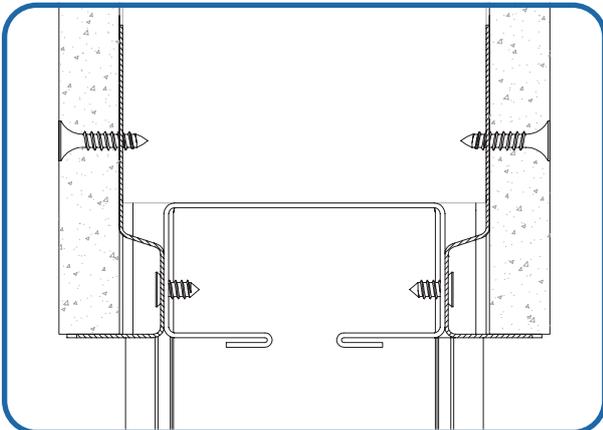

REMOVING BRACKETS AND SPACERS

SINGLE DOOR

DOUBLE DOOR

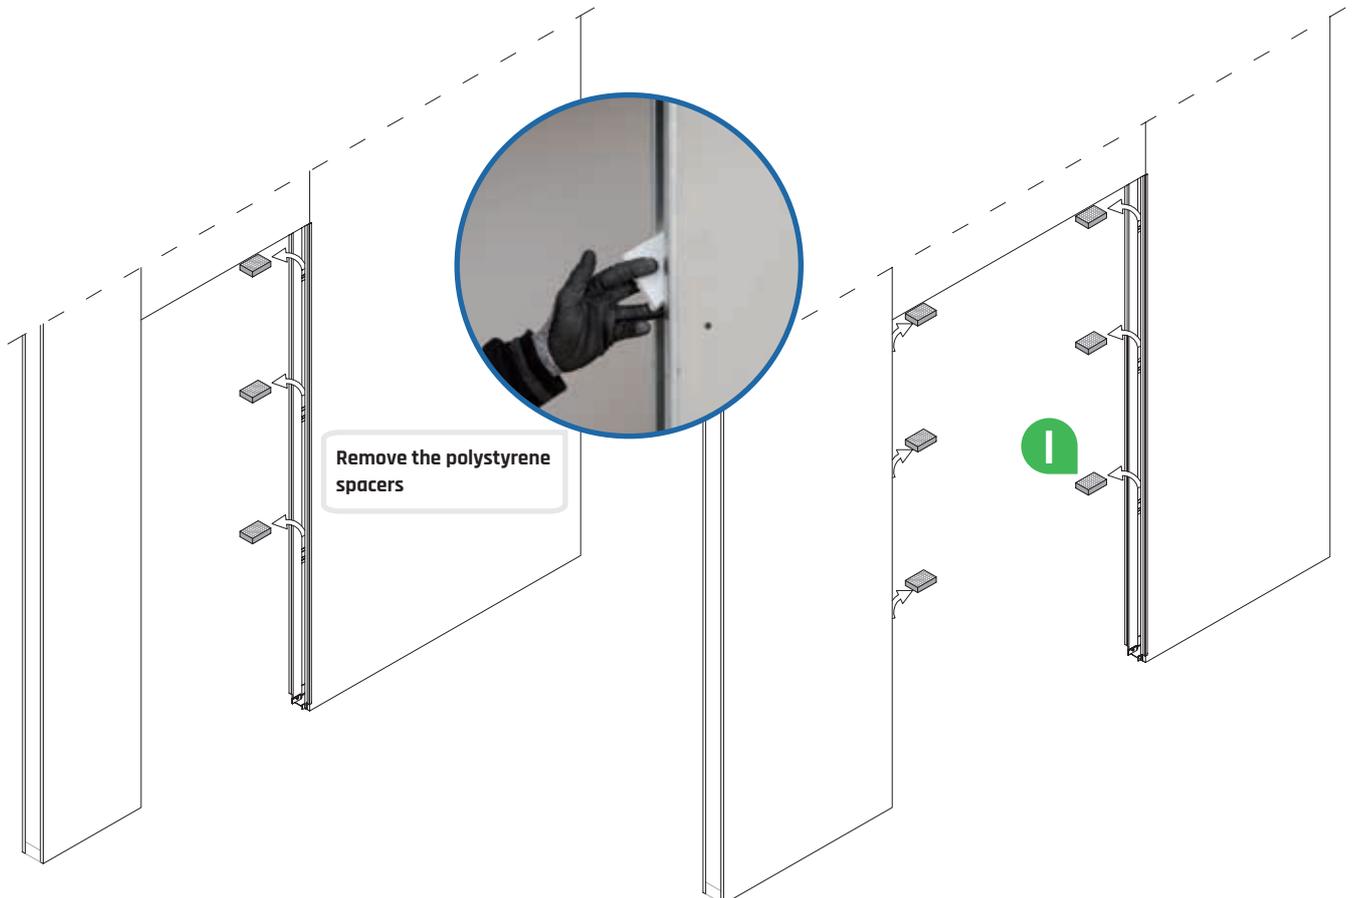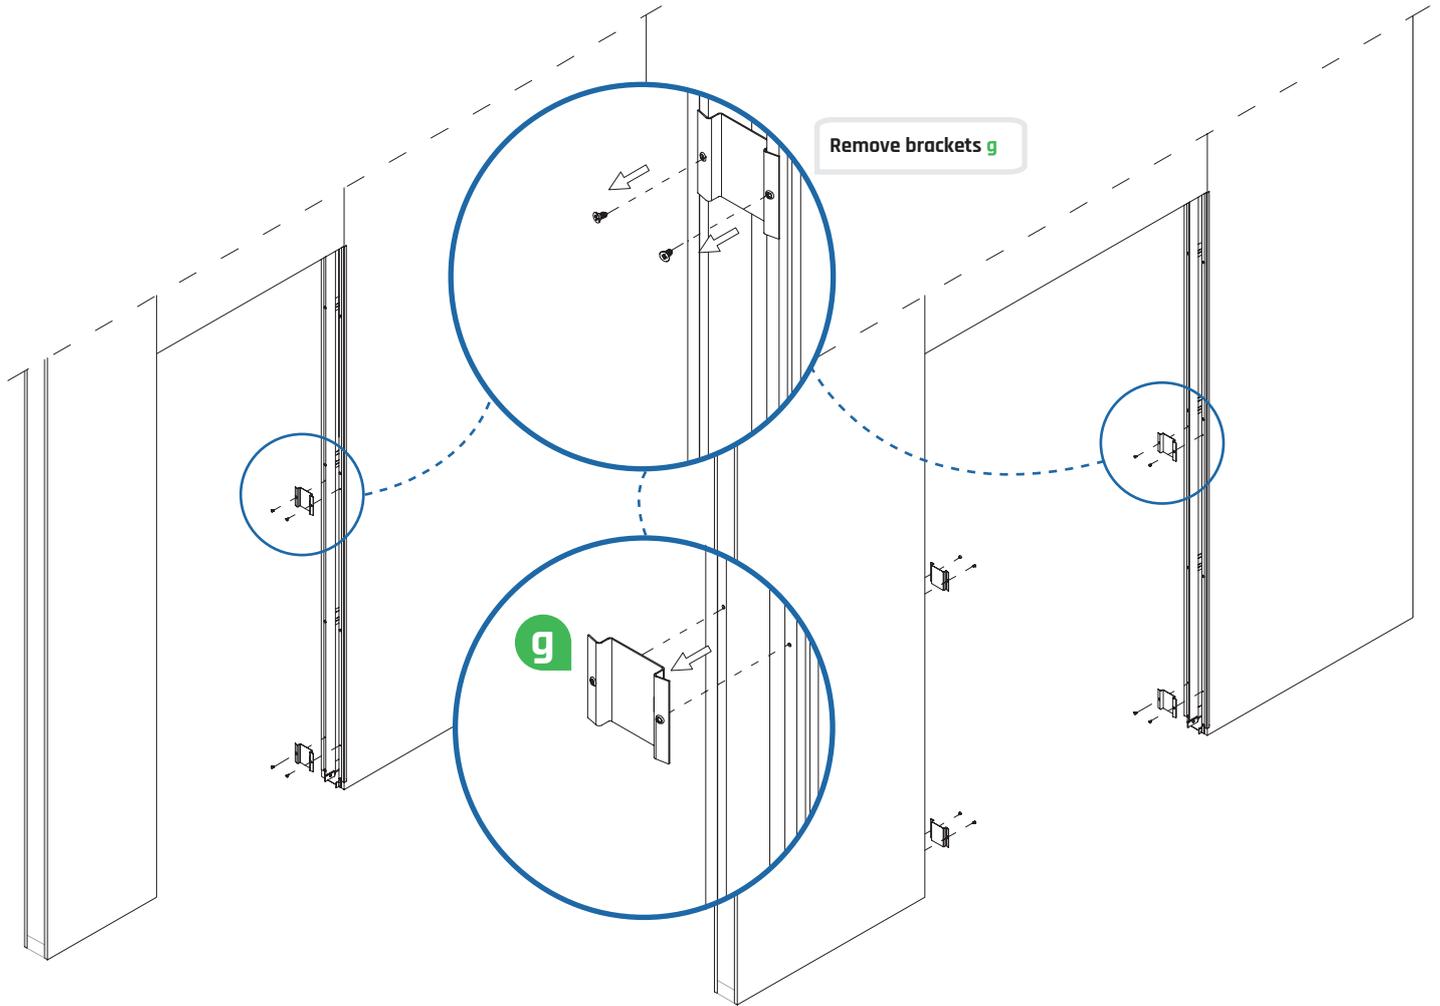


RUNNERS ASSEMBLING

X2

SINGLE DOOR


X4

DOUBLE DOOR

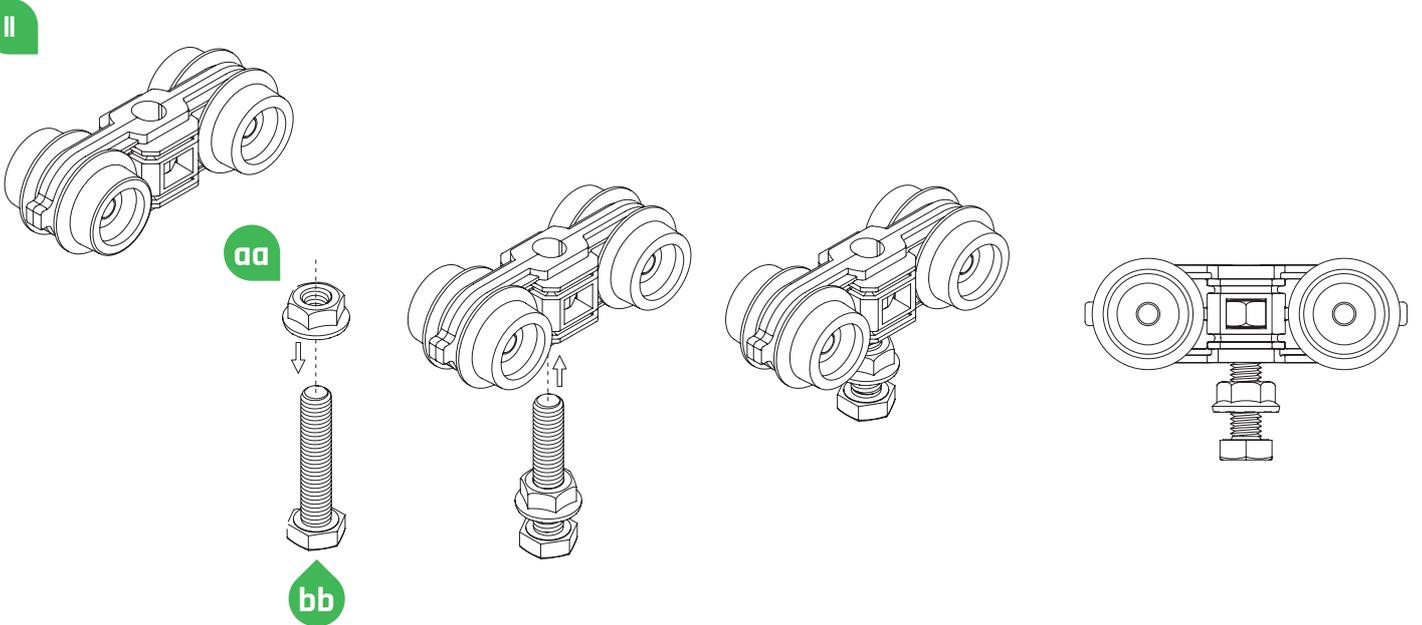


INSERT RUNNERS INTO TRACK



SINGLE DOOR

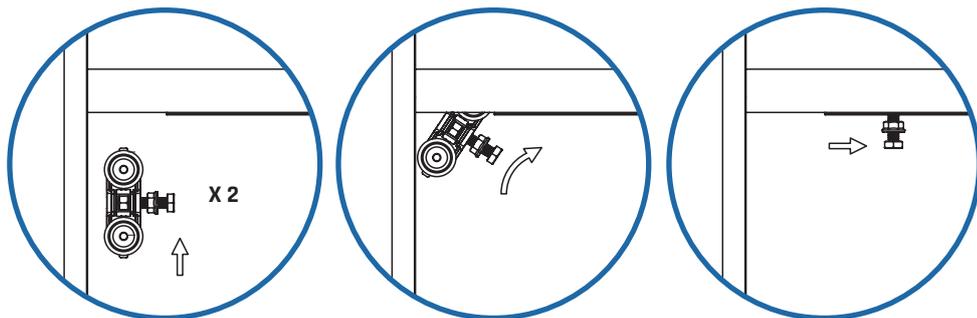


DOUBLE DOOR

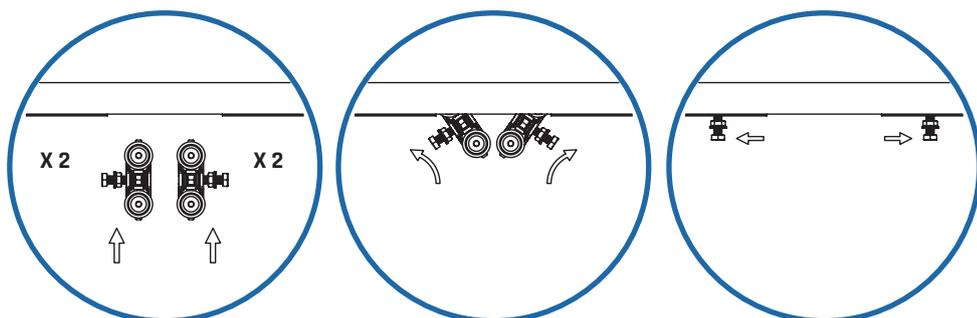


DOOR GUIDE
FOR GLASS DOORS ONLY

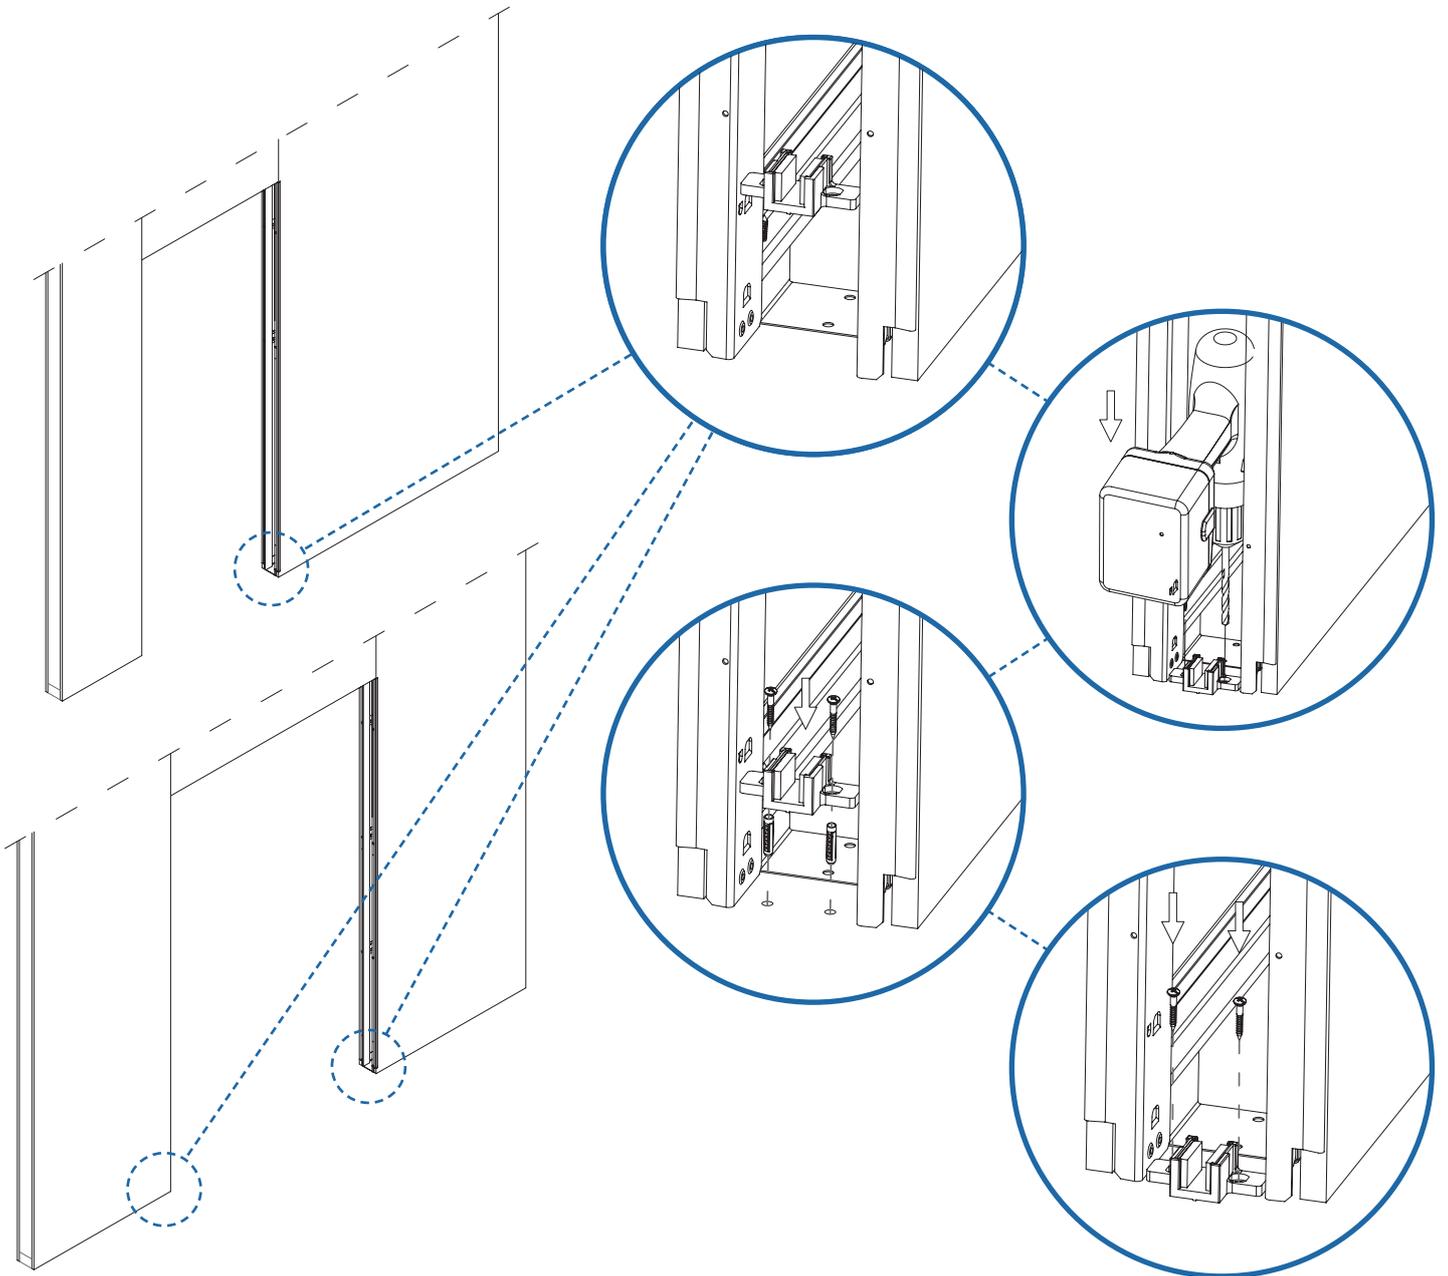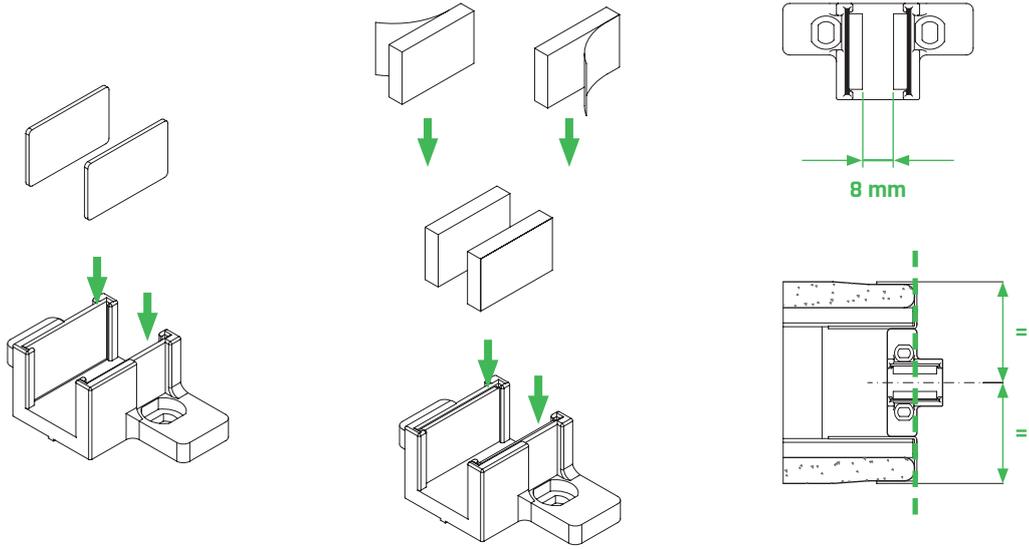



INSTALL DOOR BRACKETS

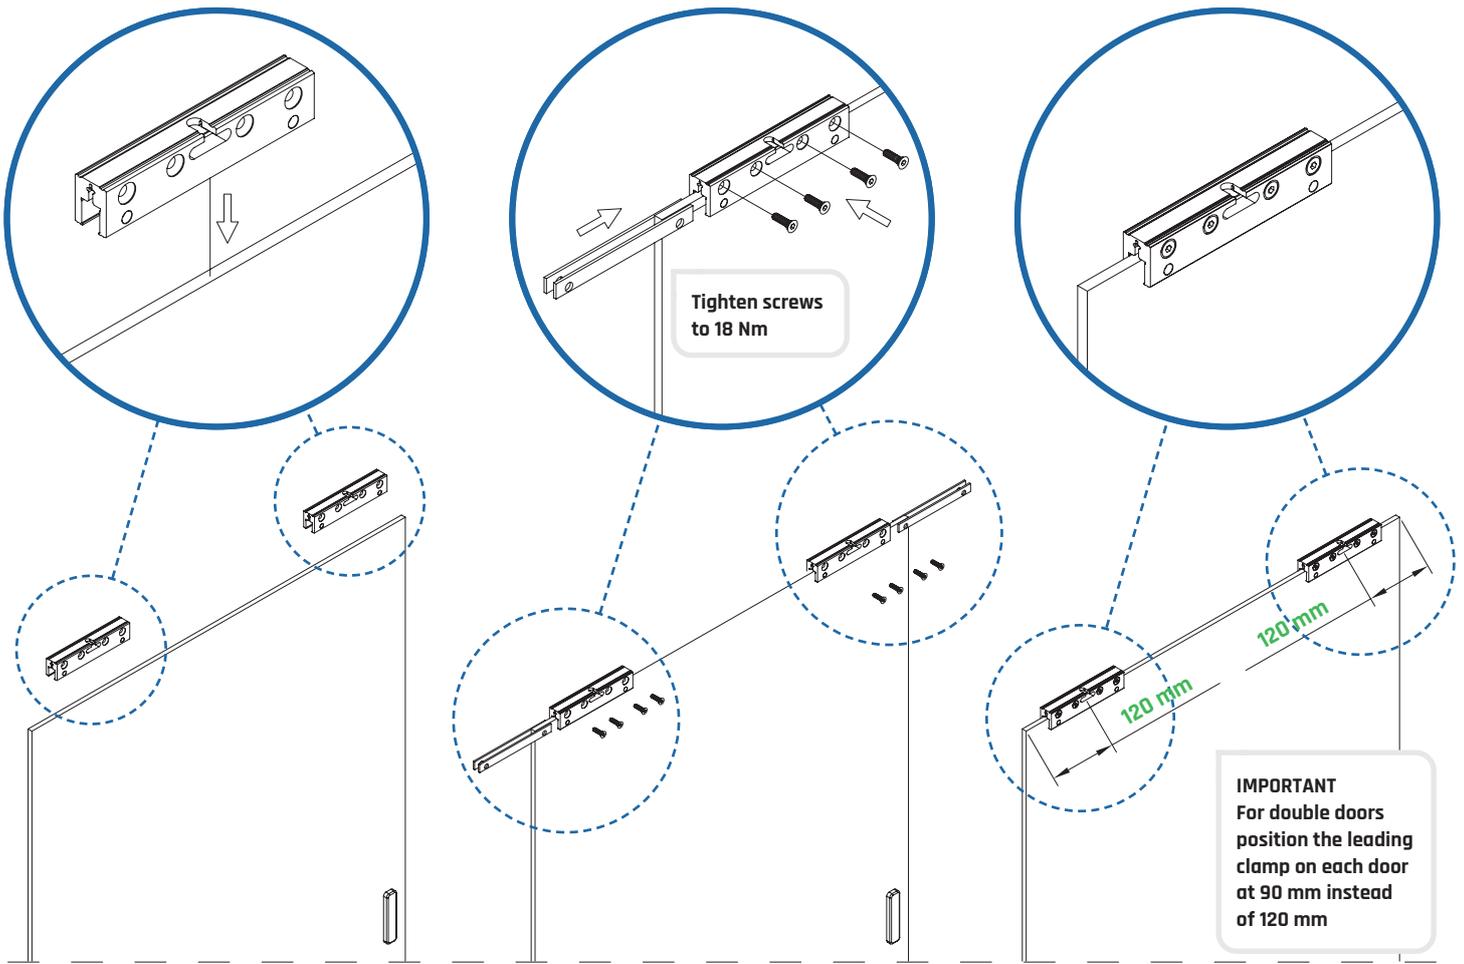

INSTALL DOOR PANEL

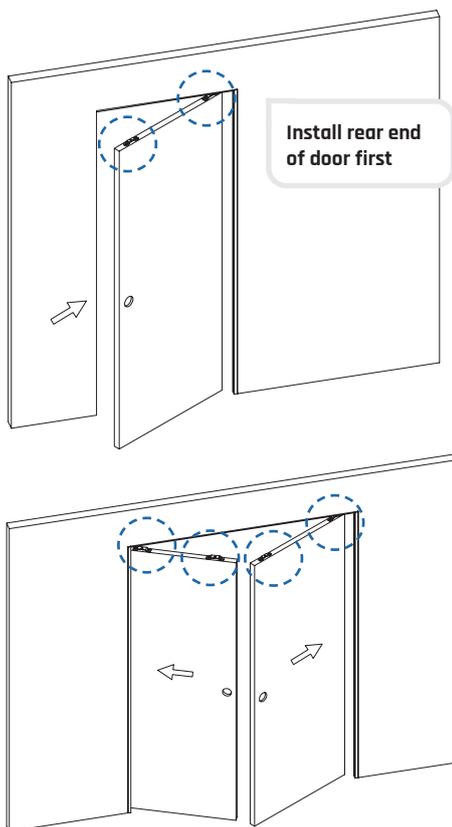


Adjust door height to be 7 mm above the floor and lock into position with by tightening lock nut

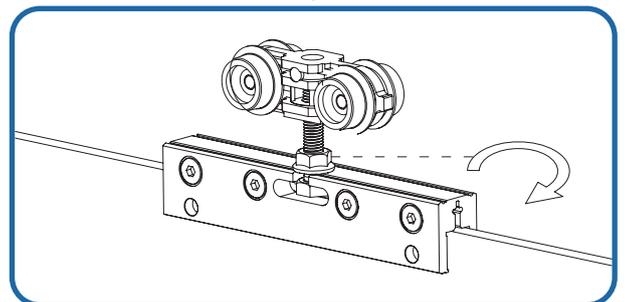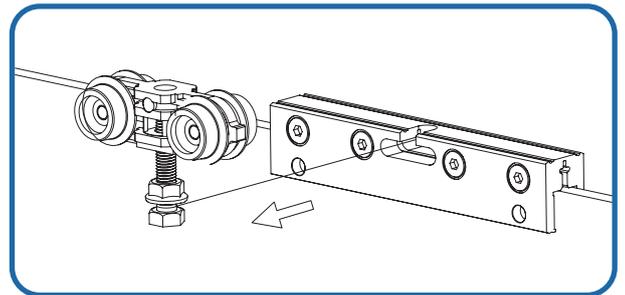


INSTALL DOOR BRAKE

SINGLE DOOR

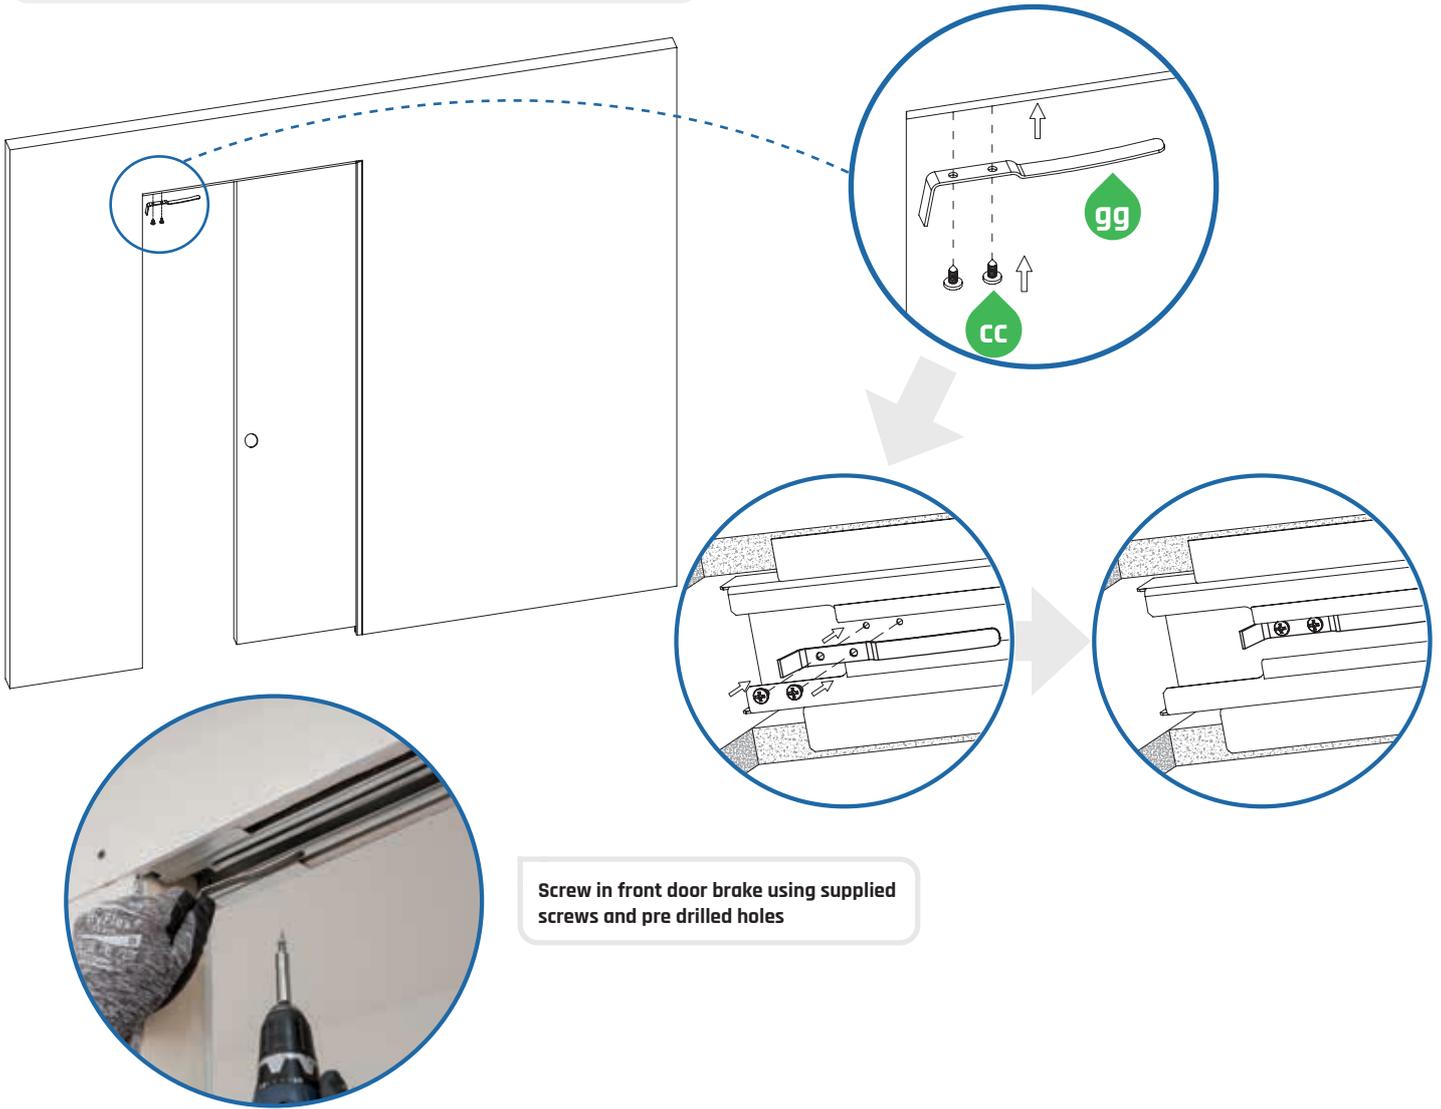


DOUBLE DOOR

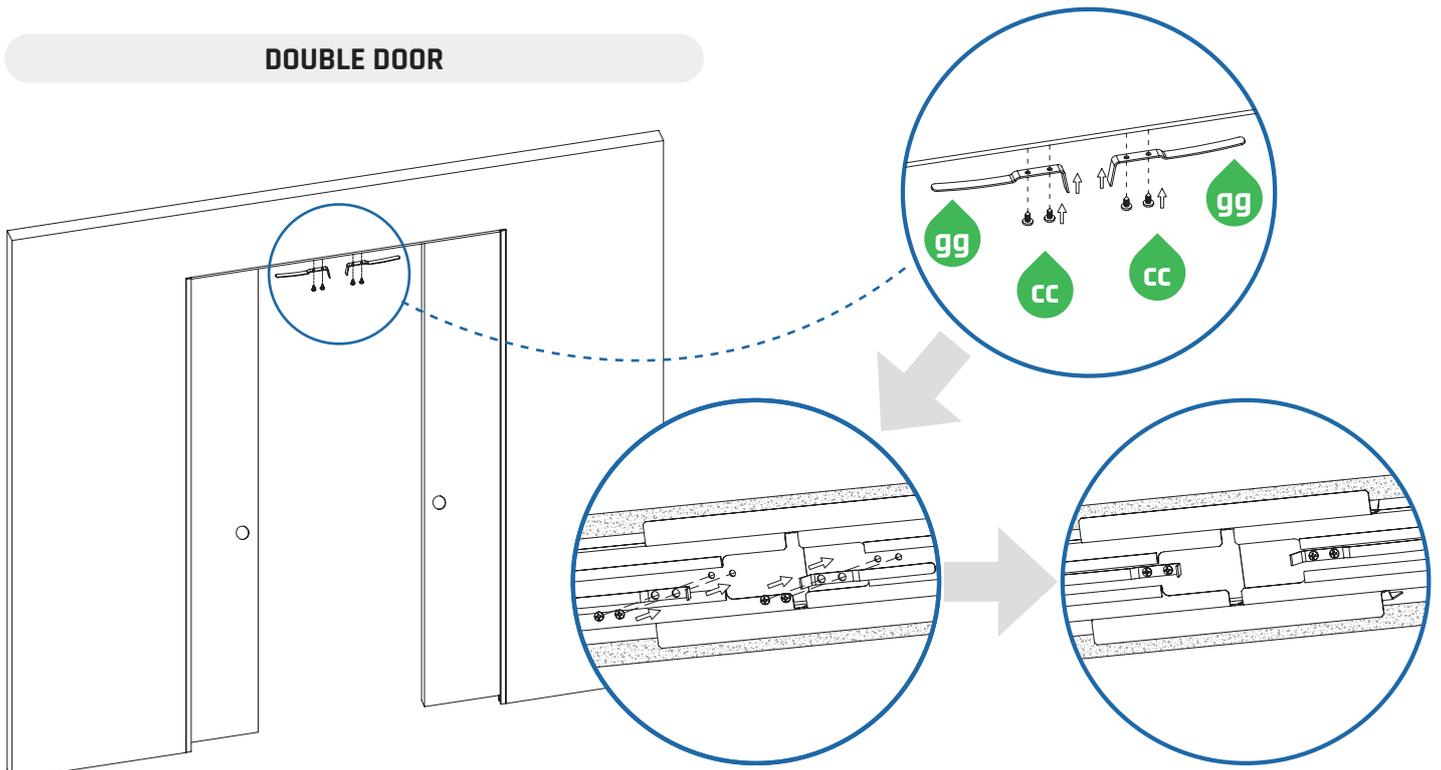


LININGS AND ARCHITRAVES


WE DO NOT SUPPLY ARCHITRAVES AS THE CHOICE IS AN INDIVIDUAL ONE
HERE IS A QUICK AND EASY SOLUTION

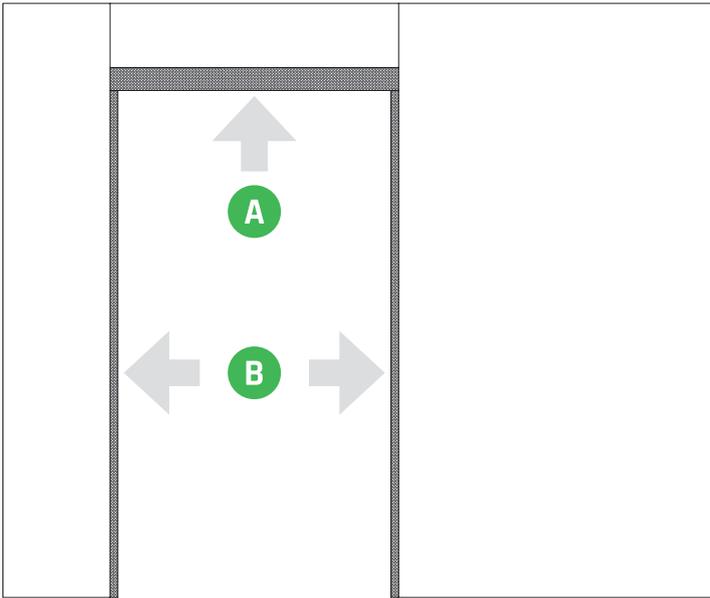

Install part A first using good quality silicon or drill and screw if preferred.
measure the distance from finished floor level to the underside of A and cut B accordingly.
secure to the frame with good quality silicon or drill and screw if preferred.

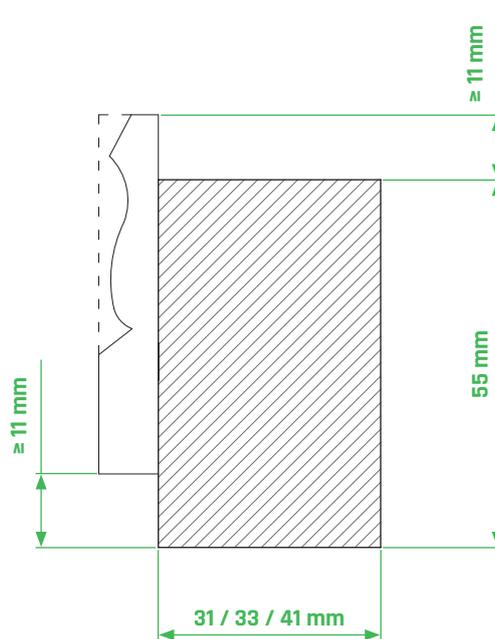

IMPORTANT
For stud 70 = 31 mm
For stud 75 = 33 mm
For stud 90 = 41 mm

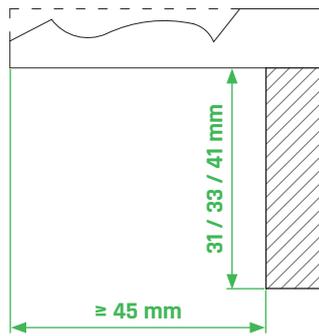


A






LININGS AND ARCHITRAVES



SINGLE DOOR

DOUBLE DOOR

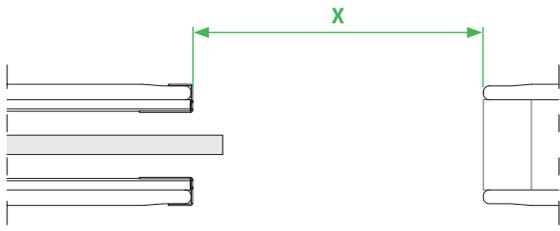


IMPORTANT
For stud 70 = 31 mm
For stud 75 = 33 mm
For stud 90 = 41 mm

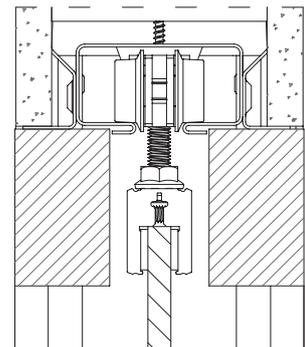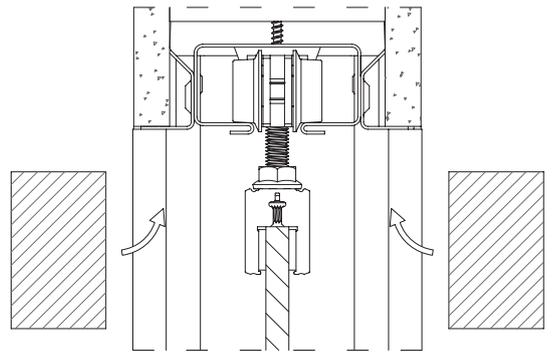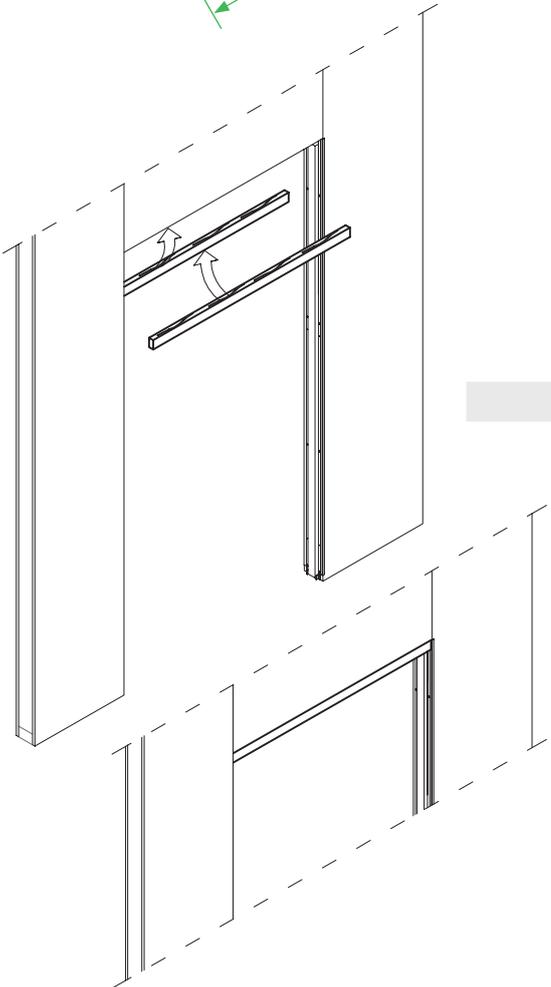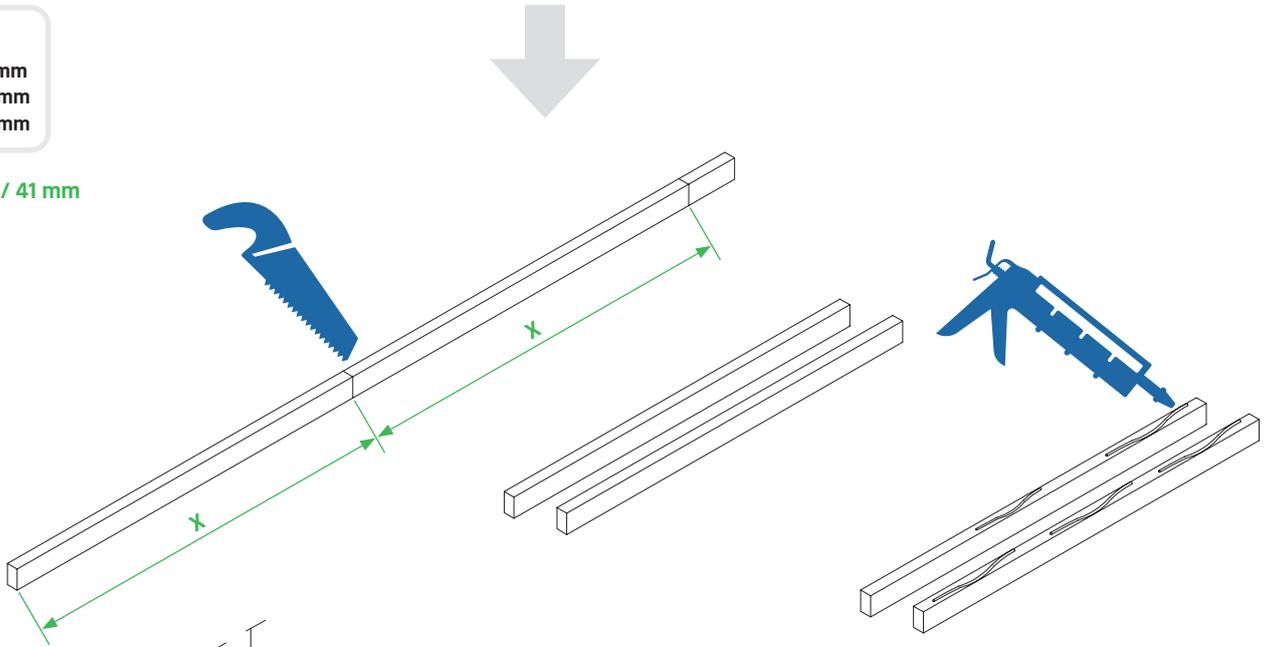
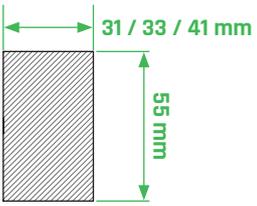


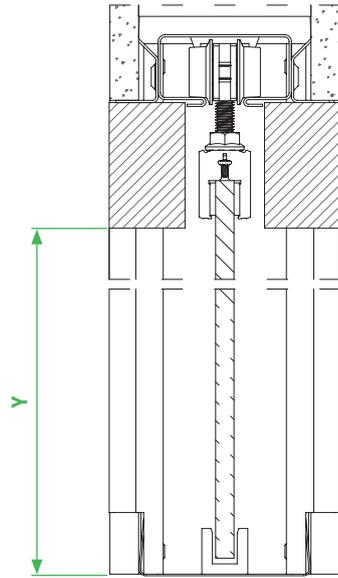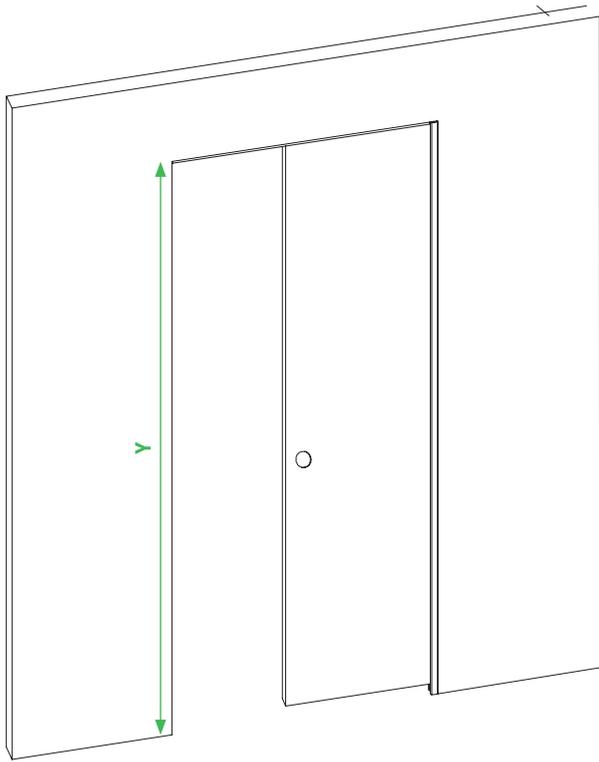


IMPORTANT
For stud 70 = 31 mm
For stud 75 = 33 mm
For stud 90 = 41 mm

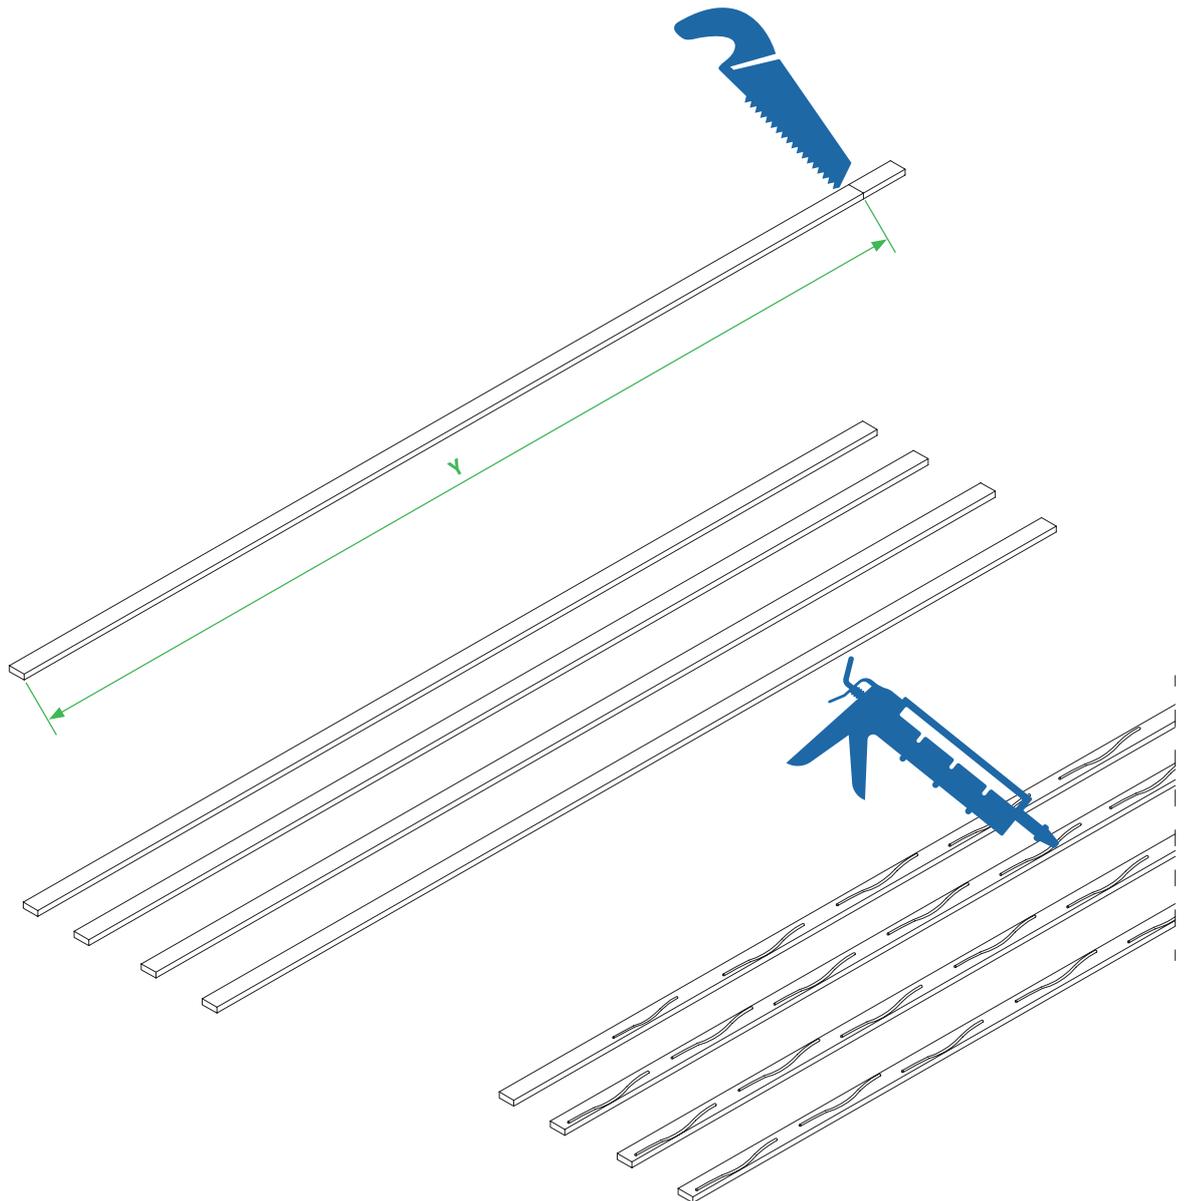


LININGS AND ARCHITRAVES

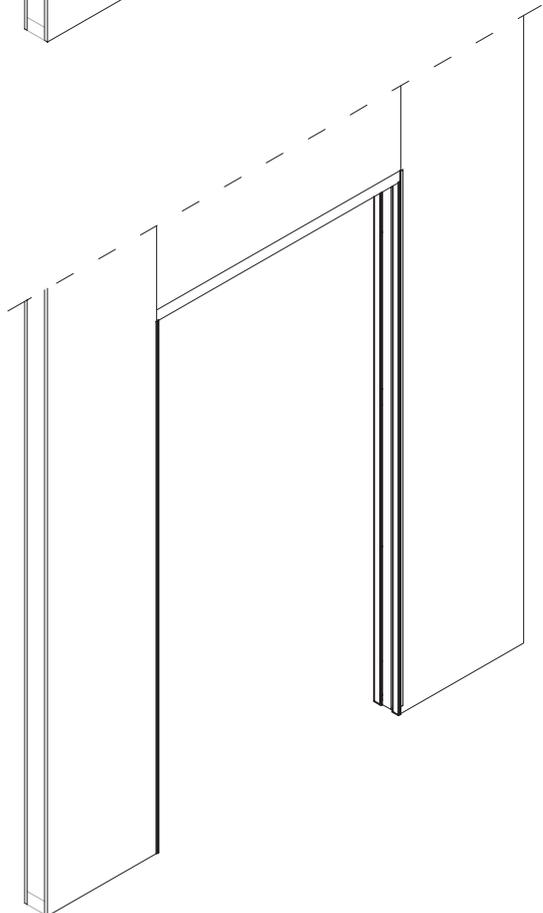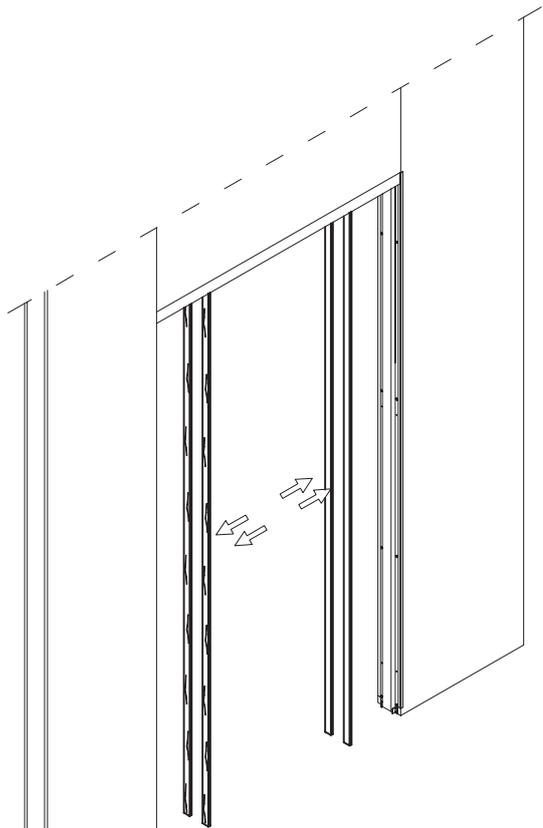


SINGLE DOOR

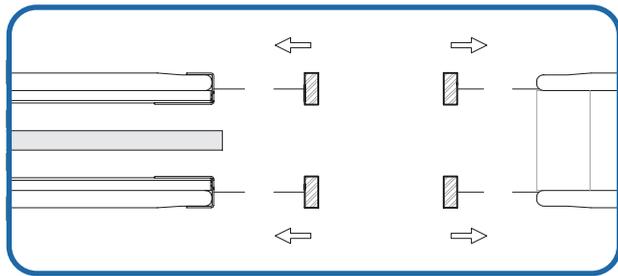

DOUBLE DOOR

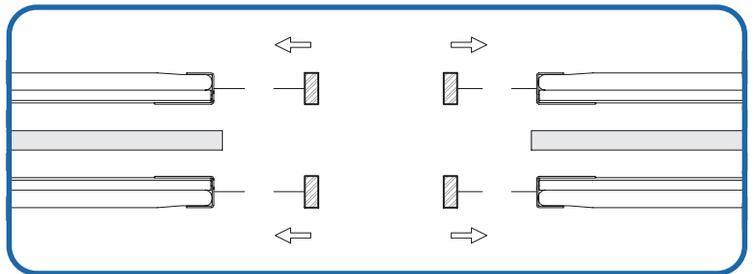


SINGLE DOOR

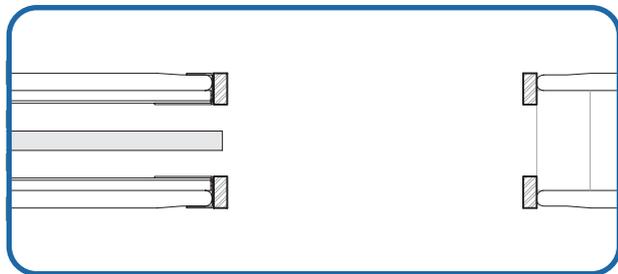


DOUBLE DOOR




LININGS AND ARCHITRAVES

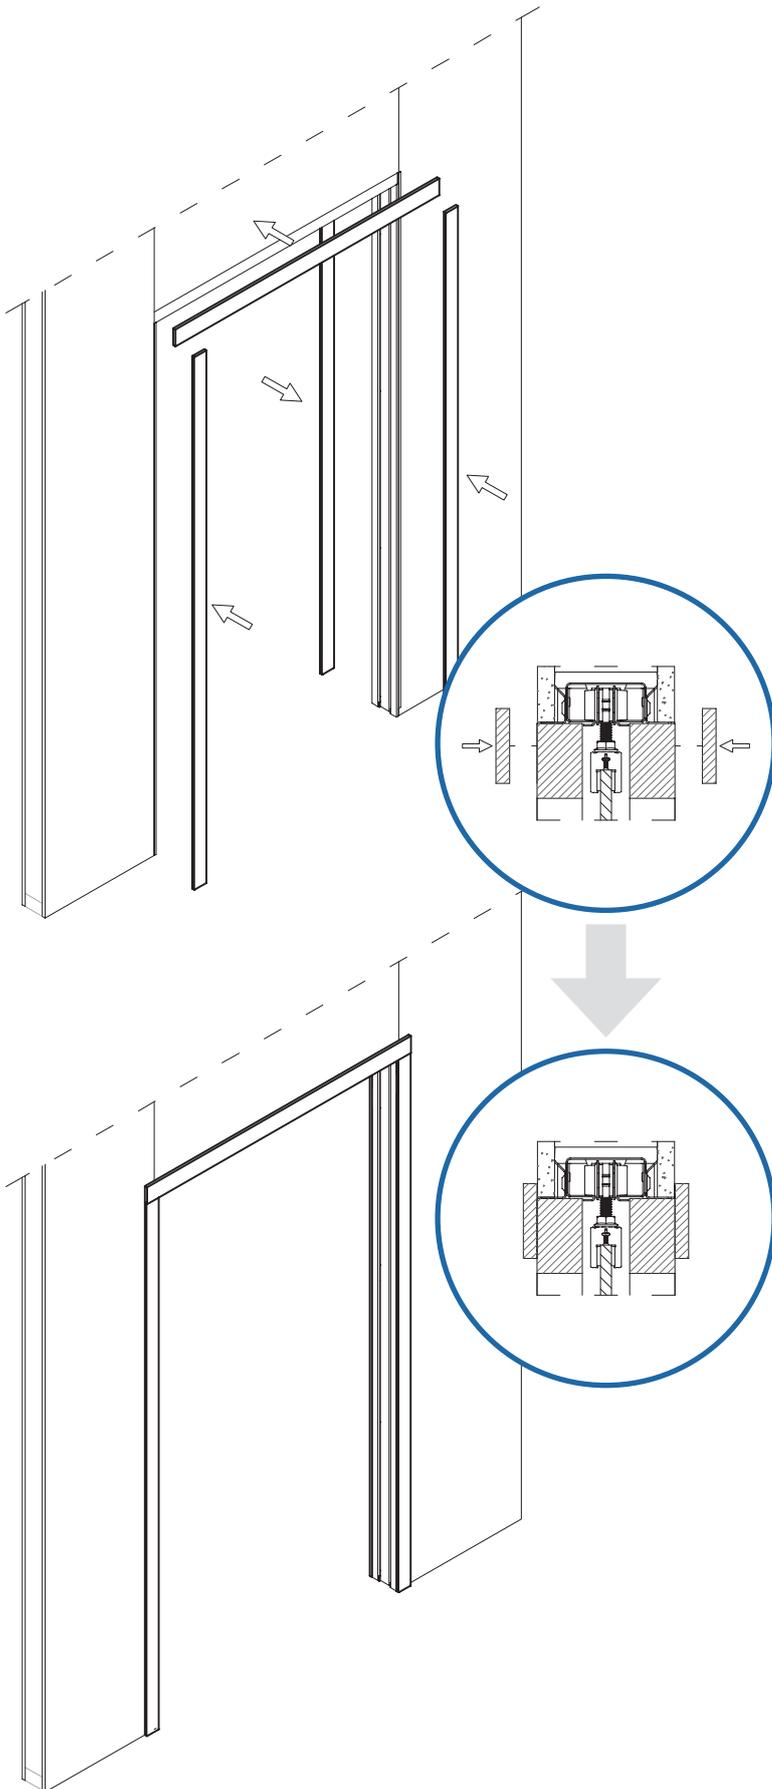


SINGLE DOOR

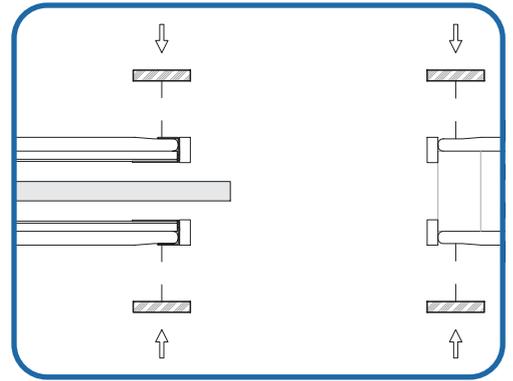


DOUBLE DOOR

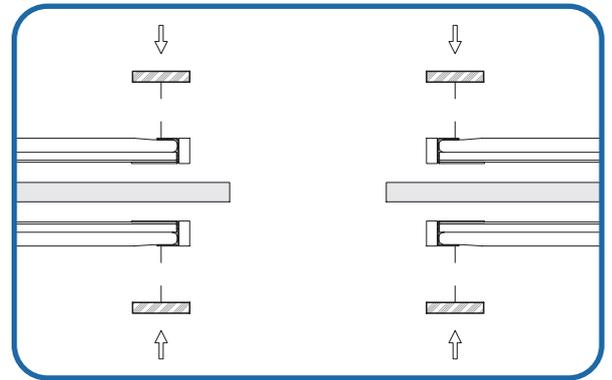

SINGLE DOOR

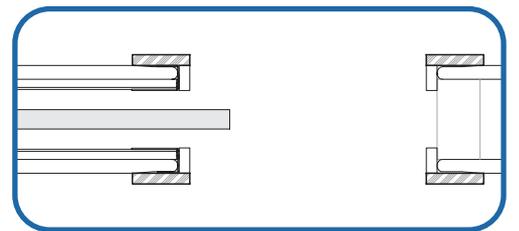

DOUBLE DOOR

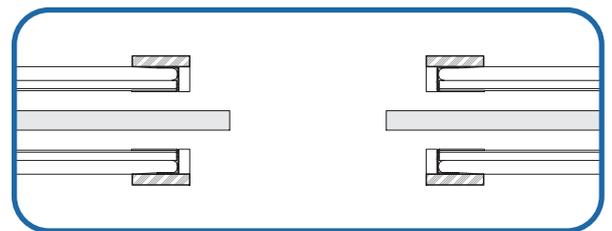

**WANT TO SEE
HOW IT'S DONE?**



**GO TO WWW.ROCKETDOORFRAMES.CO.UK
TO SEE AN INSTALLATION VIDEO**

