

How to Measure your Windows


Single/Double Hung Windows

WARNINGS

- Before installation, verify local building and fire codes are not being violated.
- This window guard is intended to protect against potential falls by children age 5 and under.
- Window guard must be installed in solid frame material or stud for proper operation.
- There should be no open spaces in the guarded area or window exceeding 4 inches.
- Failure to follow all manufacturer's installation and safety instructions may reduce the effectiveness of this product and increase the risk of accidental window falls.
- Do not install a guard horizontally in a casement/sliding window. A child could climb the guard and fall through the unguarded area of the window.
- This product is not intended for installation outside of the home/window where it will be exposed to inclement weather conditions.
- This product is not intended as a substitute for proper adult supervision.
- Guardian Angel Window Guards are not meant to protect from intruders.

Single/Double Hung Windows

Single/double hung windows consist of two separate window panels. The bottom window slides up to open. On a double hung window the top half also slides down.

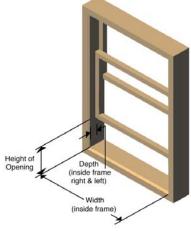

- 1) Measure the depth of the window frame where the end posts will be attached (inside right and left sides of window frame). *If the depth of the frame is less than ¾ inch, the guard will need to be installed on the outside of the window frame (on the molding or wall around the window). The end posts are ¾ inch wide and need at least that much space for installation. Please note, the end posts need to be screwed into solid material or stud for proper operation.
- 2) After determining where the guard will be attached (inside of window frame or molding/wall outside frame), measure the width of that area. This will determine the width of the guard required for your window. Refer to the <u>Guardian Angel Window Guard Model Number Chart for Single/Double Hung Windows</u>.
- **3) Measure the height of the window opening with the window fully open.** This will determine the height of the guard. The guard is available with 3, 4, and 5 bars. Refer to the

<u>Guardian Angel Window Guard Model Number Chart for Single/Double Hung Windows</u> for the maximum window openings for each size guard. We recommend using multiple guards for double hung windows since both top and bottom windows open. Therefore entire height of window must be measured. See <u>Measuring Instructions for Multiple Guards</u>. Or window stop may be used to keep top window from opening.

Guardian Angel Model Number Chart For Single/Double Hung Windows

Window Width is between:	Model Numbers	Number of Horizontal Bars & Height of End Posts	Maximum Height of Window Opening
14 – 17 inches	1417-43	3 bars (13" length of end post)	17 ¼ inches
	1417-44	4 bars (17 3/8" length of end post)	21 ½ inches
	1417-45	5 bars (21 3/4" length of end post)	26 inches
17 – 23 inches	1723-43	3 bars (13" length of end post)	17 ¼ inches
	1723-44	4 bars (17 3/8" length of end post)	21 ½ inches
	1723-45	5 bars (21 3/4" length of end post)	26 inches
23 – 35 inches	2335-43	3 bars (13" length of end post)	17 ¼ inches
	2335-44	4 bars (17 3/8" length of end post)	21 ½ inches
	2335-45	5 bars (21 3/4" length of end post)	26 inches
35 – 58 inches	3558-43	3 bars (13" length of end post)	17 ¼ inches
	3558-44	4 bars (17 3/8" length of end post)	21 ½ inches
	3558-45	5 bars (21 3/4" length of end post)	26 inches
58 – 90 inches	5890-43	3 bars (13" length of end post)	17 ¼ inches
	5890-44	4 bars (17 3/8" length of end post)	21 ½ inches
	5890-45	5 bars (21 3/4" length of end post)	26 inches
90 – 120 inches	7320-43	3 bars (13" length of end post)	17 ¼ inches
	7320-44	4 bars (17 3/8" length of end post)	21 ½ inches
	7320-45	5 bars (21 3/4" length of end post)	26 inches

Examples:

Width of window: 25 inches	Width of window: 57 inches	
Height of window opening: 15 inches	Height of window opening: 26 inches	
Model # required: 2335-43	Model # required: 3558-45	

Important Notes:

- Follow measuring instructions prior to picking a model.
- Cover the entire window opening. There shouldn't be any open spaces exceeding 4 inches when the window is completely open.
- If the window opening exceeds the "Maximum Height of Window Opening" noted above, more than one guard will be required to cover the window (refer to the section on using multiple guards).
- If window width falls exactly on the edge of a width range, order the model within the larger range. Example #1: Width equals 23 inches (order model beginning with 2335)

Example #2: Width equals 17 inches (order model beginning with 1723)

Not sure what model is right for you? Enter your window dimensions into our easy to use model number finder, located on our web site at www.angelguards.com/Choose_the_Right_Model.htm.

Measuring Instructions for Multiple Guards

Use the chart below to determine the correct number of bars and the quantity required to cover openings that exceed the maximum openings noted on the <u>Guardian Angel Window Guard Model Number Chart</u>. You will need to use this chart in conjunction with the <u>Guardian Angel Window Guard Model Number Chart</u>. Below are some examples.

Guardian Angel Window Guard Multiple Guards Chart

Window Opening (inches)	3 bars	4 bars	5 bars
13 to 17-1/4	1		
17-1/4 to 21-5/8		1	
21-5/8 to 26			1
26 to 30-1/4	2		
30-1/4 to 34-5/8	1	1	
34-5/8 to 39		2	
39 to 43-3/8		1	1
43-3/8 to 47-3/4			2
47-3/4 to 52	1	2	
52 to 56-3/8		3	
56-3/8 to 60-3/4		2	1
60-3/4 to 65-1/8		1	2
65-1/8 to 69-1/2			3
69-1/2 to 73-3/4		4	
73-3/4 to 78-1/8		3	1
78-1/8 to 82-1/2		2	2
82-1/2 to 86-7/8		1	3
86-7/8 to 91-1/4			4

Important Notes:

- Follow measuring instructions prior to picking a model.
- Be sure to cover the entire window opening. There shouldn't be any open spaces exceeding 4 inches when the window is completely open.

Examples

Example #1, single/double hung window	Example #2, single/double hung window	
Width of window: 25 inches	Width of window: 57 inches	
Height of window opening: 15 inches	Height of window opening: 42 inches	
Model # required: 2335-43	Model # required: one 3558-44 & one 3558-45	
(one 3 bar guard within the 23 – 35 inch width	(one 4 bar & one 5 bar guard within the 35 – 58	
range)	inch width range, two guards total)	
Example #3, sliding/casement window	Example #4, sliding/casement window	
Height of window: 60 inches	Height of window: 35 inches	
Width of window opening: 56 inches	Width of window opening: 42 inches	
Model # required: 5890-44	Model # required: one 3558-44 & one 3558-45	
(three 4 bar guards within the 58 – 90 inch	(one 4 bar & one 5 bar guard within the 35 – 58	
height range)	inch height range, two guards total)	