


# GLANCE QUICK START GUIDE




Download the Glance app from the Apple App Store or Google Play Store.  
Keyword "glance wearable"

A) For first time users -


1) Install the Glance sensor from under the strap as pictured below:

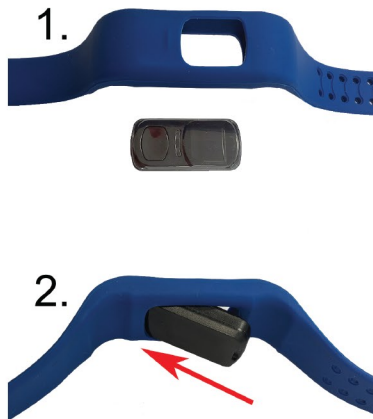


2) Open the Glance app on your smart device, and Press "Sign Up" at the welcome screen.

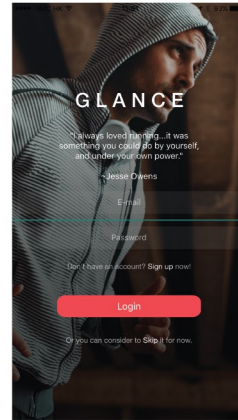

2) Input your e-mail address and password for account creation, then press "Next"

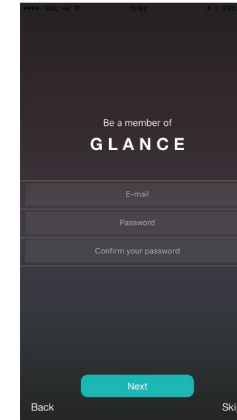


3) Input your personal profile. Filling in the correct info will allow Glance to give you the best projection of your activity and run. Then press "Next"

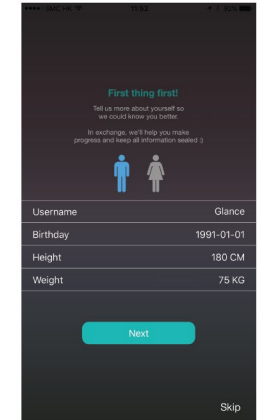

B) Connection

1) When the pairing screen appears, press the button on Glance once to connect.

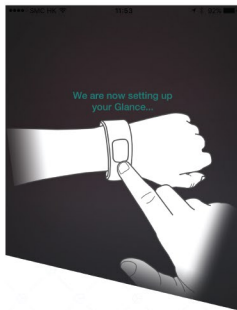

Searching...

Skip


2) Follow the on-screen prompts. Successful connection will be indicated by a short vibration on Glance.



Linking Glance...

Skip

3) Glance is ready to use!

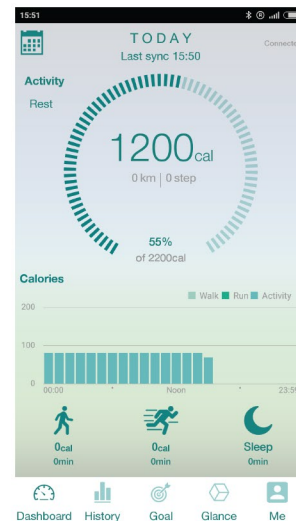

## Frequently Asked Questions:

**1) Where can I find the GLANCE App?**

When searching for the GLANCE app, please use the keyword "Glance wearable" on Apple App Store and Google Play Store on Android devices.

**2) I searched and still cannot find the app.**

Please make sure your device firmware meets the requirements: iOS 9.0 or above for Apple, and Android OS 4.4 or above for Android devices.

**3) I cannot install the Glance app.**

Some utility based applications may limit users to install apps for security reasons. Please check if those apps are blocking your install.

**4) My phone cannot detect my Glance.**

Please check if your bluetooth connection for your smartphone/tablet is ON, and Glance is fully charged before using. Press the button on Glance to see if device is active.

For more information, please visit our website: [www.fitglance.com](http://www.fitglance.com)