



DIMENSIONS AND INSTALLATION SPECIFICATIONS

SaniPod™

Pod™ Classic manual

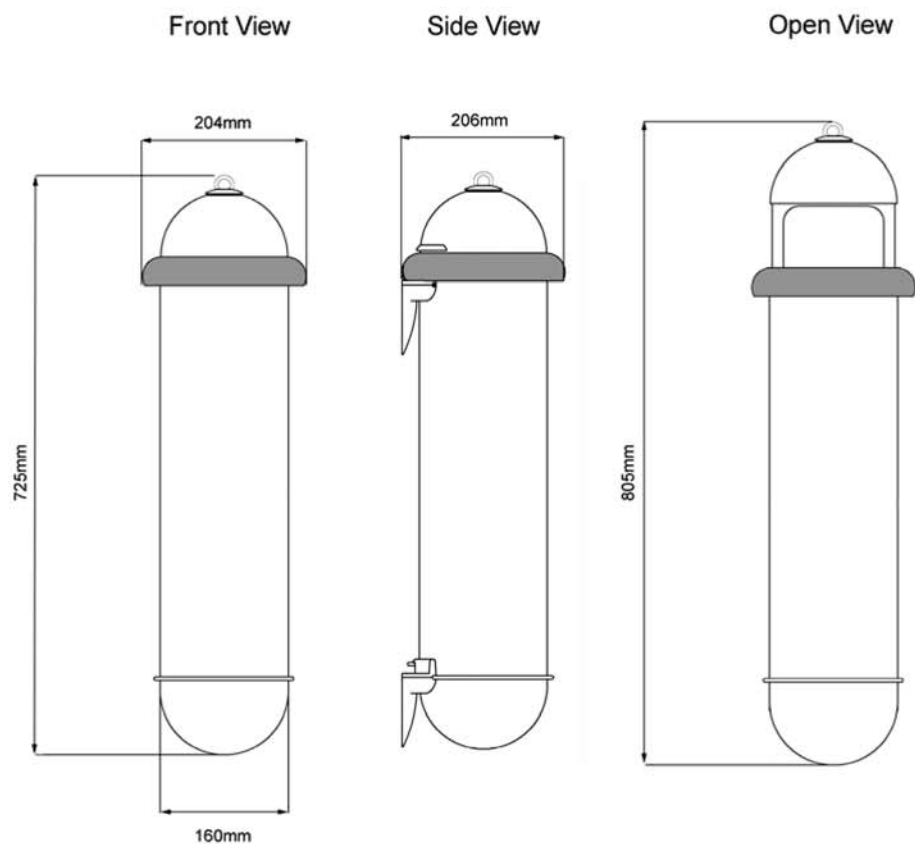

Pod™ Classic auto

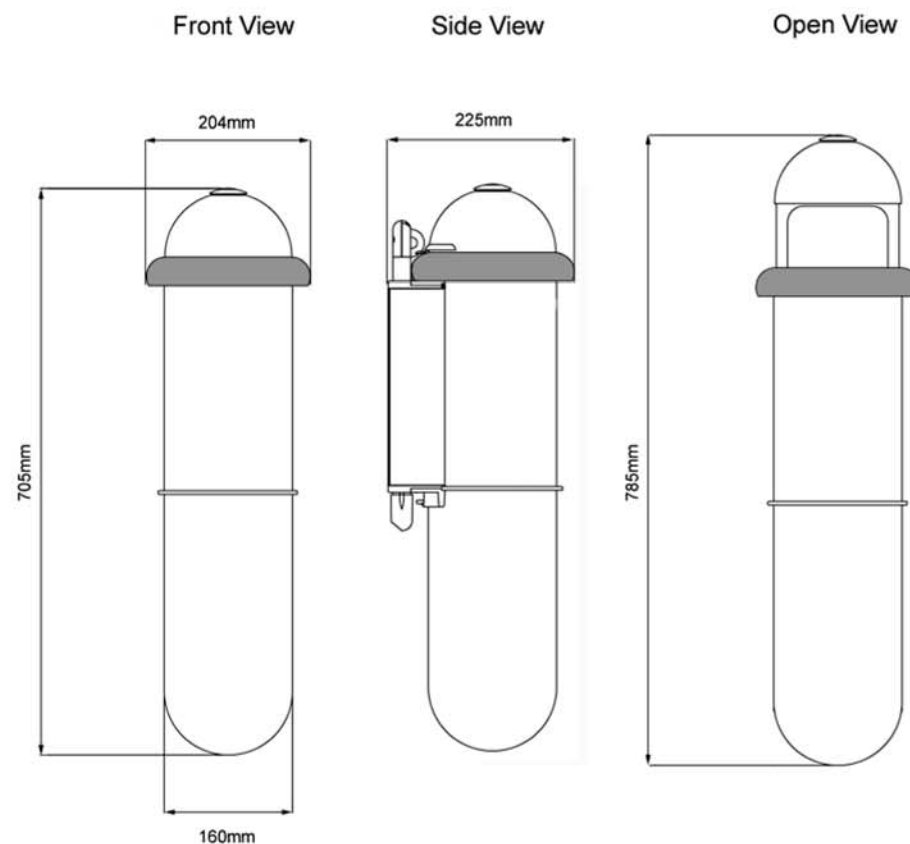

Information

For more information or orders, visit our website www.sanipod.com or contact us at: enquiries@sanipod.com

INSTALLATION INFORMATION




SaniPod™

SaniPod manual

SaniPod auto

Recommended specifications

Recommended specifications

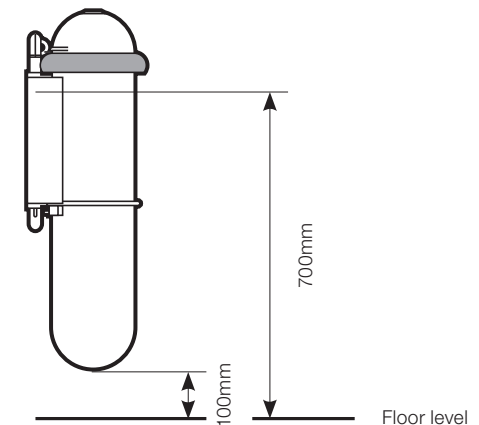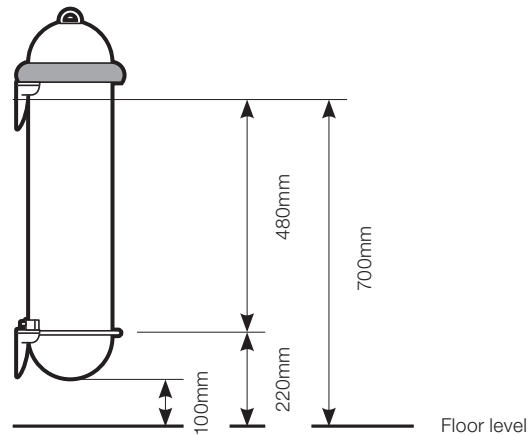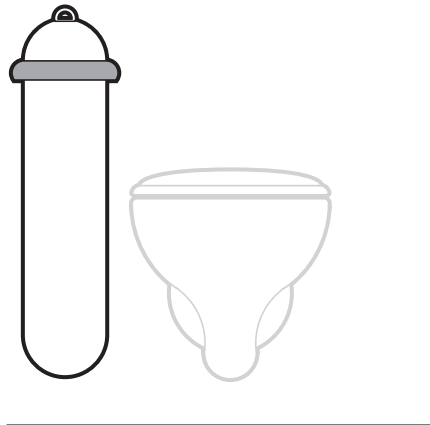

SaniPod

Important:

- The recommended location for the SaniPod is the back wall of cubicle on the left hand side of the toilet as illustrated.
- Check the widest part of the SaniPod (grey ring) fits to ensure there is room for the toilet seat to be lifted and lowered.
- The SaniPod should be elevated 100mm above ground to allow good floor clearance.
- Top bracket/sensor box wall plate should be positioned at a minimum height of approximately 700mm above floor for best results. Secure into a wall stud. Use wall anchors if a wall stud cannot be located.