

# Service Memo


**To:** Service Personnel

**Re:** Replacing the rubber door gasket.

---

### ***Removal of old door gasket***

With your fingers or a pair of pliers, pull door gasket out of groove, all the way around the door. Once it starts it will come out easily.

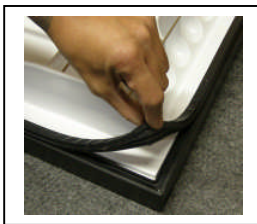


### ***Installing new door gasket in door frame***

Lay gasket on top of the door frame. The arrow profile on the new gasket will fit into groove on the door extrusion. Press down with your thumbs to get it started; once it the arrow profile on the rubber gasket has started, gently hammer the rubber gasket to force the profile into the door frame.



Test to see if the door gasket is installed in the groove, gently pulling up on the gasket all around the door frame. The gasket is a bellows and will move up on the top and middle but stay connected to the door frame if installed correctly. To finish the gasket install, use a putty knife with a dull end and push the arrow profile into the groove in the four corners of the door frame. When done gently bend the corner gasket up and look under to make sure the arrow profile is in the door frame groove.

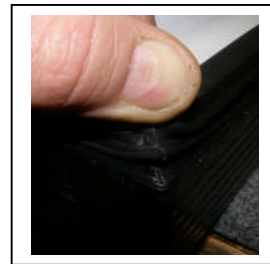

***For more information contact Nova Kool @604-523-6515 pacific standard time***