
Merlin Extralight XLR

SIZE:	Seat Tube cc / co	Effective Top Tube	Head Tube Length	Head Tube / Seat Tube Angle	Chain Stay Length	BB Drop
44cm	43 / 47 cm	51.5 cm	95 mm	71.0 / 75.0	407 mm	70 mm
46cm	43 / 47 cm	52.0 cm	100 mm	71.5 / 74.5	407 mm	70 mm
48cm	43 / 47 cm	52.5 cm	110 mm	72.0 / 74.0	407 mm	70 mm
50cm	45 / 49 cm	53.0 cm	120 mm	72.0 / 74.0	407 mm	70 mm
52cm	45 / 49 cm	54.0 cm	130 mm	72.0 / 73.5	408 mm	70 mm
54cm	45 / 49 cm	55.0 cm	140 mm	72.5 / 73.5	408 mm	70 mm
56cm	48 / 52 cm	57.0 cm	150 mm	73.0 / 73.0	410 mm	70 mm
58cm	52 / 56 cm	58.5 cm	170 mm	73.5 / 73.0	410 mm	68 mm
60cm	54 / 58 cm	59.5 cm	190 mm	74.0 / 72.5	412 mm	68 mm
62cm	56 / 60 cm	61.5 cm	210 mm	74.0 / 72.5	412 mm	67 mm
64cm	58 / 62 cm	62.0 cm	220 mm	74.0 / 72.0	415 mm	67 mm

Body Measurements Needed for correct sizing:

Measurements should be taken in stocking feet and with unobstructive clothing. We recommend you take each measurement 2-3 times and average your results for accuracy.

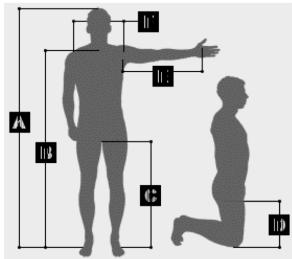

<u> </u>
AGE:
GENDER:
Weight:
Height (A)
Stand in stocking feet on a hard floor, with your back flat against a wall or door. Your feet should be about 6" (15cm) apart. Measure from the floor to the top of your head.
TRUE INSEAM (C)
TRUE INSEAM (C)
TORSO LENGTH (B)
Holding your position from the inseam measurement, with the book in place, measure from the top of the book to you sternal notch. Your sternal notch is the bony depression at the base of the neck.
UPPER LEG LENGTH (D)
Kneel, facing the wall. Place the book between your legs again with the binding facing up and the edge flat against the wall in front of you, similar to when you measured your true inseam. Have your assistant measure from the floor to the top of the book.

