



G550 PRESSURIZATION SYSTEM

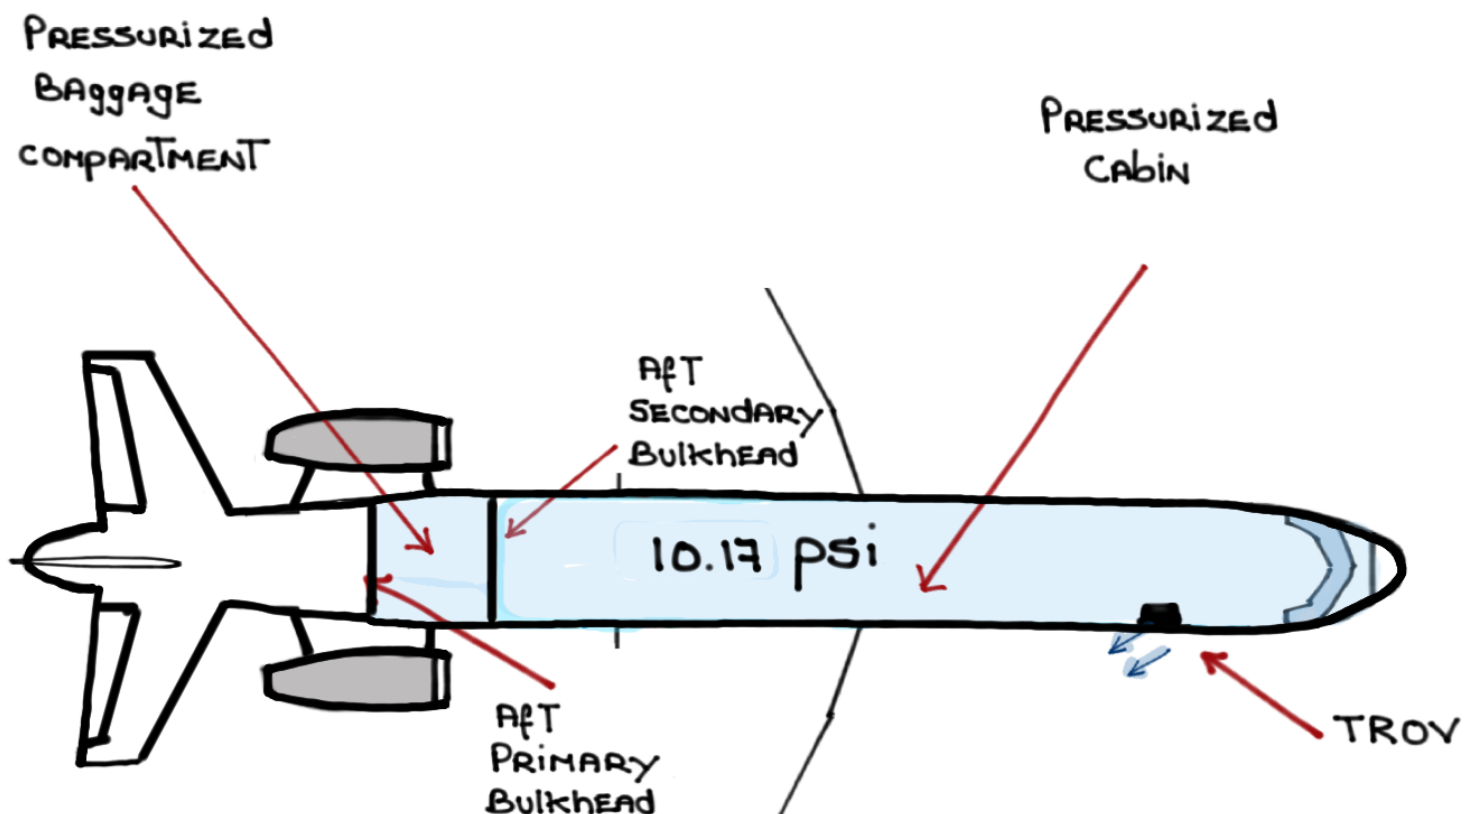


For study purposes only

The Pressurization System controls cabin pressure by modulating the Thrust Recovery Outflow Valve (TROV) in order to achieve and maintain an optimum cabin pressure

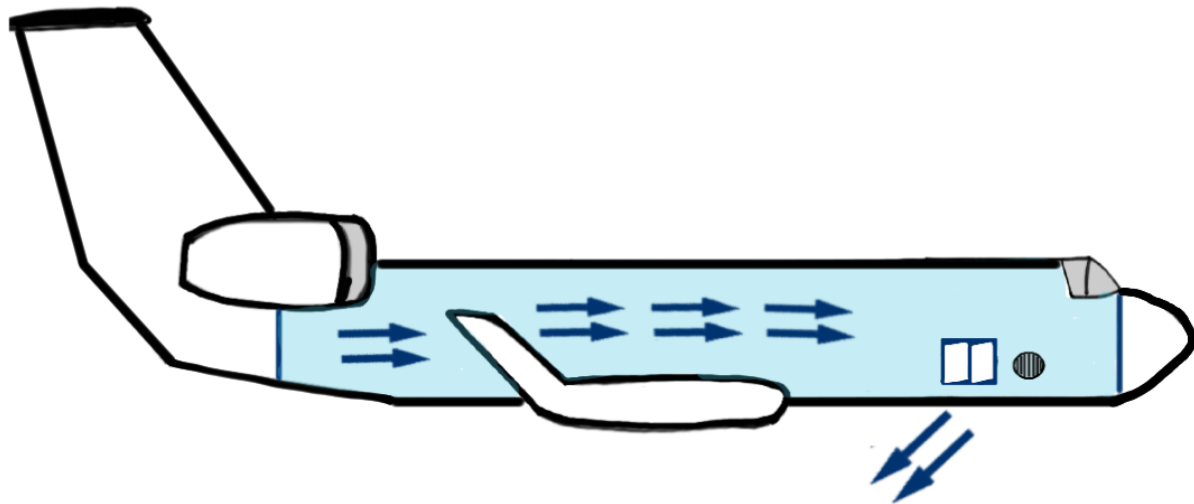

CABIN AIR EXITING VESSEL VIA:

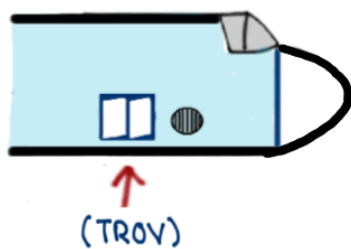


THRUST RECOVERY
OUTFLOW VALVE
(TROV)




=


Optimum Cabin Pressure

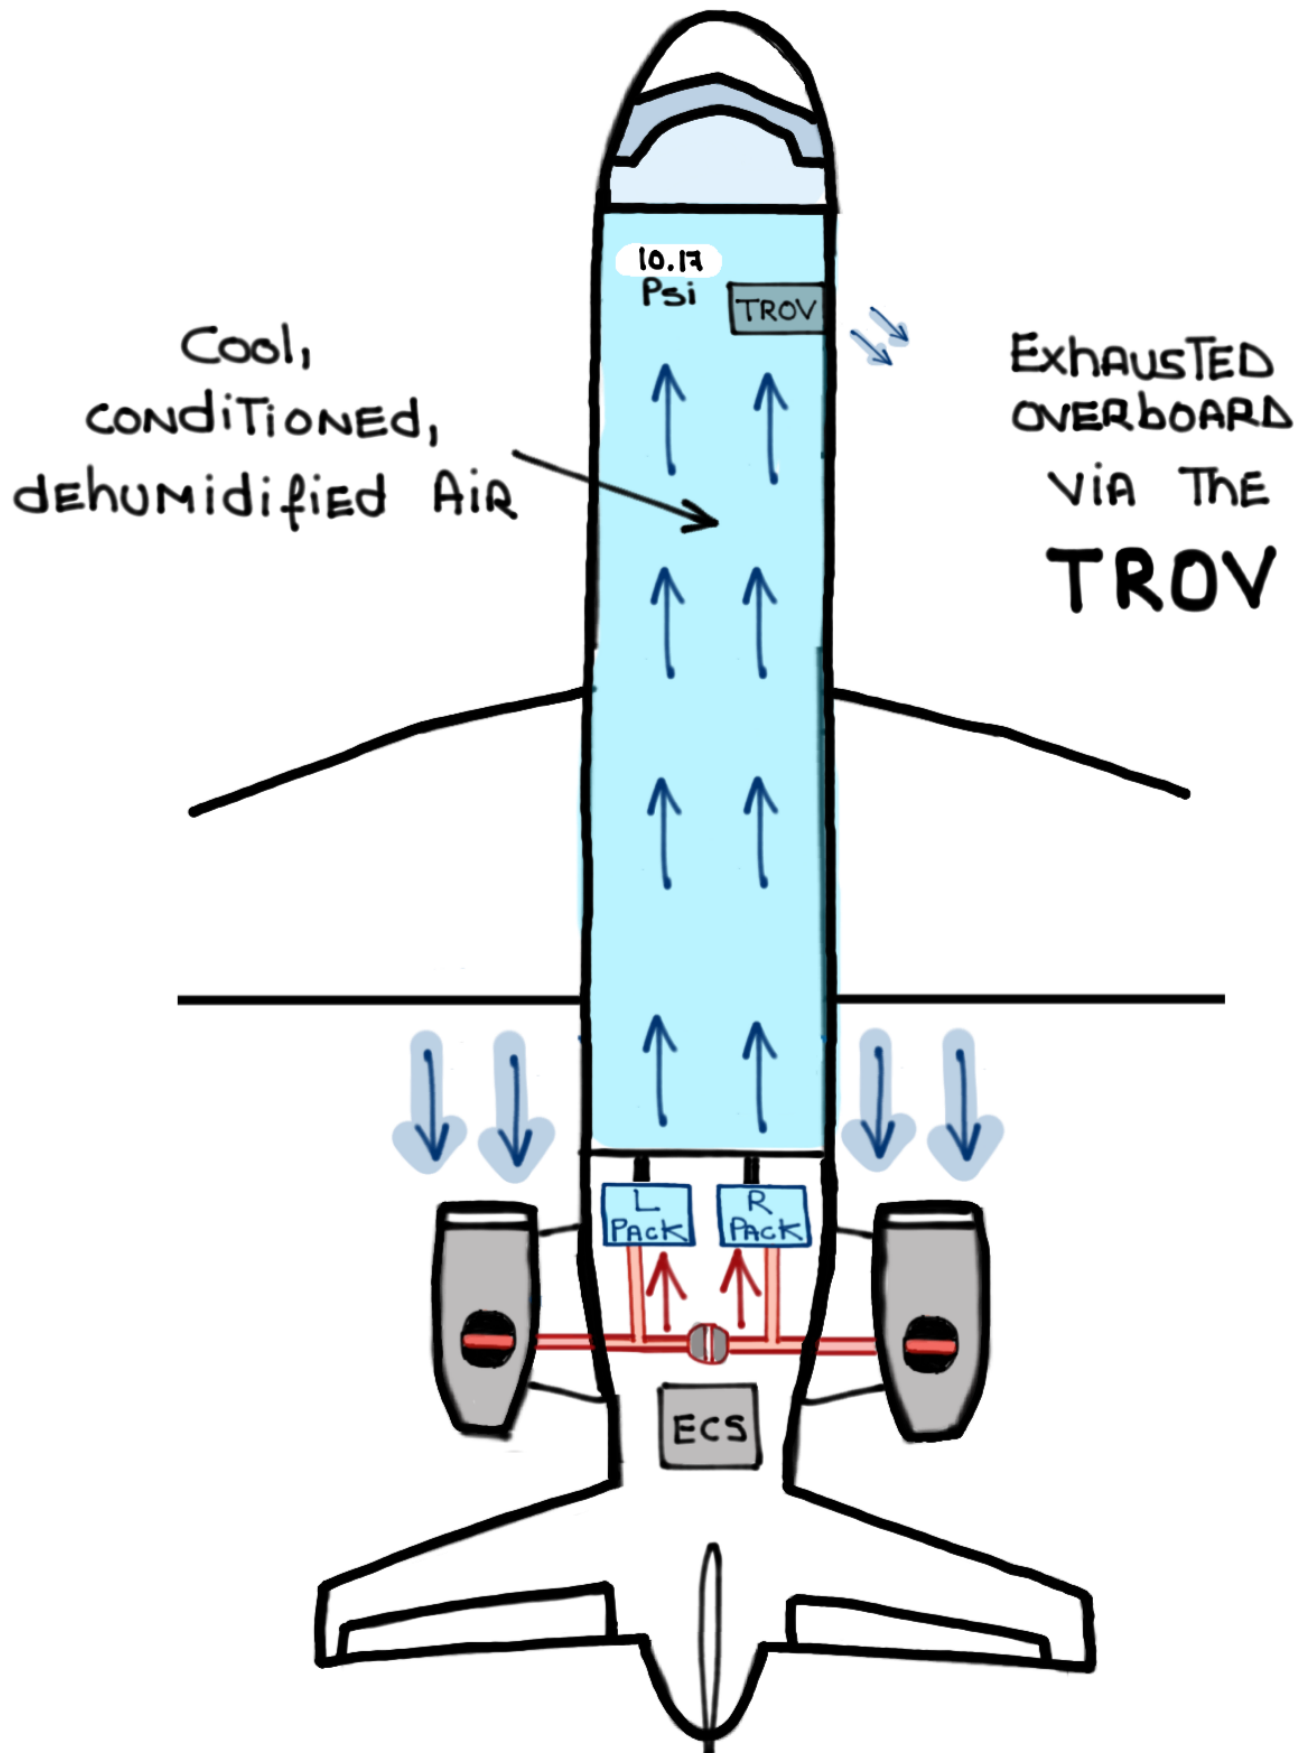

THREE (3)
OPERATIONAL
MODES

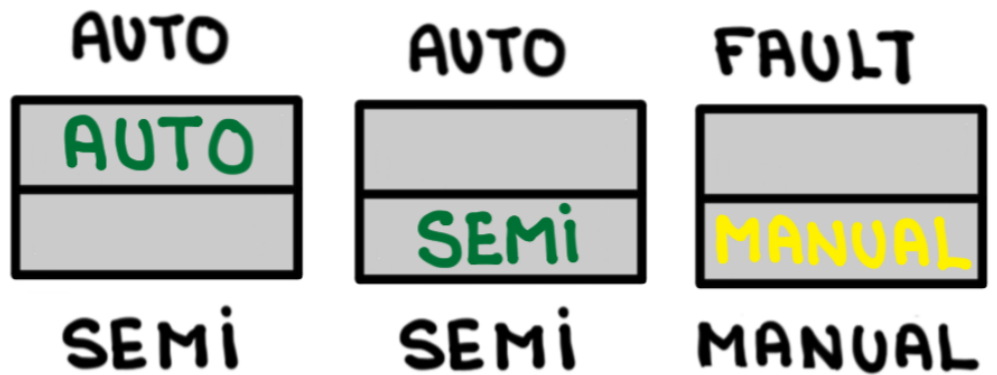


TWO (2)
PRESSURIZATION
MODES

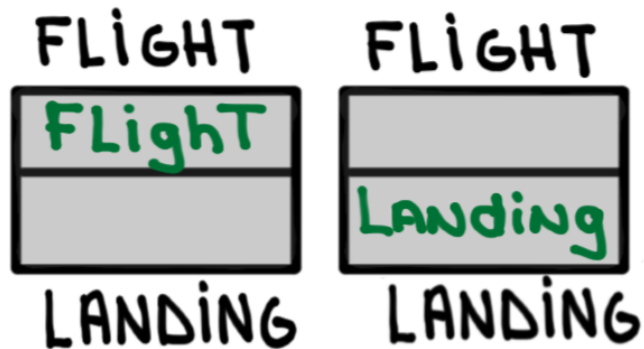

PSI Limits

NORMAL

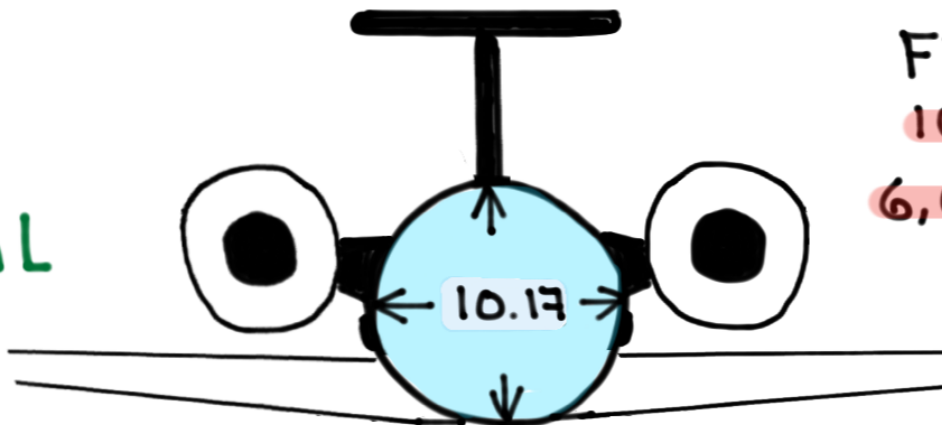


FL510
10.17 psi
6,000' CABIN

C

Cabin Differential - 10.28

C

MAX 1

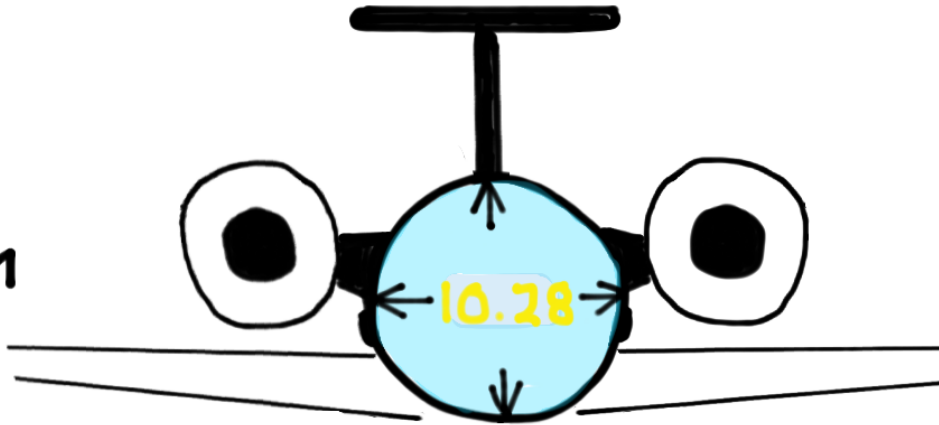


W


Cabin Differential - 10.48

W


MAX 2

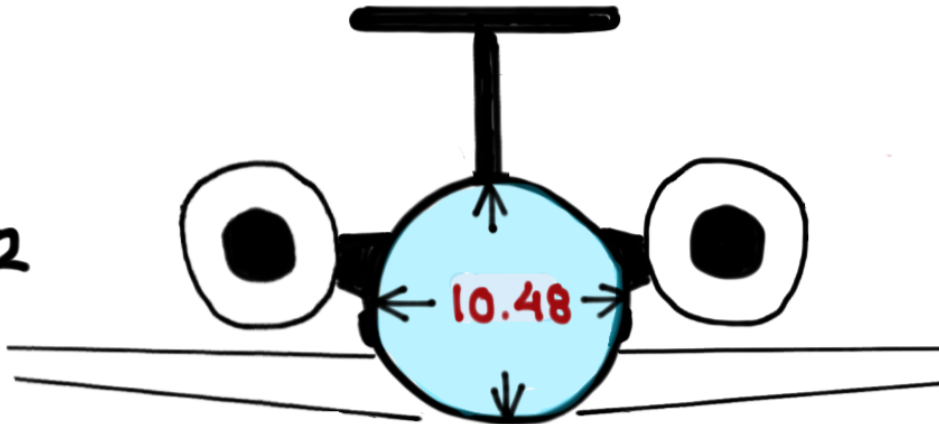


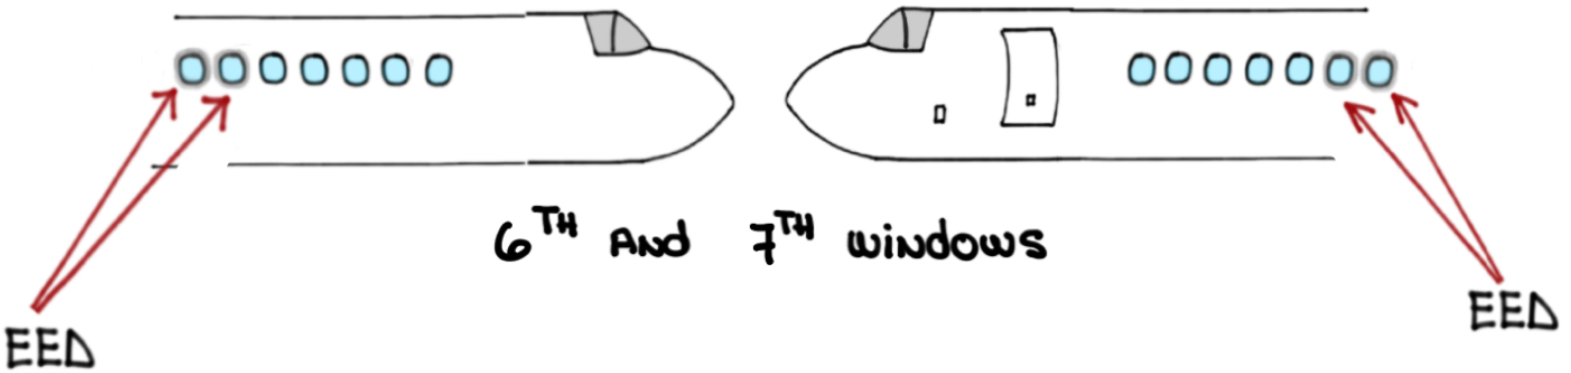
MAX 3

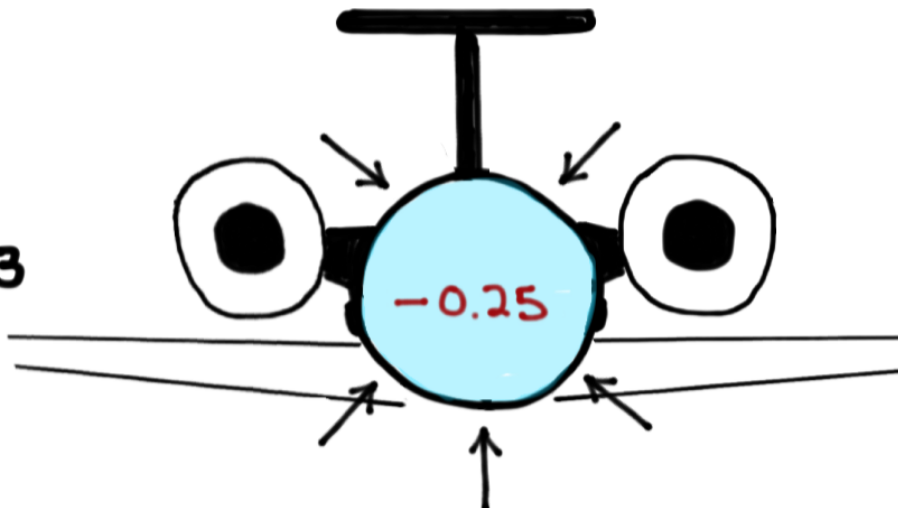


MAX 4

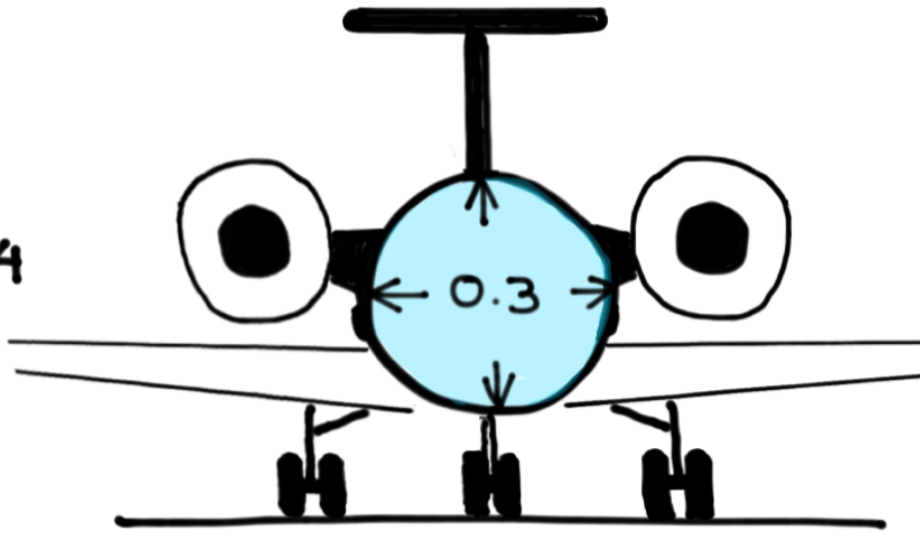

MAX  psi during TAXI, TAKEOFF AND LANDING SO AS TO ALLOW OPENING OF EMERGENCY EXIT DOORS (EED) AND MAIN ENTRANCE DOOR (MED)




6TH AND 7TH WINDOWS

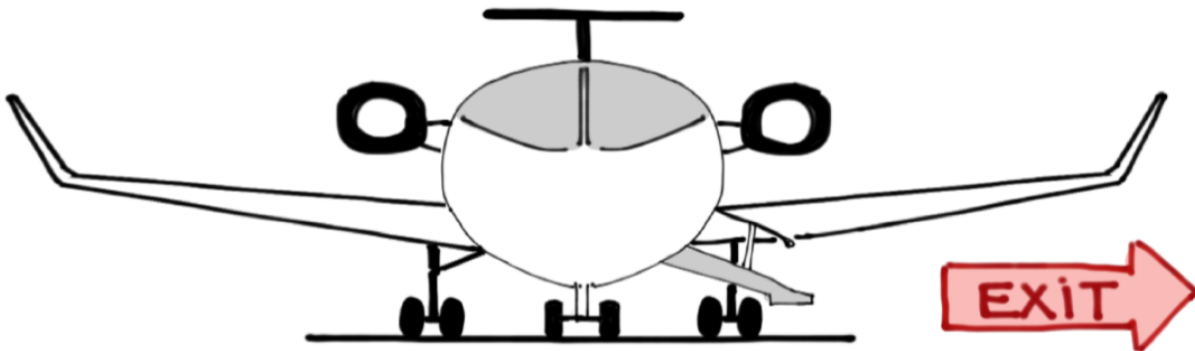

CABIN PRESSURE CONTROLLER (CPC)

- BRAINS of THE PRESSURIZATION SYSTEM
- MICROPROCESSOR located in THE REER which MAKES all logical decisions
- RECEIVES INPUT FROM:

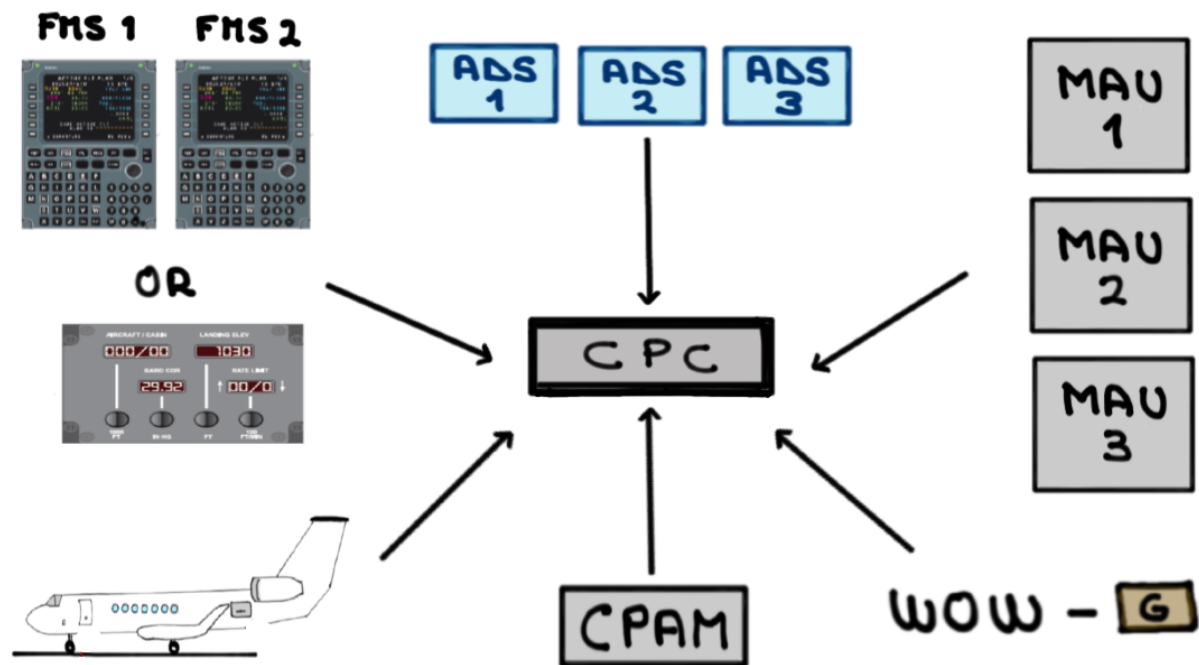

- Two (2) channels in **AUTO** AND **SEMI** MODES
- ONE (1) channel ACTIVE AT THE TIME while THE OTHER channel REMAINS ON STANDBY

CPC

- 1 2 channels change by:

- REMOVING POWER

MAIN BATTERIES





Left




Right

- Cycling MAIN OR baggage door

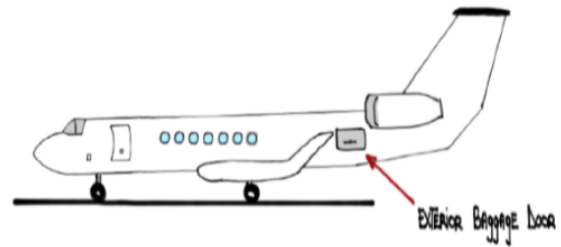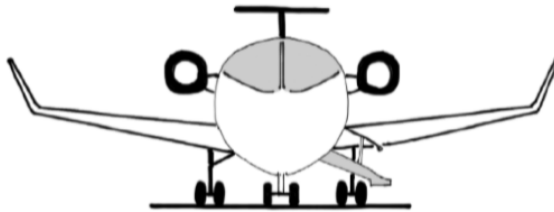

- SELECTING/DESELECTING


FAULT



MODE


MANUAL

- LOCATED AT THE BOTTOM OF THE REER

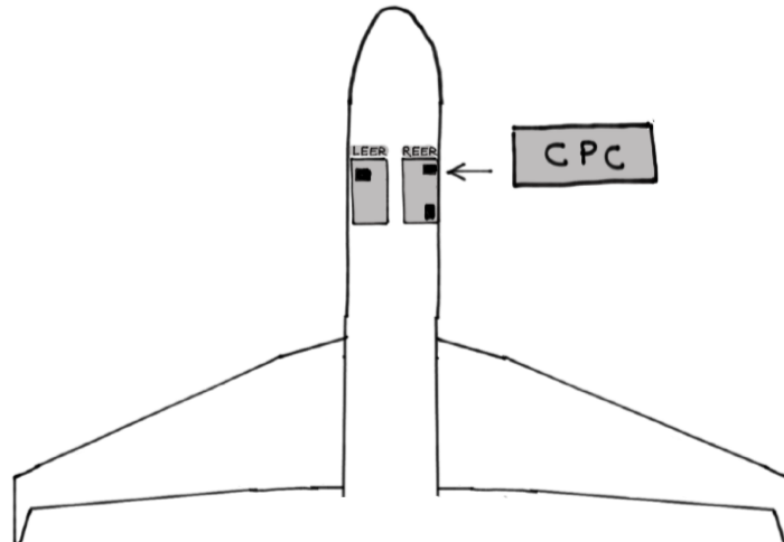


CABIN PRESSURE ACQUISITION MODULE (CPAM)


- SELF CONTAINED UNIT LOCATED BENEATH THE REER
- STANDALONE SOURCE OF CABIN PRESSURE INFORMATION
- CPC CHANNELS COMPARE CABIN PRESSURE DATA WITH EACH OTHER

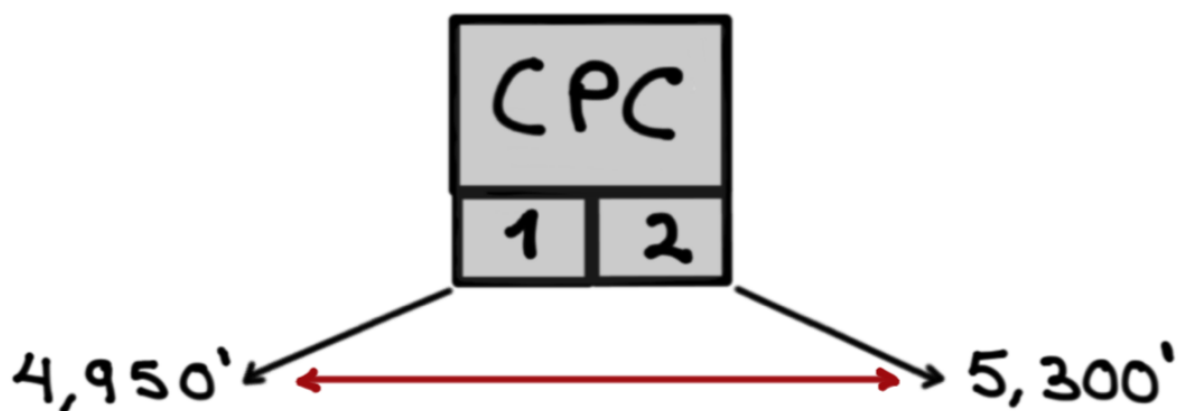

- If channels 1 and 2 differ by $\geq 310'$ They THEN COMPARE EACH OTHER AGAINST THE CPAM
- THE CPAM ACTS AS ARBITROR

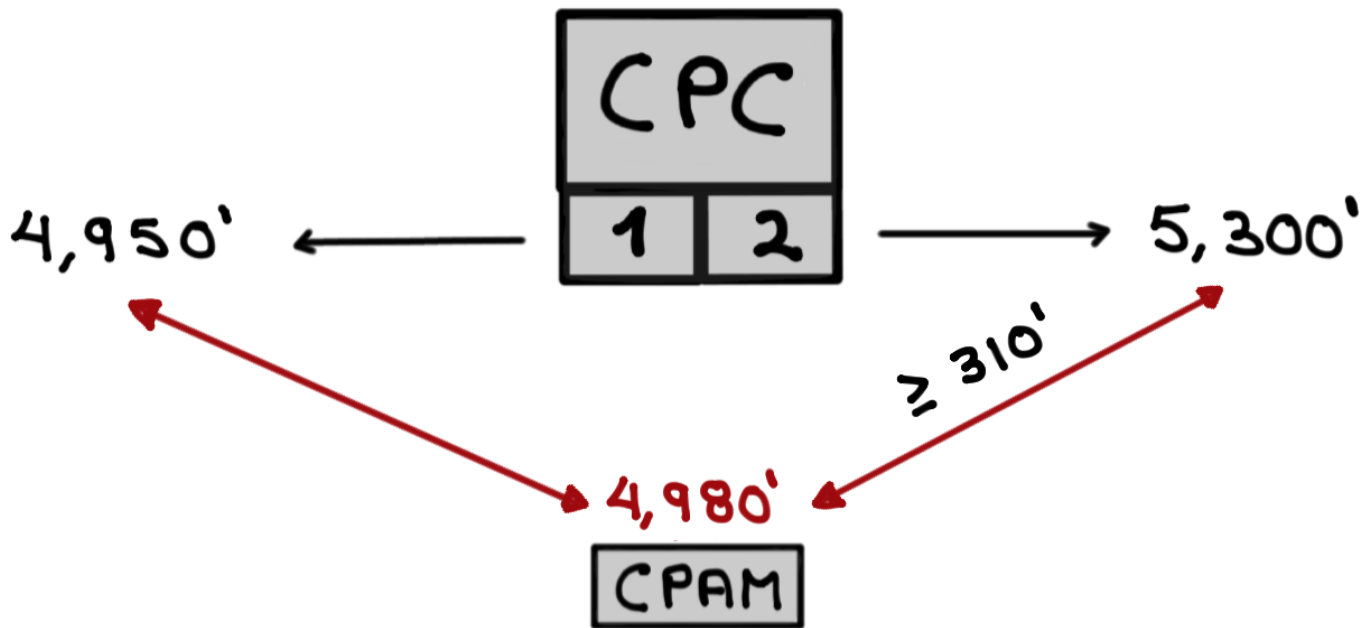

- Any channel THAT differs by $\geq 310'$ THAN THE CPAM CAUSES THAT channel To fail

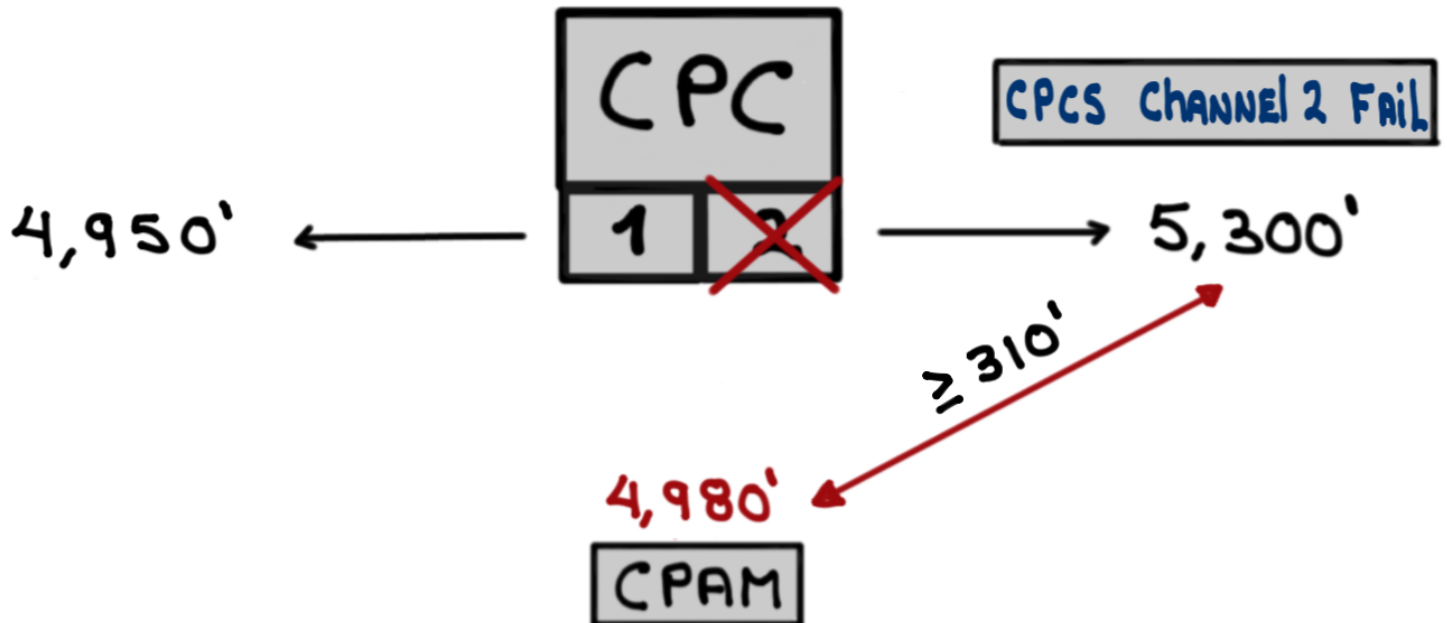

CPCS automatically SELECTS OPERATIVE CHANNEL

AUTO MODE

- NORMAL MODE OF OPERATION (FULLY AUTOMATIC)

- **CPC** CONTROLS PRESSURIZATION BASED ON PRESSURIZATION SCHEDULE

- **CPC** RECEIVES INPUT FROM MCDU DATA



- REQUIRES **AC** POWER

→
IDGs

→
APU GEN

→
HMG




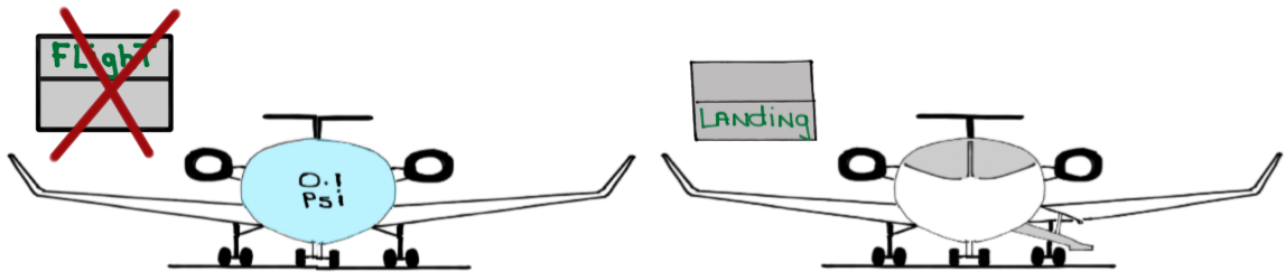
- PRESSURE PROFILE MODES ARE AUTOMATIC




- PRE-PRESSURIZATION TO 0.25 Psi (Approx. LFE - 500') INITIATED if DOOR CLOSED AND ANY OF THE following occur:

- 1) TAXI SPEED > 9 KNOTS, OR
- 2) THROTTLES ADVANCED $\geq 15^\circ$ THRUST LEVER ANGLE (TLA), OR
- 3) MANUALLY SELECTED BY THE CREW

CAUTION if RETURNING TO THE RAMP Deselect  in ORDER TO DEPRESSURIZE THE CABIN PRIOR TO OPENING THE MAIN DOOR




- CABIN RATE OF CLIMB AFTER TAKEOFF: 500 fpm
- DURING DESCENT AS THE AIRCRAFT CROSSES 1,000' BELOW CRUISE ALTITUDE PRESSURE PROFILE CHANGES FROM:

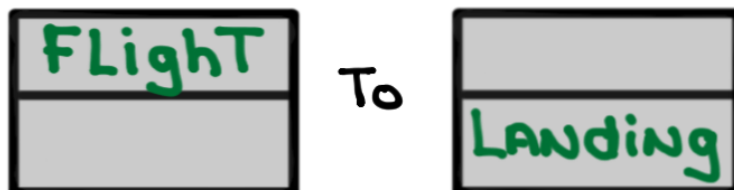


- **CPC** USES DATA FROM  TO CALCULATE DESCENT RATE

- If the aircraft levels off for THREE (3) MINUTES \geq FL 250
The PRESSURE Profile changes from:

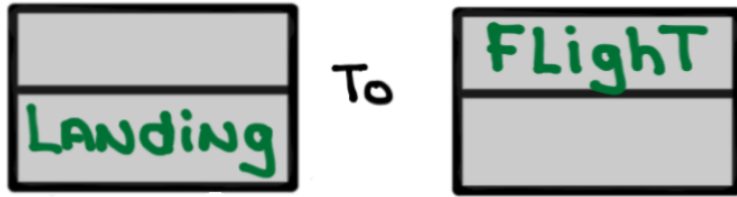

- PRESSURIZATION Profile

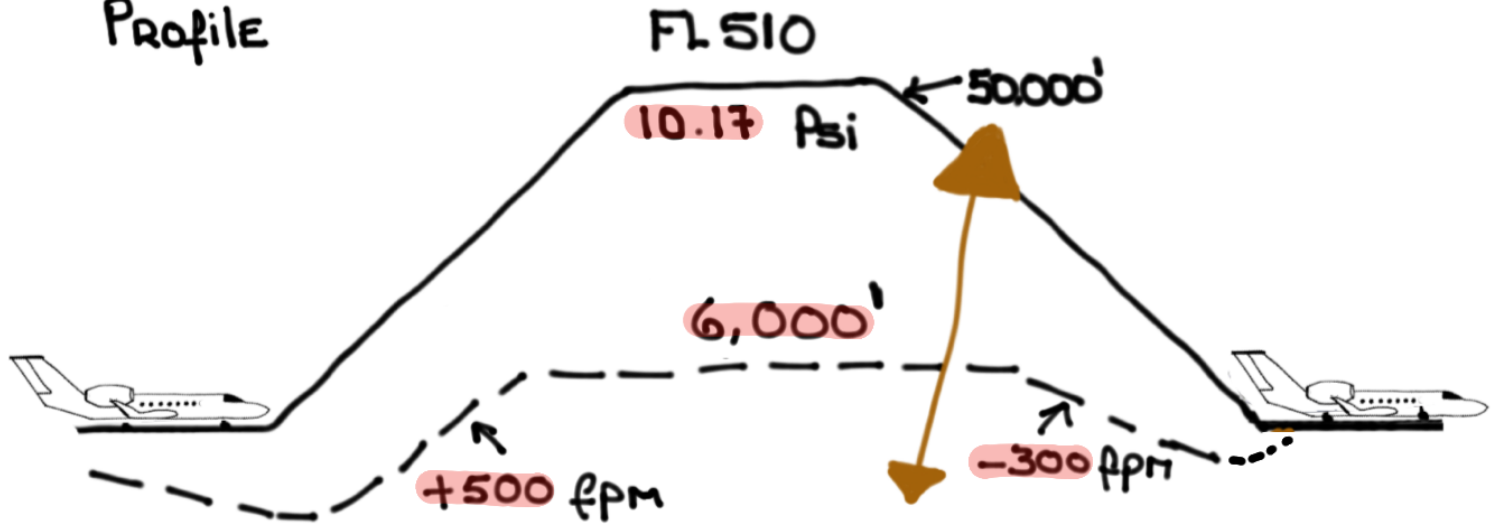

TAXI OUT
 > 9 KNOTS




LFE - 500'
Q 300 fpm
 ΔP 0.25 PSI

1,000' BELOW
CRUISE ALTITUDE



LFE - 250'
Q 150 - 300 fpm

WEIGHT-ON-WHEELS WOW - **G**:

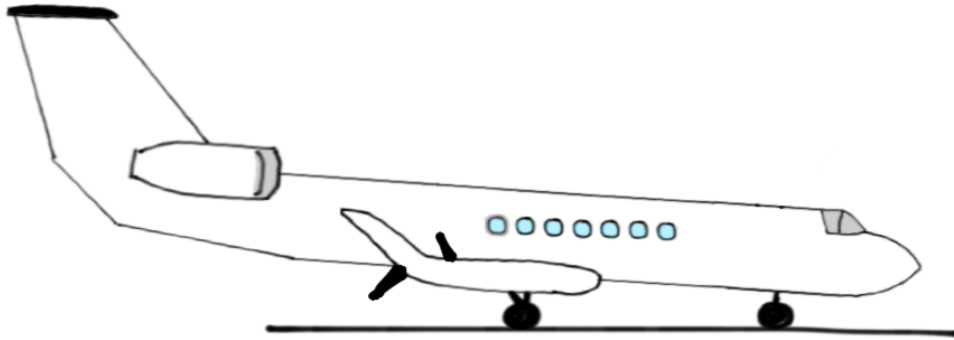

- ① CABIN climbs @ **500** fpm To LFE
- ② PRV OPENS SIXTY (**60**) SECONDS AFTER TOUCHDOWN

SEMI MODE

- ALTERNATE NORMAL MODE OF OPERATION (SEMI AUTOMATIC)

- SEMI MODE USED WHEN:

- FMS DATA NOT AVAILABLE OR IS INVALID

- DIRECTED BY THE CHECKLIST


- CREW DISCRETION $\left\{ \begin{array}{l} \text{QFE OPERATIONS} \\ \text{CREW WANTS MORE CONTROL} \\ \text{OVER THE SYSTEM} \end{array} \right.$

- CREW ENTERS DATA VIA THE CABIN PRESSURE CONTROL PANEL (CPCP)

- SAME **AC** AS AUTO MODE





- PRESSURE PROFILE MODES ARE AUTOMATIC

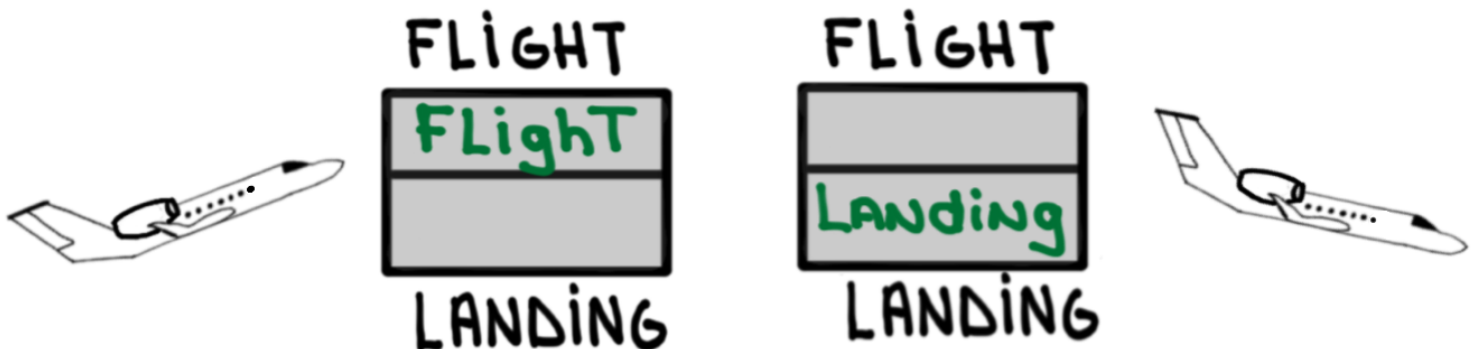


MANUAL MODE

- If CPC channels are both inoperative the crew can still control the pressurization manually

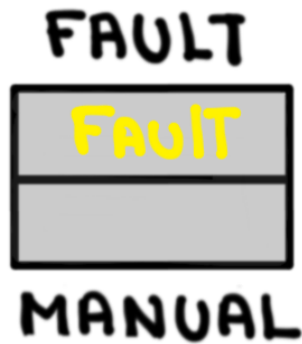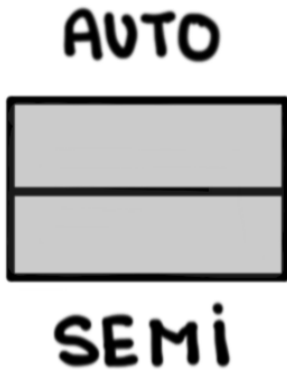

CPCS FAIL - SELECT MANUAL

==

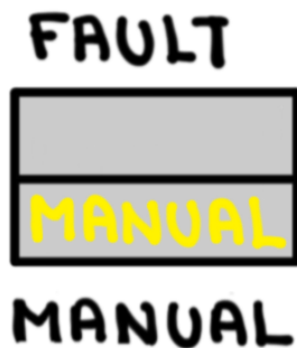

Cabin Pressure Manual

CREW SELECTS MANUAL
AND CONTROLS TROY

- CREW MANUALLY CONTROLS THE OUTFLOW VALVE (TROV) IN ORDER TO CLIMB, MAINTAIN, AND DESCEND THE CABIN PRESSURE ALTITUDE


- CREW USES THE MAN HOLD KNOB



- REQUIRES



POWER

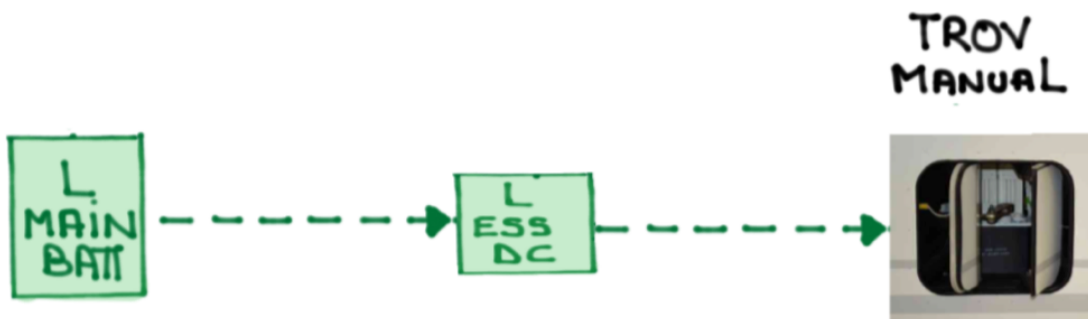

- CABIN PRESSURE ACQUISITION MODULE CPAM PROVIDES THE FOLLOWING DATA:

- CABIN ALTITUDE
- CABIN RATE
- CABIN DIFFERENTIAL

THRUST RECOVERY OUTFLOW VALVE (TROV)

TROV



- LOCATED ON THE RIGHT SIDE OF THE FUSELAGE
- CONTROLLED BY THE **CPC** IN **AUTO/SEMI**
- CONTROLLED BY THE CREW IN **MANUAL**
- SHUTTER-TYPE DOOR DESIGN THAT MINIMIZES DRAG
- THREE (3) ELECTRICAL ACTUATORS (MOTORS)
Two (2) AC AND ONE (1) DC

1

L GEN	R GEN
ON	ON

TROV MOTORS
SOURCES of POWER



2

L GEN	R GEN	OR	L GEN	R GEN
ON	OFF		OFF	ON



3

APU GEN
ON



4

MASTER	LESS	R ESS
ON	ON	ON

HMG Switch ON




5

MAIN BATTERIES

ON	ON
LEFT	Right

1

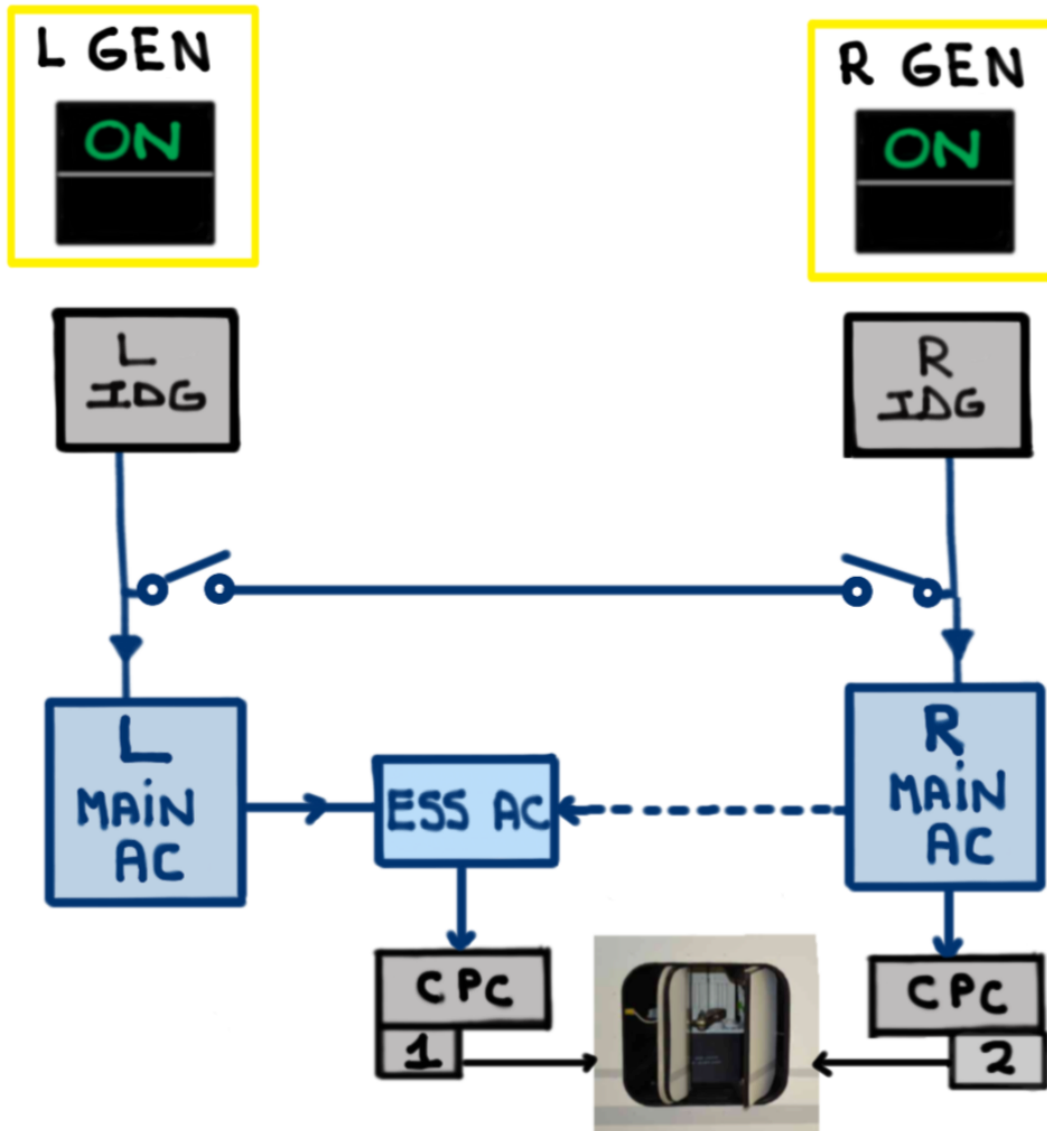

2

AUTO

OR

SEMI


R AC POWER FAIL

R AC RESET

L GEN
ON

R GEN
OFF

L
IDG

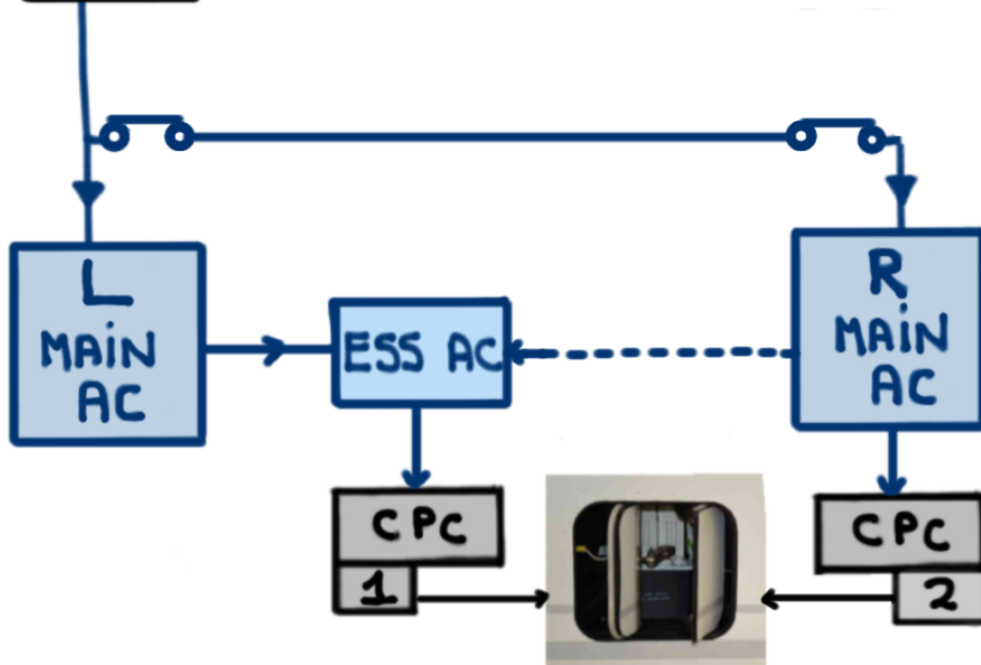

2

AUTO

OR

SEMI

L AC POWER FAIL


L AC RESET

L GEN

OFF

R GEN

ON

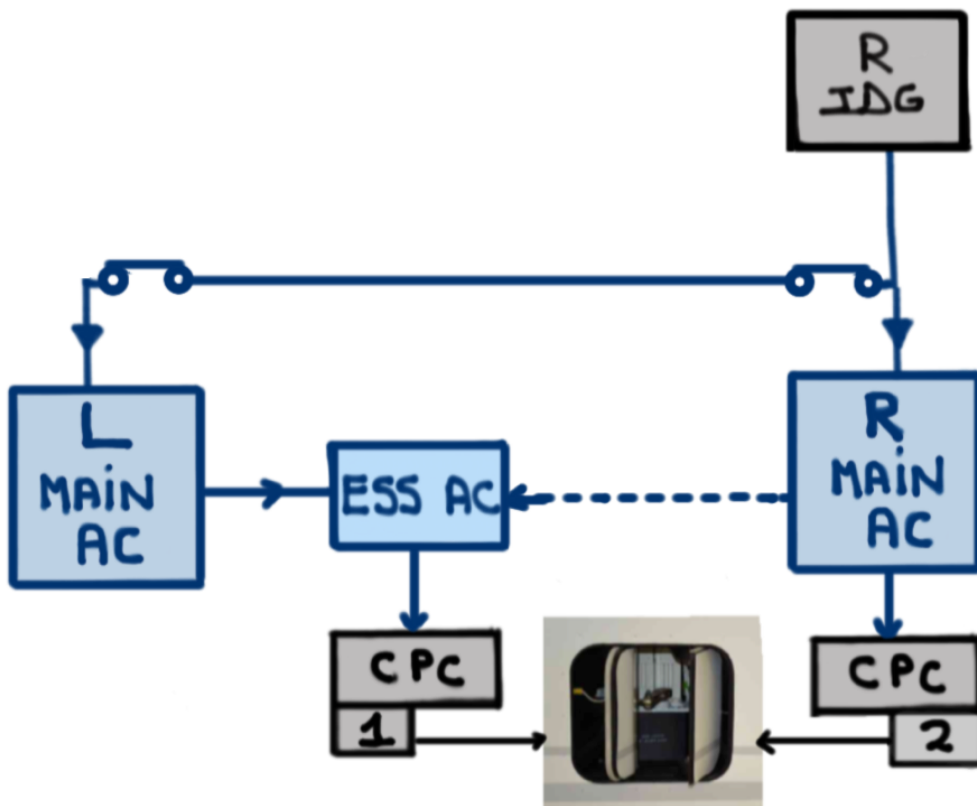


3

AUTO

OR

SEMI

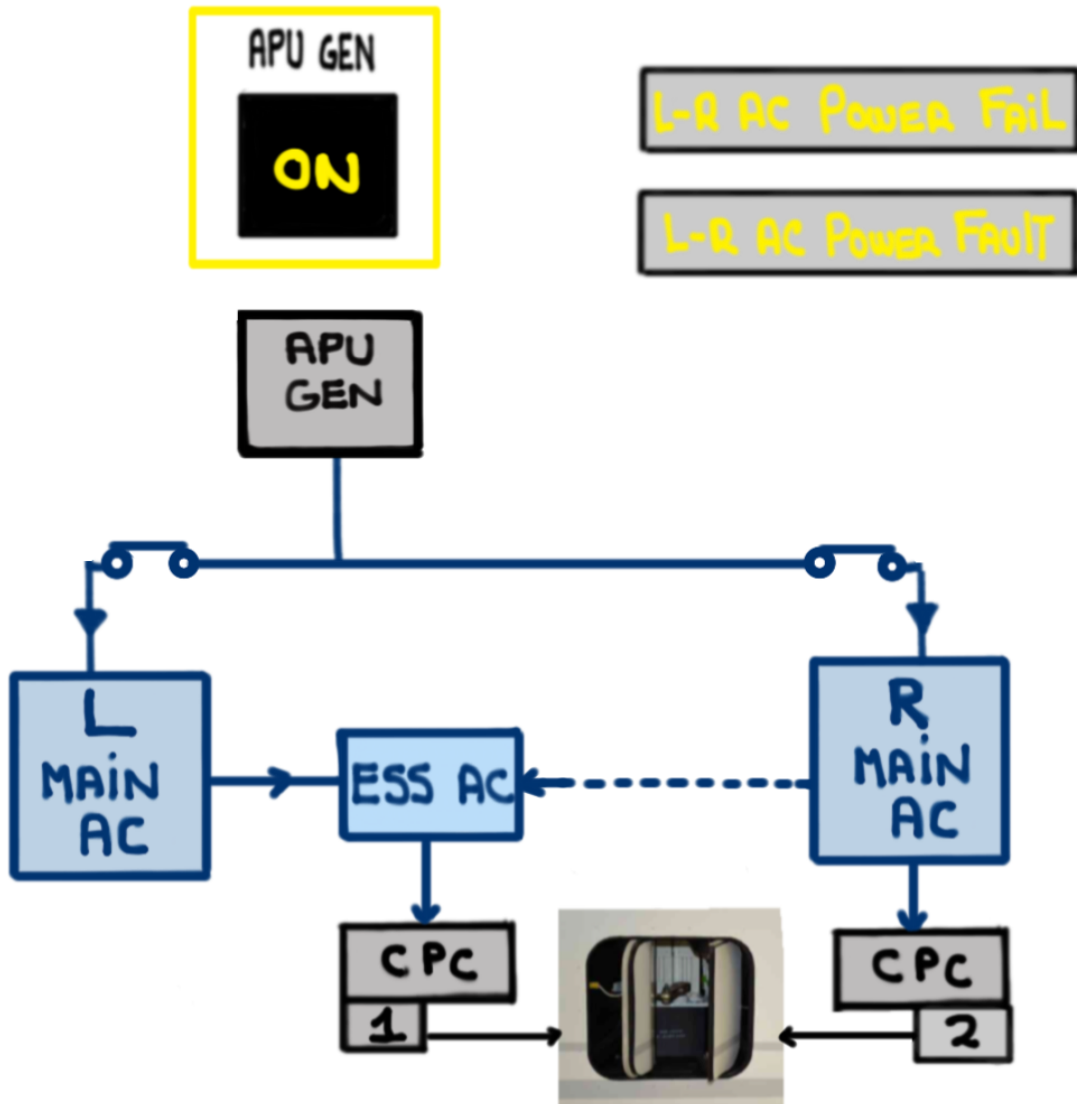

4

AUTO

OR


SEMI

L-R AC POWER FAIL

L-R AC POWER FAULT

APU POWER FAIL

HMG Switch ON

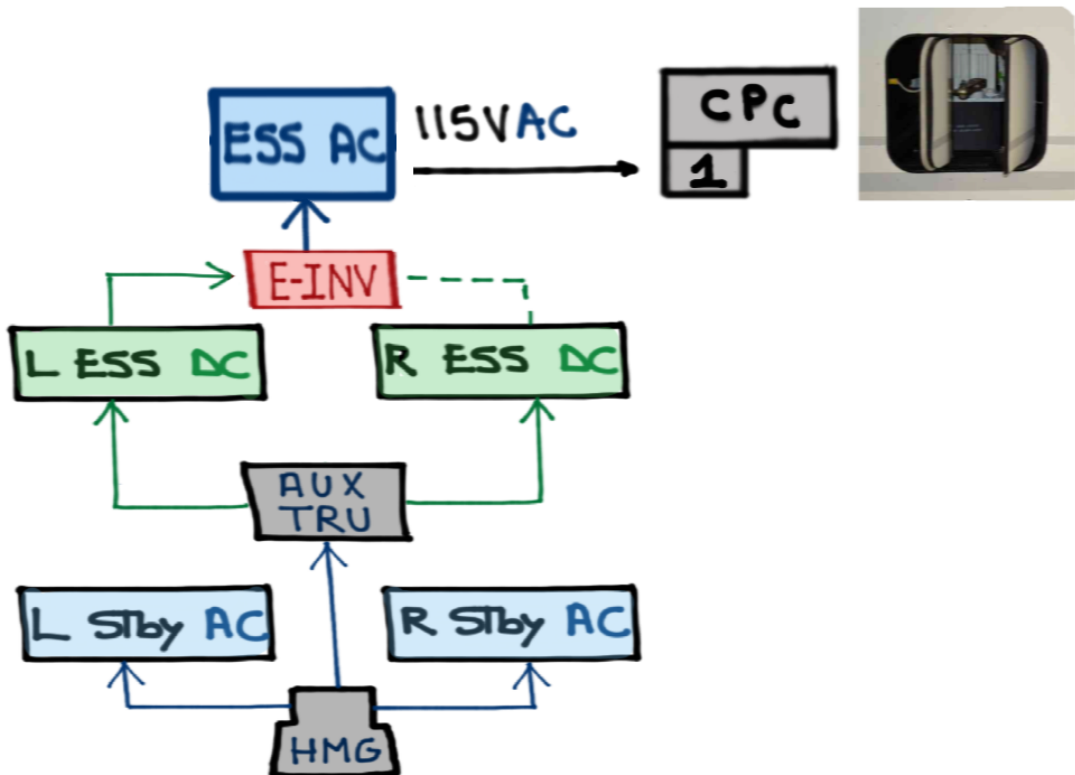

5

AUTO

OR

SEMI

MAIN BATTERIES

ON

ON

LEFT

Right

L-R AC POWER FAIL

L-R AC POWER FAULT

APU POWER FAIL




~~CPC~~
~~1~~ ~~2~~

FAULT


MANUAL

MANUAL


Cabin Pressure Manual

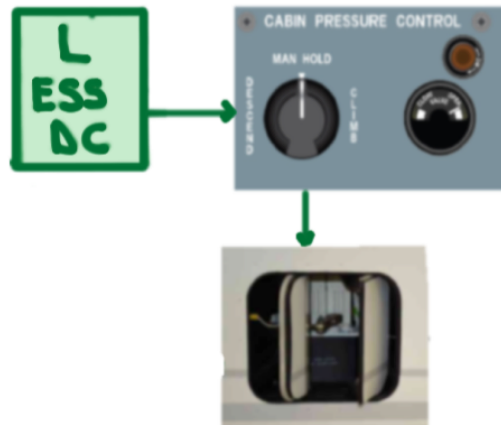


ROTOR BURST/PRESSURIZATION

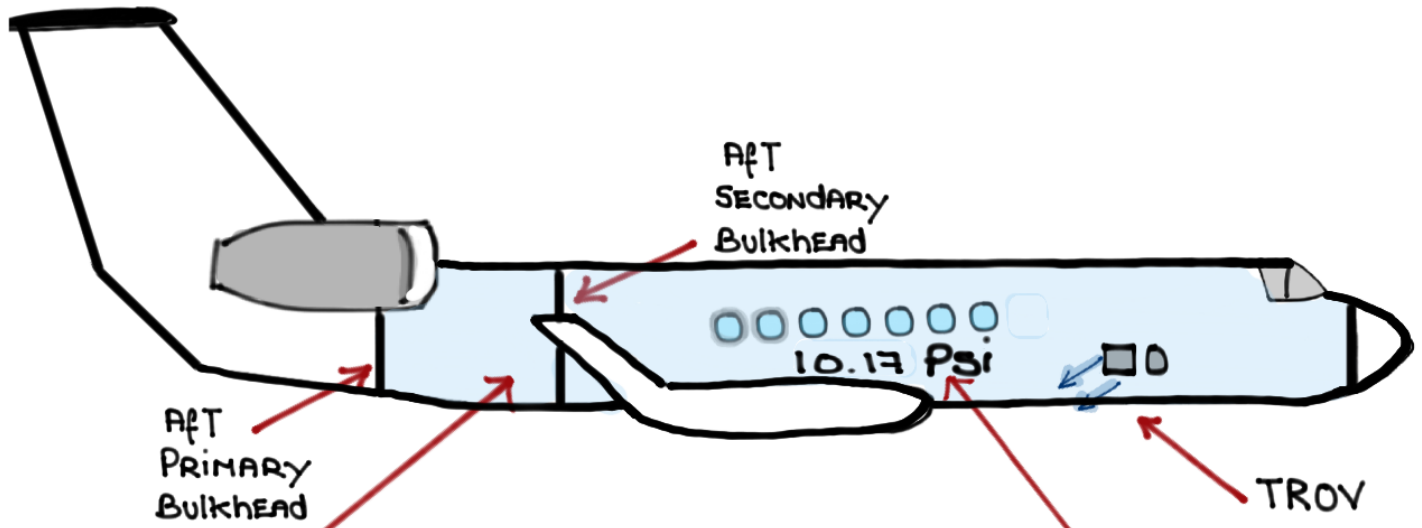

PRESSURIZED
BAGGAGE
COMPARTMENT

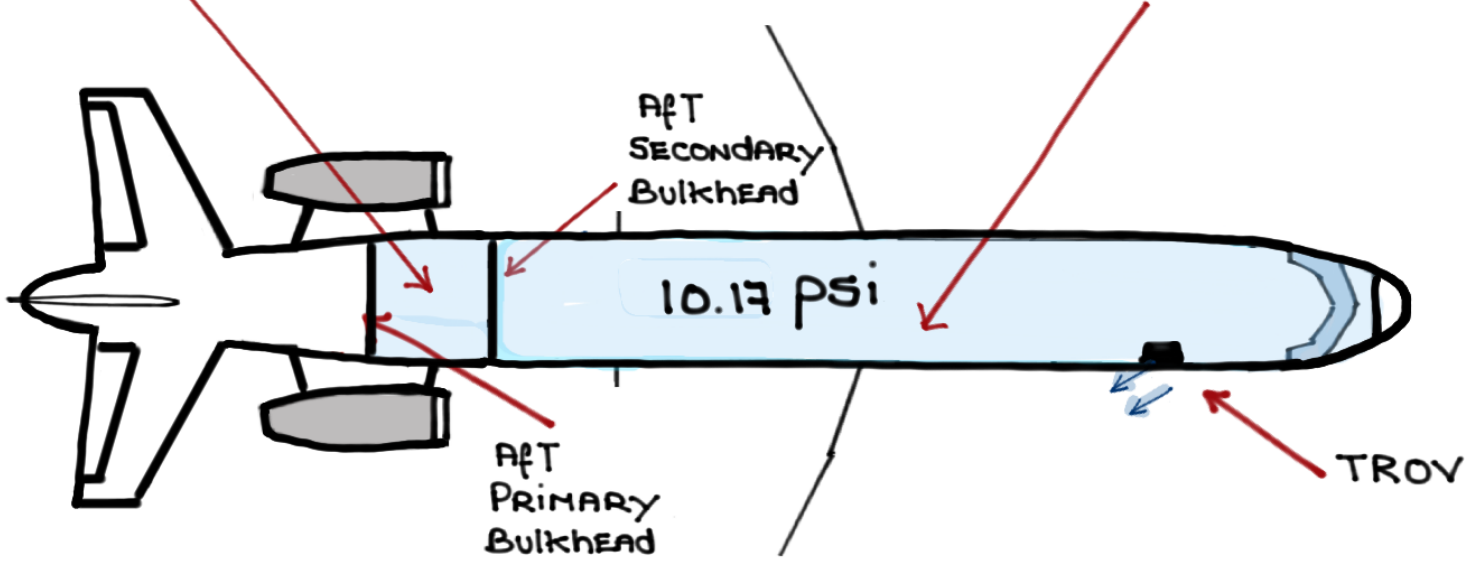

The physical location of the TROV AS WELL AS THE AVAILABILITY OF THE SECONDARY PRESSURE BULKHEAD ENSURES THAT THE CABIN PRESSURIZATION IS NOT AFFECTED

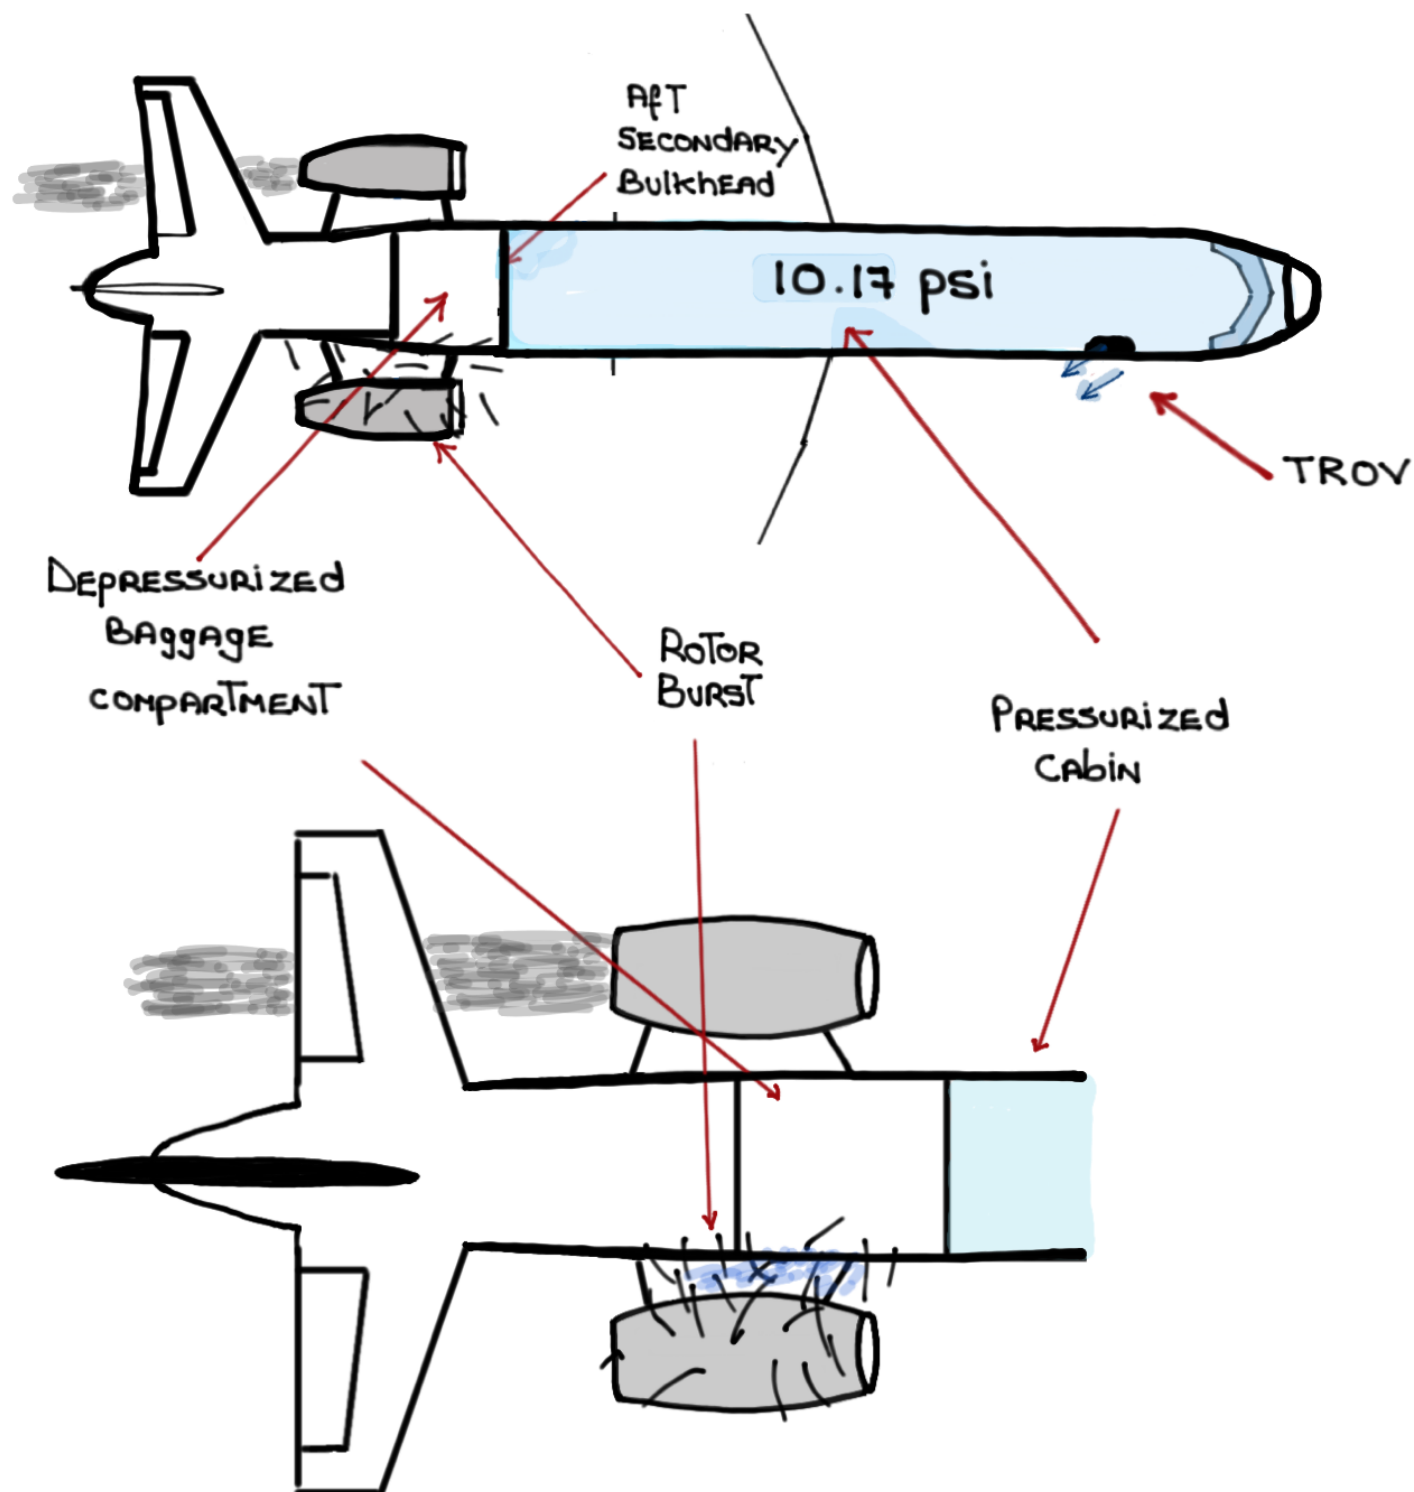

PRESSURE RELIEF VALVE (PRV)



- The PRV is located just in front of the TROV
- The purpose of the PRV is to protect the aircraft from damage due to excessive POSITIVE OR NEGATIVE PRESSURE


① POSITIVE DIFFERENTIAL PRESSURE RELIEF:

Two (2) METERING SECTIONS

1ST CHAMBER OPENS AT:

2ND CHAMBER OPENS AT:

Cabin Differential - 10.28

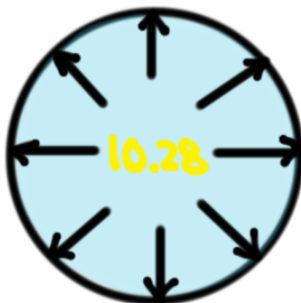


PSI

Cabin Differential - 10.48



② Negative Differential Pressure Relief:

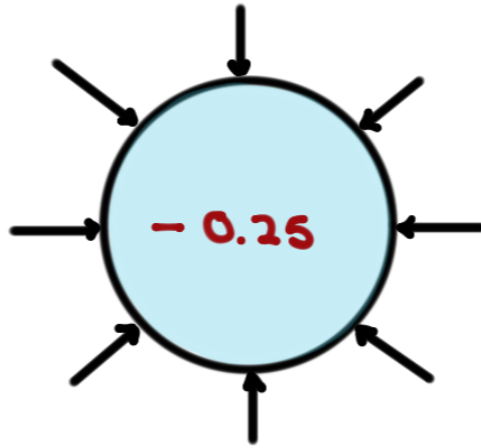

NO CAS MESSAGE


③ Ground Pressurization Limiting:

PRV opens sixty (60) seconds after touchdown

- Independently senses cabin pressure using aircraft static ports located on the right side of the fuselage

STATIC PORTS

- LOCATED ON THE RIGHT SIDE OF THE FUSELAGE
- Two (2) of THESE STATIC PORTS ARE USED BY THE PRV TO SENSE EXTERIOR PRESSURE
- THE THIRD STATIC PORT IS USED BY THE CPAM

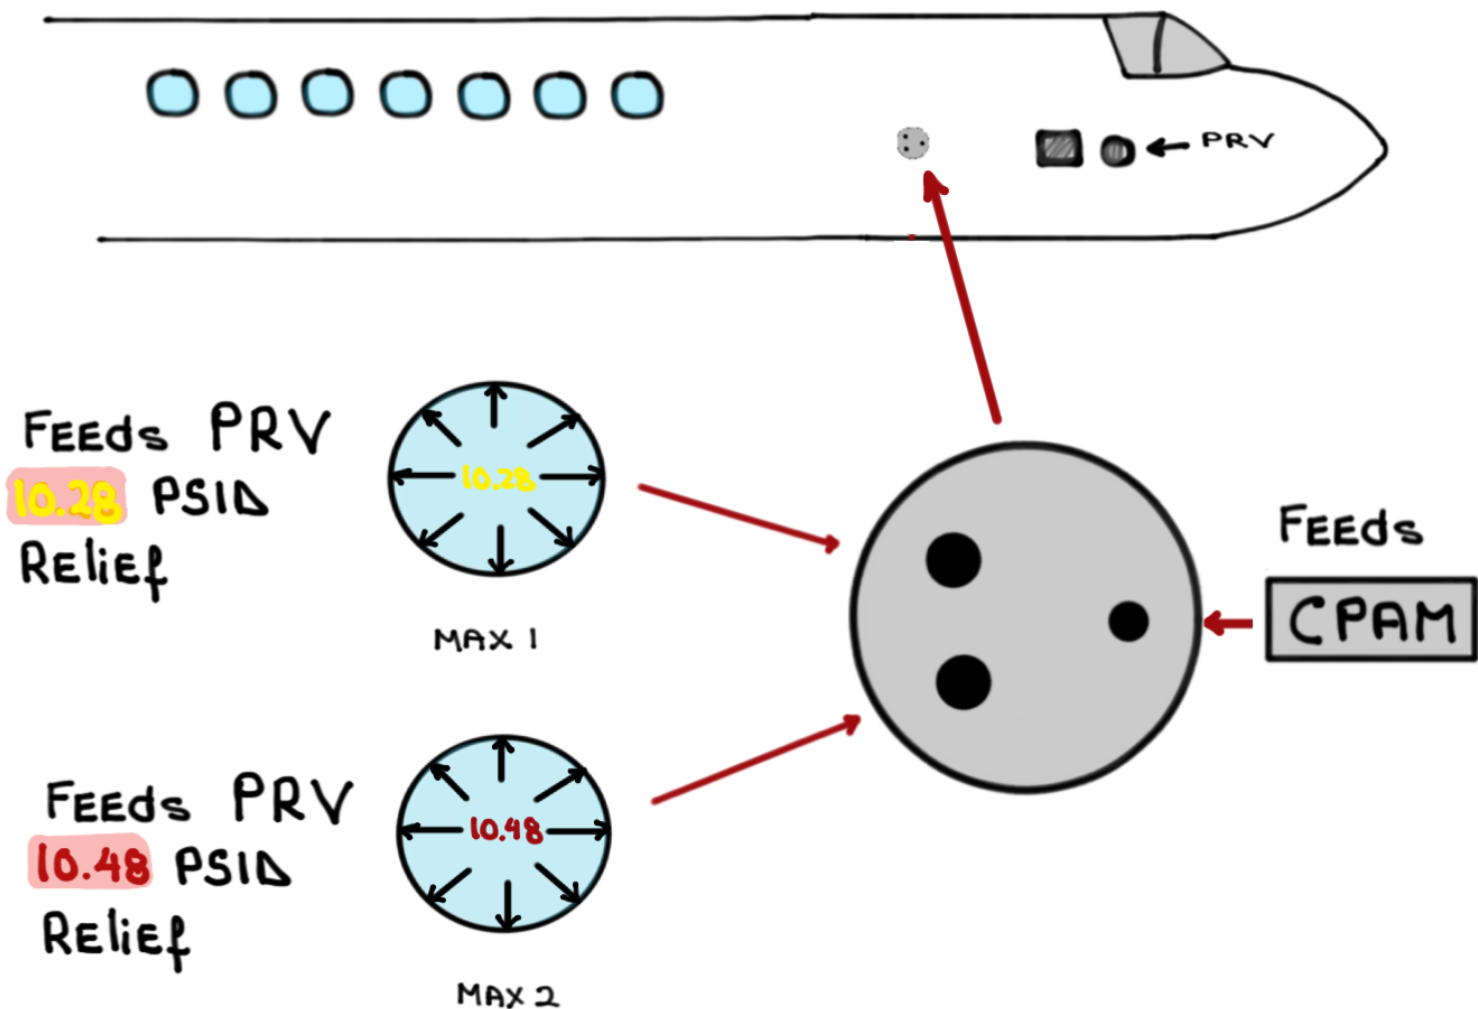

EMERGENCY DESCENT MODE (EDM)

Autopilot ON

Aircraft ALTITUDE \geq FL400


Cabin Pressure Low CAS MESSAGE

- ① AUTOTROTTLES engage if desengaged
 - TROTTLER RETARD to idle
 - FMA POWER display on PFD \rightarrow FLCH
- ② GP LATERAL Mode - deselected
 - FMA LATERAL display on PFD \rightarrow EDM
 - COMMAND 90° LEFT TURN
- ③ GP VERTICAL Mode - FLCH
 - FMA VERTICAL display on PFD \rightarrow IAS with ASEL
- ④ GP SPEED mode - MAN
 - VMO (340 knots) displays on SPEED window
- ⑤ ALTITUDE - 15,000' in PRESELECT window

- FLIGHT MODE ANNUNCIATOR (FMA)




- GUIDANCE PANEL (GP)

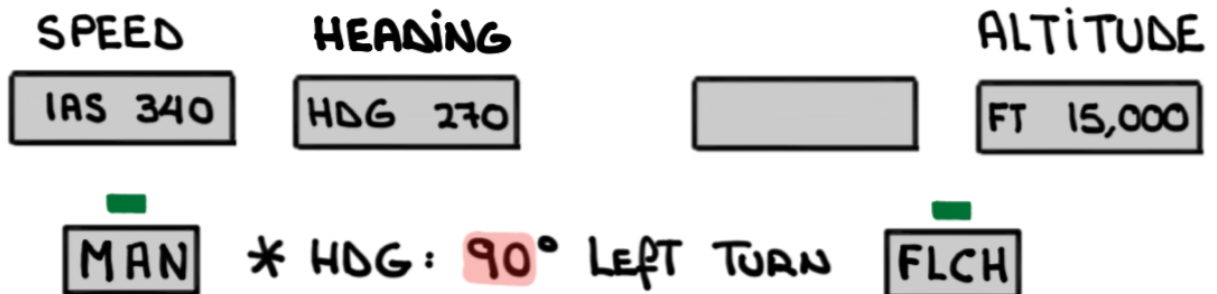

- LEVEL OFF

- FMA VERTICAL display on PFD → ASEL → ALT
- FMA SPEED display on PFD → 340 → 250

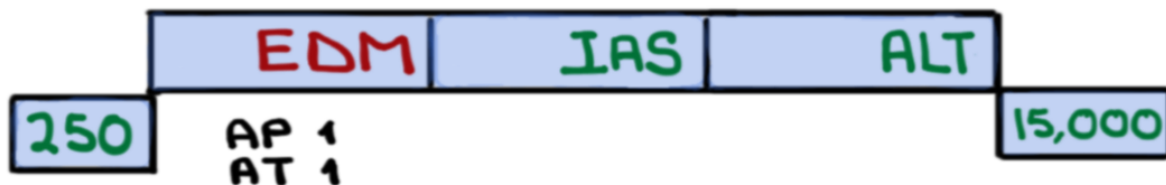

- CANCELING EDM:

- AP DISCONNECT button, OR
- Deselect AP ON GP

CABIN PRESSURE LOW TRIP POINTS

<u>MODE</u>	<u>LANDING FIELD ELEVATION</u>	<u>CABIN ALTITUDE</u>
<p>FAULT</p> <div style="border: 1px solid black; padding: 2px;"> <div style="background-color: #cccccc; height: 15px; width: 100%;"></div> <div style="background-color: #ffff00; height: 15px; width: 100%;">MANUAL</div> </div> <p>MANUAL</p>	N/A	<div style="border: 1px solid black; padding: 2px; color: red; text-align: center;">CABIN PRESSURE LOW</div> <p>8,000'</p>
<p>AUTO</p> <div style="border: 1px solid black; padding: 2px;"> <div style="background-color: #cccccc; height: 15px; width: 100%;"></div> <div style="background-color: #008000; color: white; height: 15px; width: 100%;">AUTO</div> <div style="background-color: #cccccc; height: 15px; width: 100%;"></div> <div style="background-color: #008000; color: white; height: 15px; width: 100%;">SEMI</div> </div> <p>SEMI</p>	<p>> 14,000'</p> <p>9,500' - 14,000'</p> <p>7,500' - 9,500'</p> <p>SEA LEVEL - 7,500'</p>	<div style="border: 1px solid black; padding: 2px; color: red; text-align: center;">CABIN PRESSURE LOW</div> <p>≥ 15,500'</p> <p>≥ 14,500'</p> <p>≥ 10,000'</p> <p>≥ 8,000'</p>

Oxygen Requirements / Operations

Above 41,000' ONE pilot MUST BE ON oxygen - FAR 91

CREW AND PASSENGER MASKS NOT APPROVED FOR USE ABOVE 40,000' CABIN ALTITUDE

Above 35,000' ONE pilot MUST BE ON oxygen if THE OTHER pilot LEAVES THE cockpit - FAR 91

PASSENGER MASKS will NOT provide sufficient oxygen ABOVE 34,000'

Above FL250 CREW MASKS MUST BE IN THE quick donning position which allows donning within FIVE (5) SECONDS

AUTOMATIC deployment of PASSENGER oxygen MASKS AT 14,750' \pm 250' (15,750' \pm 250' with ALT SELECT)





REFER TO AFM 01-35-10 TO DETERMINE REQUIRED oxygen QUANTITY FOR DEPARTURE

REMINDER: these system notes are intended for study purposes only. Always refer to official Gulfstream manuals and other approved references when operating your aircraft.

NOTE: these system notes are updated from time to time and what is posted on Code450.com will always be the most recent version.

Questions, comments or errors...please do send me an email:
ivan@code7700.com

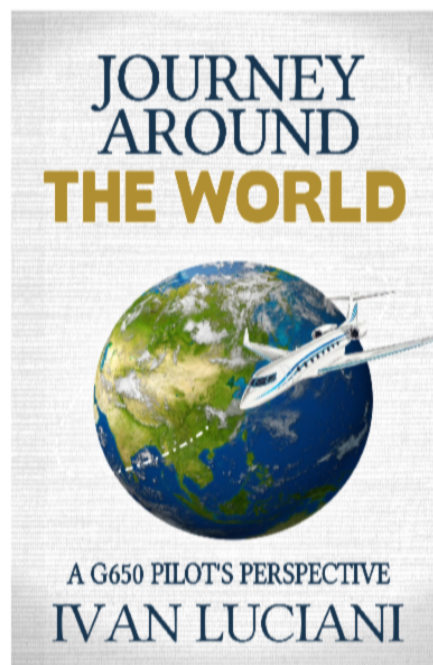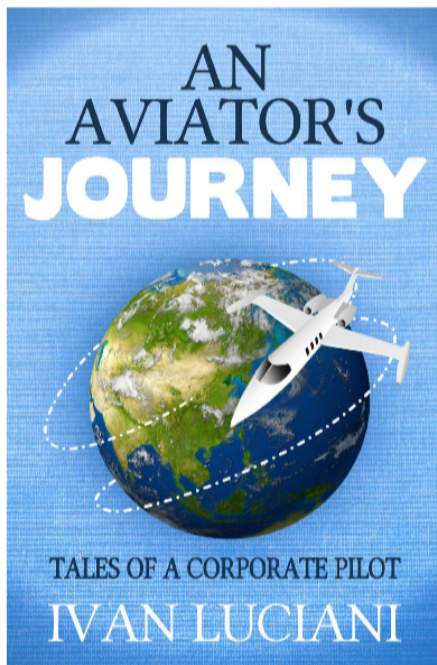

Thank you!